

**SYSMAC**

**C-series Rack PCs**

**Wired Remote I/O**


# **SYSTEM MANUAL**

**OMRON**

# Wired Remote I/O

## System Manual

*Revised April 2003*

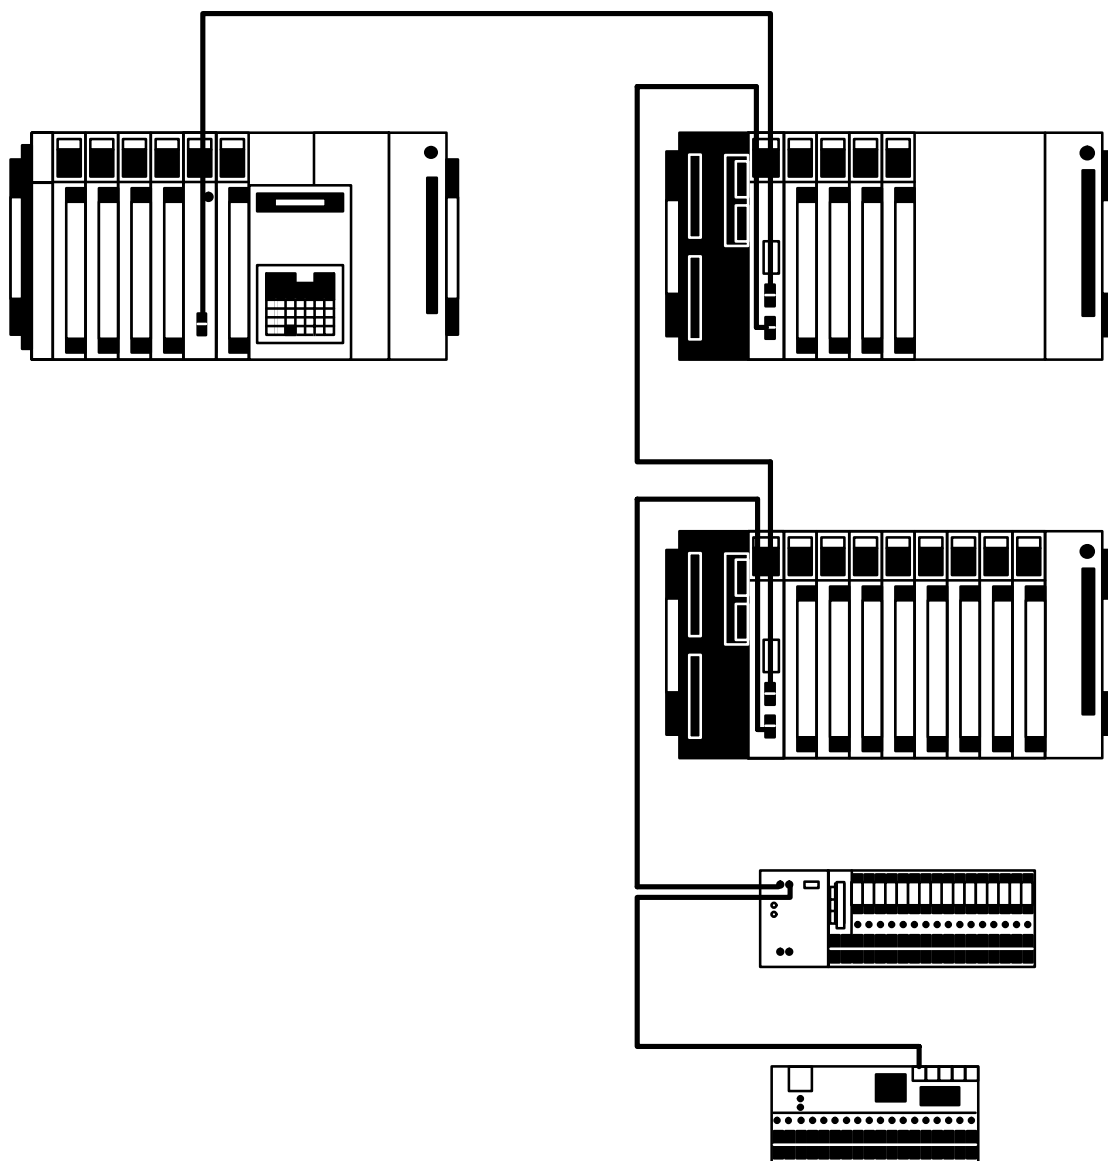



## Notice:

OMRON products are manufactured for use according to proper procedures by a qualified operator and only for the purposes described in this manual.

The following conventions are used to indicate and classify precautions in this manual. Always heed the information provided with them. Failure to heed precautions can result in injury to people or damage to property.

 **DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **Caution** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.

## OMRON Product References

All OMRON products are capitalized in this manual. The word “Unit” is also capitalized when it refers to an OMRON product, regardless of whether or not it appears in the proper name of the product.

The abbreviation “Ch,” which appears in some displays and on some OMRON products, often means “word” and is abbreviated “Wd” in documentation in this sense.

The abbreviation “PC” means Programmable Controller and is not used as an abbreviation for anything else.

## Visual Aids

The following headings appear in the left column of the manual to help you locate different types of information.

**Note** Indicates information of particular interest for efficient and convenient operation of the product.

**1, 2, 3...** 1. Indicates lists of one sort or another, such as procedures, checklists, etc.

## © OMRON, 1989

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.



# TABLE OF CONTENTS

|                                                  |           |
|--------------------------------------------------|-----------|
| <b>PRECAUTIONS</b> .....                         | <b>xi</b> |
| 1 Intended Audience .....                        | xii       |
| 2 General Precautions .....                      | xii       |
| 3 Safety Precautions .....                       | xii       |
| 4 Operating Environment Precautions .....        | xiii      |
| 5 Application Precautions .....                  | xiii      |
| 6 EC Directives .....                            | xv        |
| <br><b>SECTION 1</b>                             |           |
| <b>Introduction</b> .....                        | <b>1</b>  |
| 1-1 Remote I/O Systems .....                     | 2         |
| 1-2 Wired Remote I/O Systems .....               | 4         |
| <br><b>SECTION 2</b>                             |           |
| <b>System Design</b> .....                       | <b>7</b>  |
| 2-1 Basic System .....                           | 8         |
| 2-2 C200H Systems .....                          | 14        |
| 2-3 Combined Systems .....                       | 16        |
| 2-4 Optical Connections in Wired Systems .....   | 17        |
| 2-5 Multilevel Systems .....                     | 18        |
| <br><b>SECTION 3</b>                             |           |
| <b>Data Exchange and Operations</b> .....        | <b>21</b> |
| 3-1 Block Diagrams .....                         | 22        |
| 3-2 Unit Numbers and I/O Word Allocation .....   | 25        |
| 3-3 Setting Procedure .....                      | 39        |
| 3-4 Delayed Activation of Slaves .....           | 41        |
| <br><b>SECTION 4</b>                             |           |
| <b>Unit Components and Switch Settings</b> ..... | <b>45</b> |
| 4-1 Masters and Slaves .....                     | 46        |
| 4-2 Remote Terminal .....                        | 53        |
| <br><b>SECTION 5</b>                             |           |
| <b>System Installation</b> .....                 | <b>55</b> |
| 5-1 Dimensions .....                             | 56        |
| 5-2 Differentiating Units .....                  | 60        |
| 5-3 I/O Block Connections .....                  | 61        |
| 5-4 Mounting and Wiring Precautions .....        | 62        |
| 5-5 Wiring .....                                 | 64        |
| <br><b>SECTION 6</b>                             |           |
| <b>I/O Response Times</b> .....                  | <b>69</b> |
| 6-1 Introduction .....                           | 70        |
| 6-2 C500 Systems .....                           | 70        |
| 6-3 C1000H and C2000H Systems .....              | 71        |
| 6-4 C200H Systems .....                          | 72        |

# TABLE OF CONTENTS

## SECTION 7

### **Error Processing . . . . . 75**

|                                                            |    |
|------------------------------------------------------------|----|
| 7-1 Self-Diagnosis . . . . .                               | 76 |
| 7-2 Error Codes and Monitoring . . . . .                   | 81 |
| 7-3 Locating Transmission Errors . . . . .                 | 91 |
| 7-4 CONTINUE and STOP Mode Operation . . . . .             | 92 |
| 7-5 Recovery in STOP Mode . . . . .                        | 95 |
| 7-6 I/O Table Creation Problems . . . . .                  | 95 |
| 7-7 Slave Unit Numbers with Multiple Terminators . . . . . | 95 |

## **Appendices**

|                                       |     |
|---------------------------------------|-----|
| A Standard Models . . . . .           | 101 |
| B Specifications . . . . .            | 103 |
| C When Using CS1-series PCs . . . . . | 107 |

### **Glossary . . . . . 111**

### **Index . . . . . 117**

### **Revision History . . . . . 121**

## About this Manual:

This manual describes the means and Units necessary to construct a Wired Remote I/O System consisting of at least one Remote I/O Master Unit and one or more Remote I/O Slave Units or Remote Terminals. (The term “Wired” refers to the links used to create the Remote I/O System, e.g., that between a Remote I/O Master Unit and a Remote I/O Slave Unit.) Remote I/O Systems reduce wiring requirements for remote control from a PC by performing distributed control actions through execution of a program in the memory of a single PC’s CPU. The 3G2A5-RM201 Remote I/O Master Unit can be used with any C-series Rack PC except the C200H PC. The C200H-RM201 Remote I/O Master Unit is used with a C200H PC. Remote I/O Slave Units, though generally used with the corresponding Remote I/O Master Unit, can be used in “combined” system configurations.

This manual has been prepared to explain how to incorporate Wired Remote I/O Systems into C120, C500, C200H, C1000H, and C2000H PC Systems. It provides the necessary information, such as system configuration, settings, and I/O word allocation, for connecting Remote I/O Master Units, Remote I/O Slave Units, and I/O Units.

Before attempting to set up and operate your Remote I/O System, familiarize yourself with all relevant parts of this manual. For more detailed descriptions of manual content, refer to the introductions for individual sections.

**Section 1** introduces Wired I/O Systems and describes their characteristics.

**Section 2** describes some of the many possible system configurations and the limitations of each type of system.

**Section 3** provides names and descriptions of basic functions, internal circuits, and methods for differentiating differentiating unit types. Settings required to operate the system and successfully communicate program actions are explained, and example system settings are provided.

**Section 4** provides details on Wired Remote I/O Systems, and the main Units used to build these Systems, included within these are mounting restrictions and wiring considerations of the systems. Parts of the Units, switch setting, and examples of switch settings are provided.

**Section 5** explains how to install Wired I/O Systems and includes information on dimensions, differences between Units, and wiring.

**Section 6** offers details on response time computations.

**Section 7** describes error indications and error processing. Both indicator lights and dedicated error-related flags are provided.

**Appendix A** provides a list of the basic specifications and complete model numbers of products used in Wired I/O Systems.

**Appendix B** provides technical specifications.

**Appendix C** provides information on using CS1-series PCs.



**WARNING** Failure to read and understand the information provided in this manual may result in personal injury or death, damage to the product, or product failure. Please read each section in its entirety and be sure you understand the information provided in the section and related sections before attempting any of the procedures or operations given.



# PRECAUTIONS

This section provides general precautions for using the Wired Remote I/O System and related devices.

**The information contained in this section is important for the safe and reliable application of the Wired Remote I/O System. You must read this section and understand the information contained before attempting to set up or operate the Wired Remote I/O System.**

|                                           |      |
|-------------------------------------------|------|
| 1 Intended Audience .....                 | xii  |
| 2 General Precautions .....               | xii  |
| 3 Safety Precautions .....                | xii  |
| 4 Operating Environment Precautions ..... | xiii |
| 5 Application Precautions .....           | xiii |
| 6 EC Directives .....                     | xv   |

## 1 Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of installing FA systems.
- Personnel in charge of designing FA systems.
- Personnel in charge of managing FA systems and facilities.

## 2 General Precautions

The user must operate the product according to the performance specifications described in the relevant manuals.

Before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems, machines, and equipment that may have a serious influence on lives and property if used improperly, consult your OMRON representative.

Make sure that the ratings and performance characteristics of the product are sufficient for the systems, machines, and equipment, and be sure to provide the systems, machines, and equipment with double safety mechanisms.

This manual provides information for programming and operating the System. Be sure to read this manual before attempting to use the System and keep this manual close at hand for reference during operation.

 **WARNING** It is extremely important that the Wired Remote I/O System be used for the specified purpose and under the specified conditions, especially in applications that can directly or indirectly affect human life. You must consult with your OMRON representative before applying the Wired Remote I/O System to the above-mentioned applications.

## 3 Safety Precautions

 **WARNING** Do not attempt to take any Unit apart while the power is being supplied. Doing so may result in electric shock.

 **WARNING** Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.

 **Caution** Tighten the screws on the terminal block of the AC Power Supply Unit to the torque specified in the operation manual. The loose screws may result in burning or malfunction.

 **Caution** Execute online edit only after confirming that no adverse effects will be caused by extending the cycle time. Otherwise, the input signals may not be readable.

 **WARNING** Do not attempt to disassemble, repair, or modify any Units. Any attempt to do so may result in malfunction, fire, or electric shock.

 **WARNING** Provide safety measures in external circuits (i.e., not in the Programmable Controller), including the following items, in order to ensure safety in the system if an abnormality occurs due to malfunction of the PC or another external factor affecting the PC operation. Not doing so may result in serious accidents.

- Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.
- The PC will turn OFF all outputs when its self-diagnosis function detects any error or when a severe failure alarm (FALS) instruction is executed. As a countermeasure for such errors, external safety measures must be provided to ensure safety in the system.
- The PC outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external safety measures must be provided to ensure safety in the system.

## 4 Operating Environment Precautions

 **Caution** Do not operate the control system in the following locations:

- Locations subject to direct sunlight.
- Locations subject to temperatures or humidity outside the range specified in the specifications.
- Locations subject to condensation as the result of severe changes in temperature.
- Locations subject to corrosive or flammable gases.
- Locations subject to dust (especially iron dust) or salts.
- Locations subject to exposure to water, oil, or chemicals.
- Locations subject to shock or vibration.

 **Caution** Take appropriate and sufficient countermeasures when installing systems in the following locations:

- Locations subject to static electricity or other forms of noise.
- Locations subject to strong electromagnetic fields.
- Locations subject to possible exposure to radioactivity.
- Locations close to power supplies.

 **Caution** The operating environment of the Wired Remote I/O System can have a large effect on the longevity and reliability of the system. Improper operating environments can lead to malfunction, failure, and other unforeseeable problems with the System. Be sure that the operating environment is within the specified conditions at installation and remains within the specified conditions during the life of the System.

## 5 Application Precautions

Observe the following precautions when using the Wired Remote I/O System.

 **WARNING** Always heed these precautions. Failure to abide by the following precautions could lead to serious or possibly fatal injury.

- Always ground the system to 100  $\Omega$  or less when installing the Units. Not connecting to a ground of 100  $\Omega$  or less may result in electric shock.
- Always turn OFF the power supply to the PC before attempting any of the following. Not turning OFF the power supply may result in malfunction or electric shock.
  - Mounting or dismounting I/O Units, CPU Units, Memory Units, or any other Units.

- Assembling the Units.
- Setting DIP switches or rotary switches.
- Connecting cables or wiring the system.
- Connecting or disconnecting the connectors.

**Caution**

Failure to abide by the following precautions could lead to faulty operation of the Wired Remote I/O System, or could damage the PC or PC Units. Always heed these precautions.

- Fail-safe measures must be taken by the customer to ensure safety in the event of incorrect, missing, or abnormal signals caused by broken signal lines, momentary power interruptions, or other causes.
- Always use the power supply voltages specified in this manual. An incorrect voltage may result in malfunction or burning.
- Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied. Be particularly careful in places where the power supply is unstable. An incorrect power supply may result in malfunction.
- Install external breakers and take other safety measures against short-circuiting in external wiring. Insufficient safety measures against short-circuiting may result in burning.
- Do not apply voltages to the Input Units in excess of the rated input voltage. Excess voltages may result in burning.
- Do not apply voltages or connect loads to the Output Units in excess of the maximum switching capacity. Excess voltage or loads may result in burning.
- Disconnect the functional ground terminal when performing withstand voltage tests. Not disconnecting the functional ground terminal may result in burning.
- Be sure that all the mounting screws, terminal screws, and cable connector screws are tightened to the torque specified in this manual. Incorrect tightening torque may result in malfunction.
- Leave the label attached to the Unit when wiring. Removing the label may result in malfunction if foreign matter enters the Unit.
- Remove the label after the completion of wiring to ensure proper heat dissipation. Leaving the label attached may result in malfunction.
- Double-check all wiring and switch settings before turning ON the power supply. Incorrect wiring may result in burning.
- Mount Units only after checking terminal blocks and connectors completely.
- Be sure that the terminal blocks, Memory Units, expansion cables, and other items with locking devices are properly locked into place. Improper locking may result in malfunction.
- Check the user program for proper execution before actually running it on the Unit. Not checking the program may result in an unexpected operation.
- Confirm that no adverse effect will occur in the system before attempting any of the following. Not doing so may result in an unexpected operation.
  - Changing the operating mode of the PC.
  - Force-setting/force-resetting any bit in memory.
  - Changing the present value of any word or any set value in memory.
- Resume operation only after transferring to the new CPU Unit the contents of the DM Area, HR Area, and other data required for resuming operation. Not doing so may result in an unexpected operation.
- Do not pull on the cables or bend the cables beyond their natural limit. Doing either of these may break the cables.
- Do not place objects on top of the cables or other wiring lines. Doing so may break the cables.

- Use crimp terminals for wiring. Do not connect bare stranded wires directly to terminals. Connection of bare stranded wires may result in burning.
- When replacing parts, be sure to confirm that the rating of a new part is correct. Not doing so may result in malfunction or burning.
- Before touching a Unit, be sure to first touch a grounded metallic object in order to discharge any static built-up. Not doing so may result in malfunction or damage.

## 6 EC Directives

Remote I/O products conform to EMS and low-voltage level directives as follows:

### **EMC Directives**

OMRON devices that comply with EC Directives also conform to the related EMC standards, so that they can more easily be built in to other devices or the overall machine. The actual products have been checked for conformity to EMC standards. Whether they conform to the standards in the system used by the customer, however, must be checked by the customer.

EMC-related performance of the OMRON devices that comply with EC Directives will vary depending on the configuration, wiring, and other conditions of the equipment or control panel on which the OMRON devices are installed. The customer must, therefore, perform the final check to confirm that devices and the overall machine conform to EMC standards.

### **Low-voltage Level Directives**

Always ensure that devices operating at voltages of 50 to 1,000 VAC and 75 to 1,500 VDC meet the necessary safety standard for the PC (EN61131-2).

DeviceNet products that comply with EC Directives must be installed as follows:

- 1, 2, 3... 1. Remote I/O Units are designed for installation inside control panels. All Remote I/O Units must be installed within control panels.
2. Use reinforced insulation or double insulation for the DC power supplies used for the communications power supply, internal circuit power supply, and the I/O power supplies.
3. Remote I/O products that comply with EC Directives also conform to the Common Emission Standard (EN50081-2). Radiated emission characteristics (10-m regulations) may vary depending on the configuration of the control panel used, other devices connected to the control panel, wiring, and other conditions. You must therefore confirm that the overall machine or equipment complies with EC Directives.
4. Remote I/O products that comply with EC Directives have configurations with less than 30 m of I/O wiring, and less than 10 m of power supply wiring.

# SECTION 1

## Introduction

This section introduces Wired I/O Systems and describes their characteristics.


|     |                                    |   |
|-----|------------------------------------|---|
| 1-1 | Remote I/O Systems . . . . .       | 2 |
| 1-2 | Wired Remote I/O Systems . . . . . | 4 |

## 1-1 Remote I/O Systems

Assembly lines are often extremely long, making it difficult if not impossible to wire all I/O devices directly from CPU Racks or Expansion I/O Racks. A Remote I/O System can be used to solve this problem. In a Remote I/O System, a Rack can be located farther from the CPU Rack than is possible with Expansion I/O Racks connected directly to the CPU Rack.

By locating a Rack farther from the CPU Rack, a Remote I/O System eliminates the time and mess in wiring (or changing wiring) to many devices that are separated from the CPU Rack. Although all I/O points must ultimately be wired individually, the question is one of distance: Do you want to wire dozens of terminals all the way across a factory complex or do you want to run a single cable for most of the distance and then wire individual terminals locally?

The following diagram illustrates how a simple Remote I/O System would be set up. Slave Racks, described below, are controlled by the CPU Unit through the Master. The dotted circles show the devices that would be controlled through the Units on each Rack.

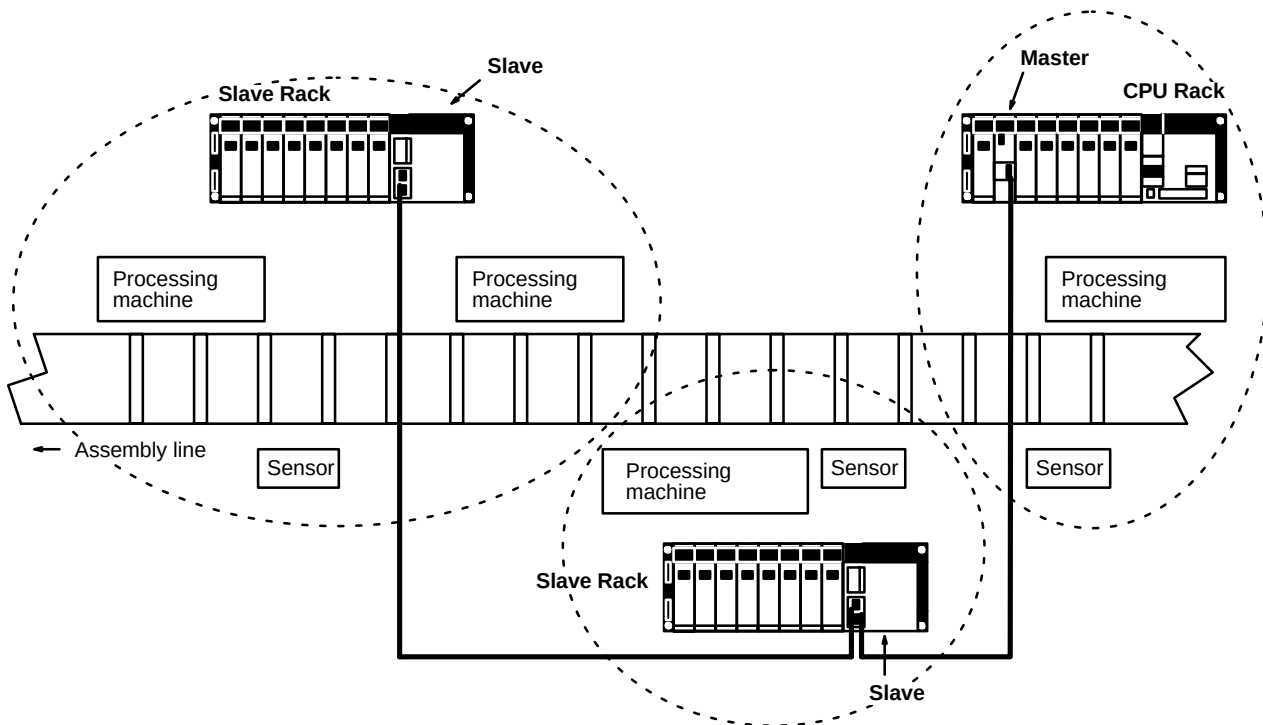


Wiring distance could also be reduced by placing an independent CPU Rack near every location that required control, but in doing so, each PC would have to be programmed independently and the activities of all the PC programs would need to be coordinated, a very difficult job. Here too, a Remote I/O System simplifies the task by allowing a single CPU Unit, and thus a single program, to integrate control of the entire process. A Remote I/O System thus has these two advantages: Racks can be located a greater distance from the CPU Rack and coordinating control actions is simplified because all control is exerted by one program.

A third advantage of Remote I/O Systems is reduced noise interference. This is the result of the single cable that replaces the otherwise numerous wires that would be required all the way from the CPU and Expansion I/O Racks to the I/O devices.

A Remote I/O System directly involves only one PC and the program in it and through it a large number of I/O points can be controlled a greater distance from the PC. This is achieved by mounting a **Remote I/O Master Unit** to the CPU Rack to control I/O points located possibly many kilometers away. Each Master serves as a 'switching point' for controlling all of the I/O points accessed through it. These I/O points are accessed through the Master, not controlled by it. All I/O control comes from the program in the CPU Unit.

More than one Master can be mounted to a single PC, with each Master forming the starting point of a **Remote I/O Subsystem**, i.e., a Remote I/O Subsystem includes one Master plus all of the **Remote I/O Units** controlled through it.

The Remote I/O Units that can be included in each Subsystem depend on the specifications of the Master. Masters are available either with optical or wire specifications. **Optical Remote I/O Systems** transfer data through **optical fiber cables** to enable the greatest transmission distance and the greatest resistance to electrical noise. **Wired Remote I/O Systems** use wire cables which don't offer as great a distance as Optical Subsystems, but do greatly reduce the burden of wiring remote I/O and afford greater resistance to noise than independently wired I/O points. Both types of Master can be mounted to the same PC to meet specific distance and noise-resistance requirements.

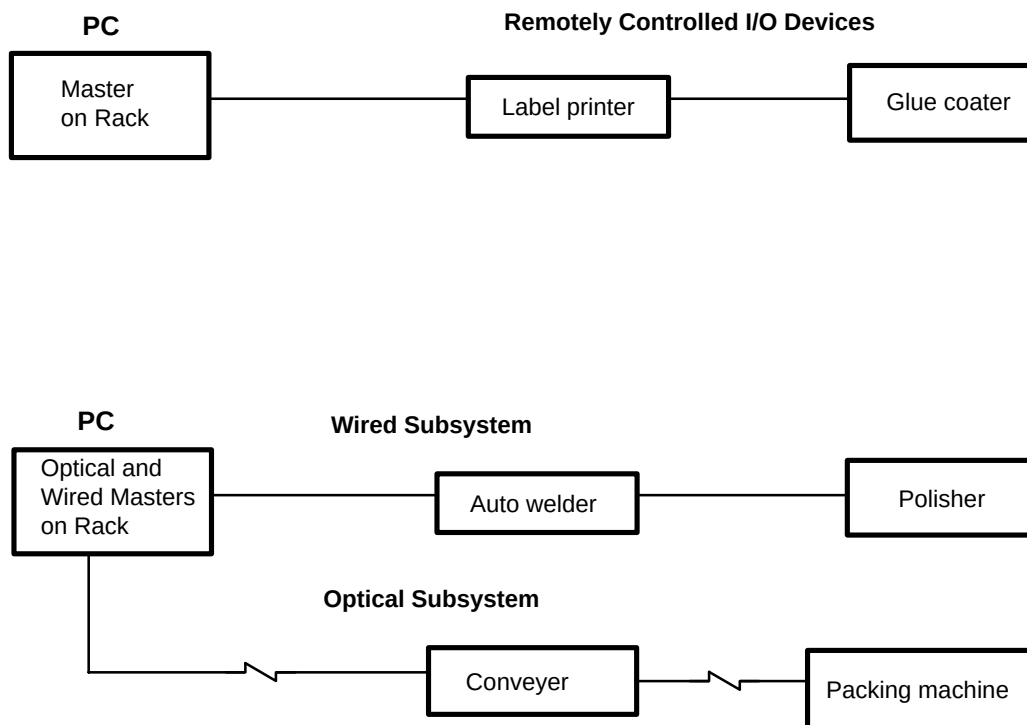

All Remote I/O Systems consist of at least one Remote I/O Master Unit connected in series to one or more Units accessed through it. One of these Units that is common to most Remote I/O Systems is a Remote I/O Slave Unit.




A Master is mounted to the CPU Rack or an Expansion I/O Rack; a Slave is mounted to a Backplane to form what is called a **Slave Rack**. To a Slave Rack is mounted the same other Units as those mounted to the CPU or Expansion I/O Rack, with only a few exceptions (e.g., Link Units other than Slaves cannot be mounted to Slave Racks). The advantage of a Slave Rack is that it can be located a considerable distance from the CPU Rack with the only connection required being a cable running from the Master to the Slave. The actual distance a Slave Rack can be removed from the Master, as well as the other Units used to configure a Remote I/O System, depends on the type of Remote I/O System being used. Collectively, all of the Units connected in a Remote I/O System are referred to as **Remote I/O Units**.

This manual describes Wired Remote I/O Systems. Optical Remote I/O Units are described in the *Optical Remote I/O System Manual (W136)*.

## 1-2 Wired Remote I/O Systems

In a Wired Remote I/O System, the Master is connected to other Remote I/O Units through wire cable. These Remote I/O Units include Wired Masters, Wired Slaves, and **Remote Terminals**. Link Adapters can also be included in the System to enable the use of **optical cable links**.

A basic Wired Remote I/O System is shown below.

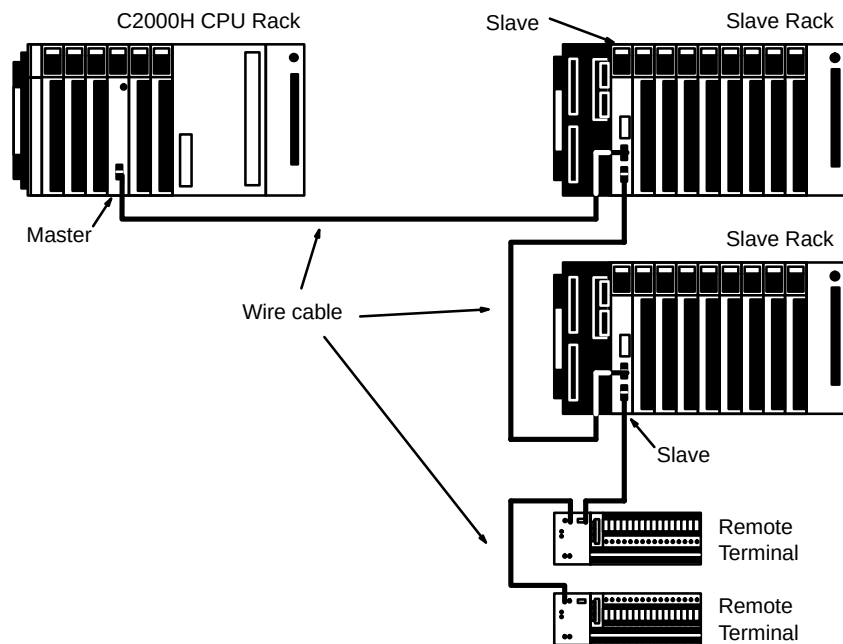


### Remote Terminals

A Remote Terminal can be used when there is only a limited number of I/O points required in a single location. Each Remote Terminal provides up to 16 input or output points.

There are two basic types of Remote Terminal. A G72C Remote Terminal is a 'stand-alone' Unit that occupies one location in the Remote I/O System. It provides 16 fixed transistor inputs or outputs and can be used for any application suited to these.

The other basic type of Remote Terminal consists of two parts: a Remote Interface and an I/O Block. The Remote Interface functions to transmit input or output signals between the Remote I/O System and the I/O Block. I/O Blocks enable easy removal and replacement of individual relays, including relays with a large **switching capacity**, making them ideal for controlling large motors, heavy equipment, etc. An I/O Block is available for either 16 input points or 16 output points.

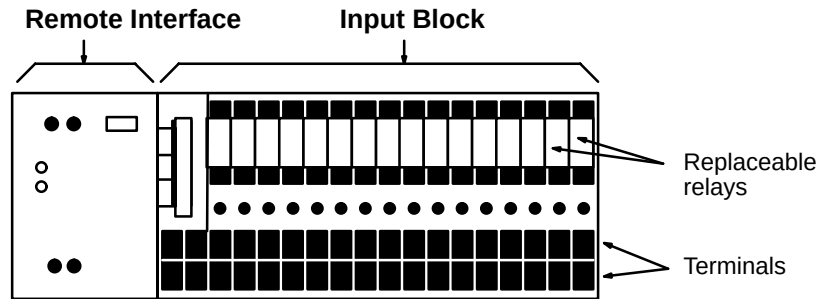

The types of field devices that can be handled is the only functional difference between G72C Remote Terminals and Remote Interfaces connected to I/O Blocks. There is no difference that affects the software operation of the Remote I/O System. In the remainder of this manual, the term Remote Terminal will be used to refer collectively to both types of Remote Terminals unless there is a reason to specify one or the other.

### Link Adapters

Converting Link Adapters can be used to create optical cable links within an otherwise Wired System. The connections to Masters, Slaves, and Remote Terminals are still wire cable; the optical connections are only between Link Adapters. Refer to *2-4 Optical Connections in Wired Systems* for details.

Branching Wired Remote I/O Systems through Branching Link Adapters is not possible.

## SECTION 2


### System Design

Although there are many possible Remote I/O Systems that can be built out of Masters, Slaves and Remote Terminals, each System is limited by the capacity of the PC and the nature of the other Units in the System. *Section 2-1* describes System configurations based on the C500-RM201 Master and C500-RT201 Slave (i.e., for C120, C500, C1000H, and C2000H Systems), and outlines connection requirements, mounting restrictions, and System size limitations. *Section 2-2* provides the same information for C200H Systems. *Section 2-3* explains combining Masters and Slaves from different Systems. Finally, *Section 2-4* describes how to incorporate optical links into Wired Remote I/O Systems.

|       |                                            |    |
|-------|--------------------------------------------|----|
| 2-1   | Basic System .....                         | 8  |
| 2-1-1 | C120 Systems .....                         | 11 |
| 2-1-2 | C500 Systems .....                         | 12 |
| 2-1-3 | C1000H and C2000H Systems .....            | 13 |
| 2-2   | C200H Systems .....                        | 14 |
| 2-3   | Combined Systems .....                     | 16 |
| 2-4   | Optical Connections in Wired Systems ..... | 17 |
| 2-5   | Multilevel Systems .....                   | 18 |

## 2-1 Basic System

The following figure shows a basic System configuration illustrating some aspects of Wired Remote I/O Systems designed with the C500-RM201 Master. Refer to following subsections for specific examples and limitations.

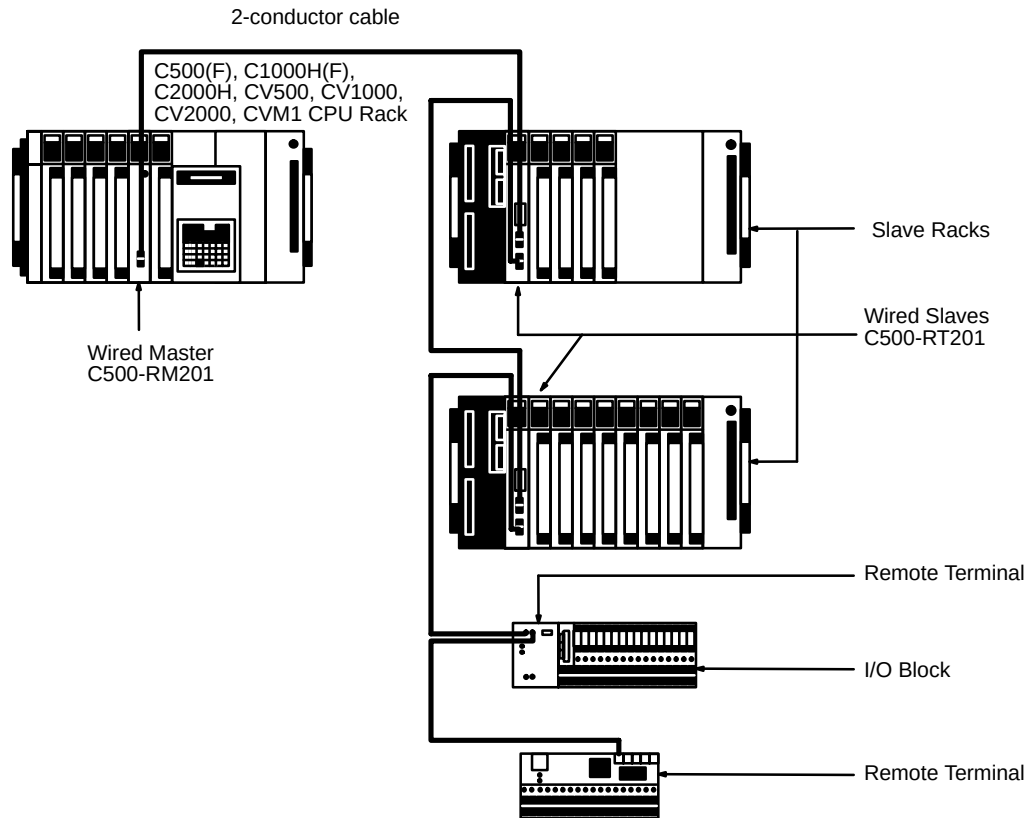

### Unit Connection

At least one Master is always necessary to connect Slaves and/or Remote Terminals. Connect each Master and all the Remote I/O Units controlled through it in series. All Units can be combined in any fashion and connected in any order as long as they are in series and the Master is on one end of the line. I/O Blocks are mounted to Remote Interfaces.

### Mounting Remote I/O Units

Masters can be mounted to any I/O slot on the CPU or Expansion I/O Rack in all but C120 Systems. In C120 Systems, Masters must be mounted to the I/O Interface Unit's position (leftmost slot) on C500 Backplanes.

**Remote Terminals**

Remote Interface and I/O Blocks are used in pairs, each of which provides 16 points. The I/O Block is easily connected to the Remote Terminal by way of a connector. G72C Remote Terminals, on the other hand, do not require a separate I/O Block. Remote Interface and I/O Blocks are paired as follows:

| I/O             | I/O Block                                         | Remote Terminal                       |
|-----------------|---------------------------------------------------|---------------------------------------|
| <b>AC Input</b> | G7TC-IA16 100/110 VAC or<br>G7TC-IA16 200/220 VAC | G71-IC16 12 VDC or G71-IC16<br>24 VDC |
| <b>DC Input</b> | G7TC-ID16 12 VDC<br>G7TC-ID16 24 VDC              | G71-IC16 12 VDC<br>G71-IC16 24 VDC    |
| <b>Output</b>   | G7TC-OC16 12 VDC<br>G7TC-OC16 24 VDC              | G71-OD16 12 VDC<br>G71-OD16 24 VDC    |

**Maximum Number of Connectable Remote I/O Units**

The number of Units in any one System is limited by the capacity of the PC. Detailed limitations are provided in the following table. These totals include all Optical and Wired Master Subsystems controlled by the PC.

| PC                             | C120            | C500, CV500,<br>CVM1-CPU01-EV2 | C1000H, C2000H,<br>CV1000, CV2000,<br>CVM1-CPU11-EV2<br>/CPU21-EV2 |
|--------------------------------|-----------------|--------------------------------|--------------------------------------------------------------------|
| Masters per PC                 | 4               | 4                              | 8                                                                  |
| Slaves per Master              | 2               | 2                              | 8 (see note)                                                       |
| Slaves per PC                  | 8               | 8                              | 16 (see note)                                                      |
| Remote Terminals<br>per Master | 16              | 32                             | 32                                                                 |
| Words per Master               | 16 (256 points) | 32 (512 points)                |                                                                    |

**Note** Always set the address number of the Remote I/O Unit in order starting from #0. The CPU Unit will determine the number of Slaves connected according to the address number of the Remote I/O Unit, as shown in the following table, even if only one Slave is actually connected. Therefore, if the address number is designated from the larger number, the actual total number of Remote I/O Units that can be connected to one PC will be limited.

| Largest Unit<br>No. Set | Number of Slaves Connected<br>(as Determined by the CPU<br>Unit) |
|-------------------------|------------------------------------------------------------------|
| 0 or 1                  | 2                                                                |
| 2 or 3                  | 4                                                                |
| 4 or 5                  | 6                                                                |
| 6 or 7                  | 8                                                                |

**Example**

If three Slaves connected to separate Masters mounted to the same CPU Rack were set as Unit number 4, the PC would assume, as shown above, that each Master had six Slaves attached, for a total of 18, or two more than allowed in the System. An error would thus be generated, even if the three Slaves were actually the only Slaves in the System.

**Total I/O Points**

The total number of I/O points in the System must not exceed the number of I/O points provided by the PC to which the Master(s) is mounted or connected.

| PC     | Maximum Number of I/O Points |
|--------|------------------------------|
| C2000H | 2,048                        |
| C1000H | 2,048*                       |
| C500   | 512                          |
| C120   | 256                          |

\*The total number of I/O points in a C1000H System can be up to 2,048, as long the number of I/O points on the CPU Rack and Expansion I/O Racks connected to the CPU Rack (i.e., not I/O points on Slave Racks) is limited to 1,024.

Total number of points for the PC

=

Total number of points on CPU Racks and  
Expansion I/O Racks

+

Total number of points on Slave Racks

+

Total number of points on Remote Terminal


+

Total number of points in Optical Remote Subsys-  
tems

## 2-1-1 C120 Systems

In C120 Systems, up to four Masters can be connected to the same PC, and up to two Slaves and 16 Remote Terminals can be connected to any one Master. Note that a Master in a C120 System must be mounted to an I/O slot on a C500 Expansion I/O Rack.


C120 PCs provide 256 I/O points. This means that the total number of points used in the System must be 256 or less. If, for example, 256 points are controlled by one Master connected to a C120 PC, there cannot be any more Masters or I/O points employed for that C120 PC.

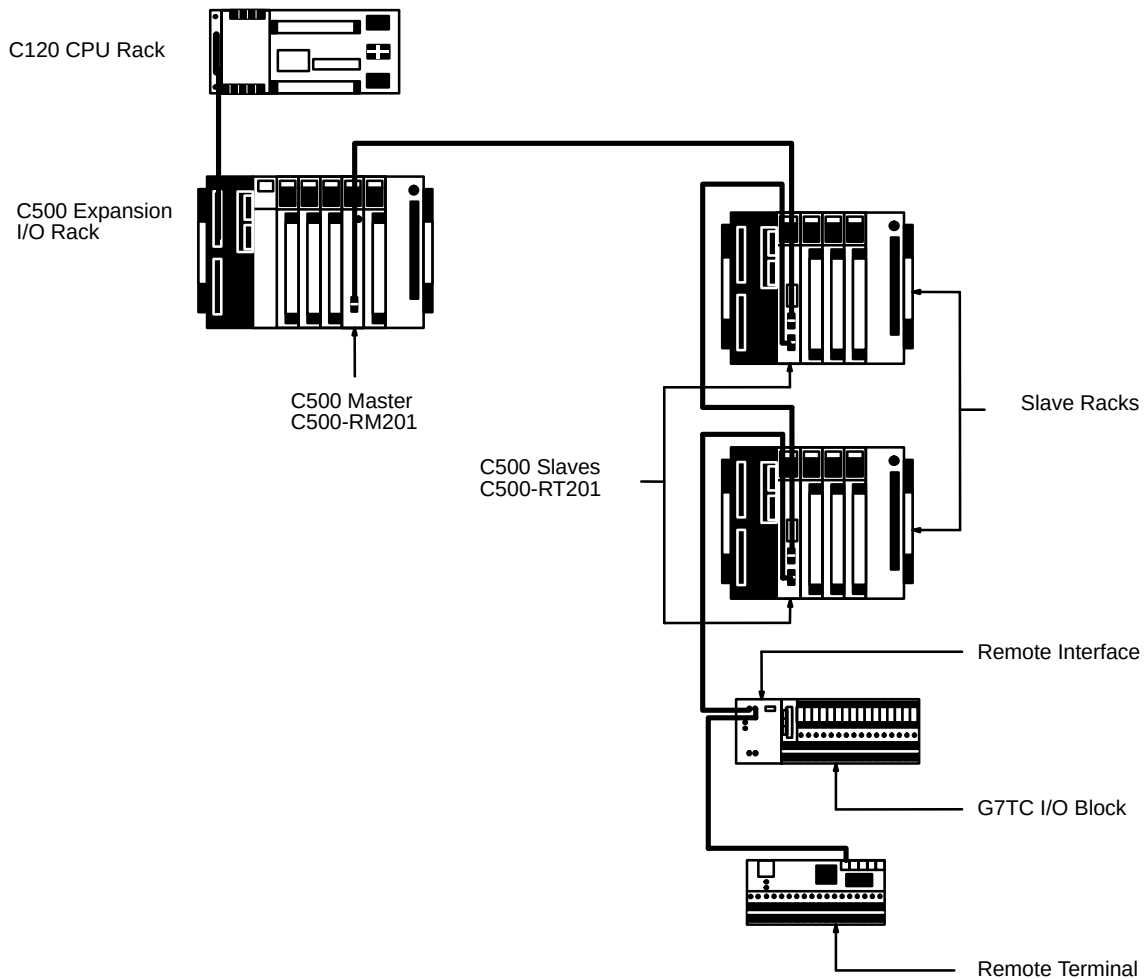

## 2-1-2 C500 Systems

In C500 Systems, up to four Masters can be connected to the same PC, and up to two Slaves and 32 Remote Terminals can be connected to any one Master.

C500 PCs provide 512 I/O points. This means that the total number of points used in the System must be 512 or less. If, for example, 512 points are controlled by one Master connected to a C500 PC, no more Masters or I/O points can be employed for that C500 PC.

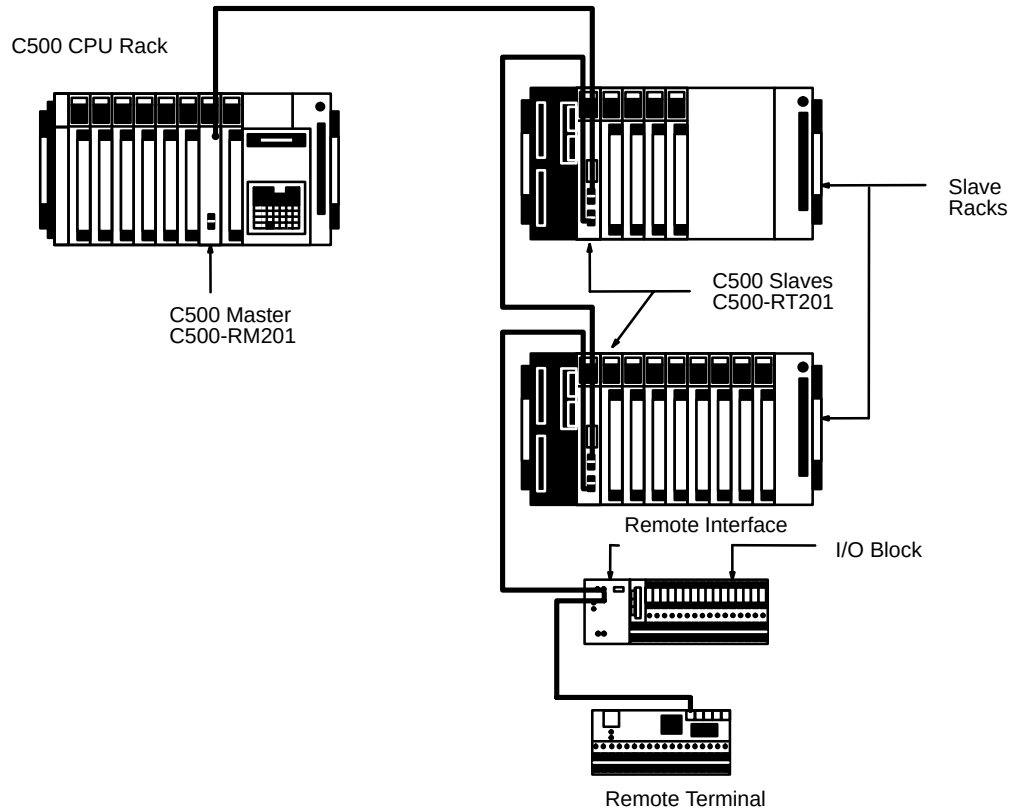




### 2-1-3 C1000H and C2000H Systems

In C1000H and C2000H Systems up to eight Masters can be connected to the same PC. In C1000H and C2000H Systems, up to eight Slaves and 32 Remote Terminals can be connected to any one Master.

When a Remote I/O System is included, C1000H and C2000H PCs provide 2,048 I/O points. This means that the total number of points used in the System must be 2,048 or less. If, for example, 2,048 points are controlled by four Masters on C1000H and C2000H PCs, no more Masters or I/O points can be employed on the PCs. (The number of I/O points for the I/O Units on a C1000H CPU Rack and Expansion I/O Racks must be kept to within 1,024.) The number of points for any one Master, must be kept to 512 or less.

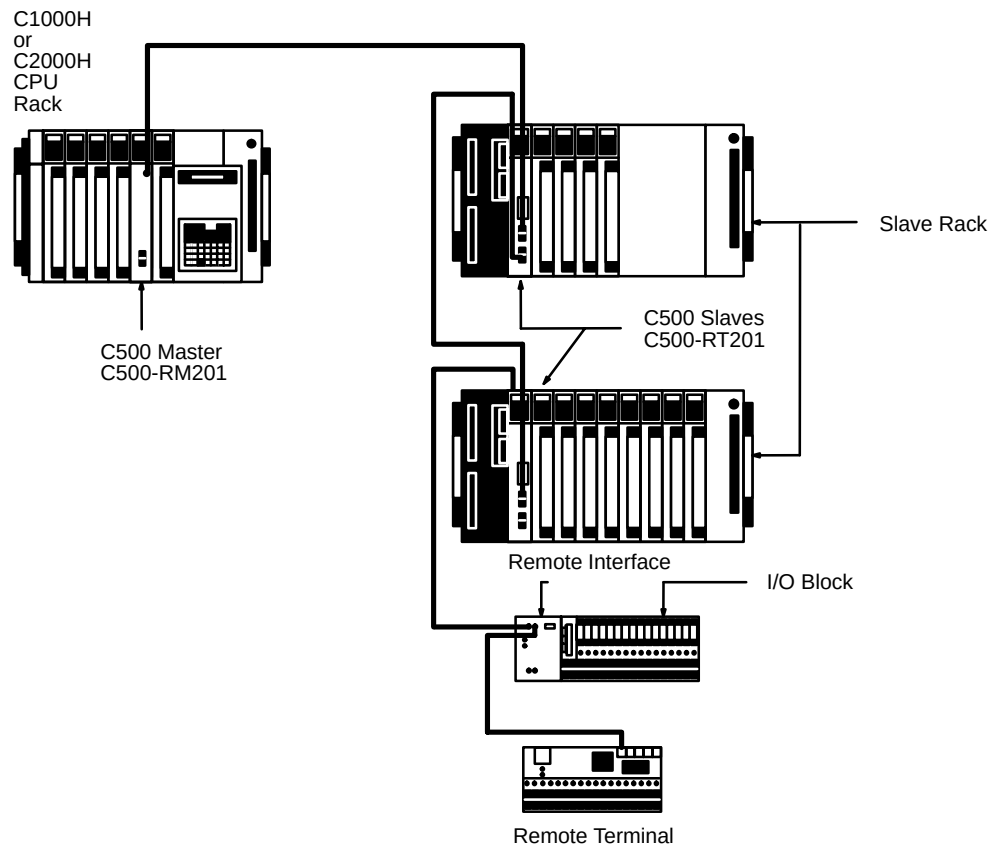

## 2-2 C200H Systems

When constructing a Remote I/O System from C200H Masters and Slaves, up to 2 Masters, 5 Slaves (regardless of the number of Masters), and 32 Remote Terminals can be included. Optical Masters and Slaves, if controlled by the PC, must be included in these totals. Expansion I/O Racks can be connected to Slave Racks, however this limits the number of Slaves which the PC can control i.e., each such Expansion I/O Rack must be counted as a Slave Rack. The basic rules for Remote I/O Systems apply, e.g., each Master Subsystem must be connected in series with a Master on one end and a terminator (either a Remote Terminal or Slave) on the other end.

### Mounting Locations

Masters can be mounted to any slot on the C200H CPU Rack or Expansion I/O Rack. Masters should not be mounted, however, to either of the rightmost two slots of the CPU Rack, as this would prevent mounting devices directly to the CPU Unit. I/O Blocks are mounted to the Remote Interface, just as in Systems using C500-RM201 Masters (see 2-1 *Basic System*). Masters cannot be mounted to Slave Racks or to Expansion I/O Racks connected to Slave Racks

- Note**
1. The only Units that can be mounted to Remote I/O Slave Racks are Basic I/O Units and Special I/O Units.
  2. High-density I/O Units (Group 2) and B7A Interface Units (Group 2) cannot be used on Remote I/O Slave Racks.
  3. A Remote I/O Master Unit cannot be used if the CPU Unit is the C200H-CPU02.
  4. High-density I/O Units mounted on a Remote I/O Slave Rack can be used only if the Remote I/O Master Unit is the C200H-RM201.

### Special I/O Units

The numbers of Special I/O Units that can be mounted to any one Slave Rack are shown in the following table. These figures assume that Units are used only from one of the three groups.

| Group A                                                                                           | Group B         | Group C                          | Group D                                                                                   |
|---------------------------------------------------------------------------------------------------|-----------------|----------------------------------|-------------------------------------------------------------------------------------------|
| High-Speed Counter Unit                                                                           | Multi-Point I/O | Temperature Sensor<br>Voice Unit | Position Control Unit<br>(C200H-NC211, C200HW-NC413)<br>Motion Control Unit (C200H-MC221) |
| Position Control Unit<br>(C200H-NC111/112,<br>C200HW-NC113/213)<br>ASCII Unit<br>Analog I/O Units | ---             | ---                              | ---                                                                                       |
| 4 total                                                                                           | 8 total         | 6 total                          | 2 total                                                                                   |

If Units from more than one group are used, the following equations must be met:



$$3A + B + 2C + 6D \leq 12$$

$$A + B + C + D \leq 8$$

The total number of Special I/O Units that can be used on all Racks combined is 10. If PC Link Units are also used in the PC System, they must also be included in the total.


### Transmission Time

Transmission time will be decreased with the same number of Slaves if two Masters are used rather than one. Refer to *Section 6 I/O Response Times*.

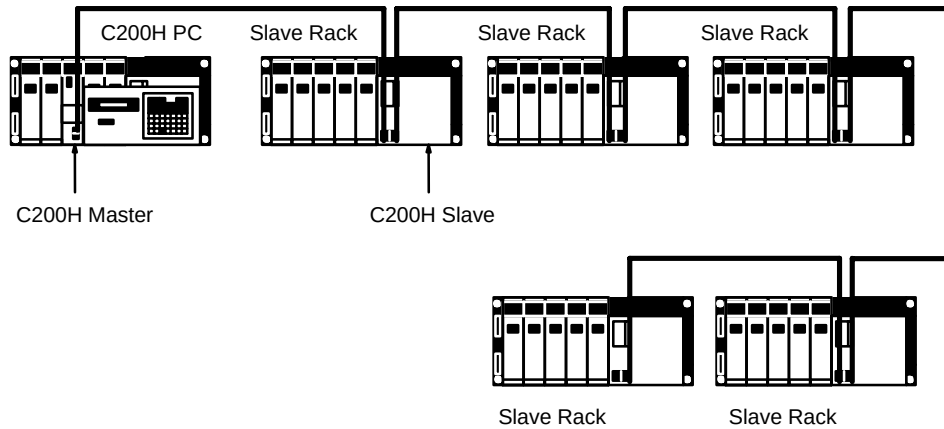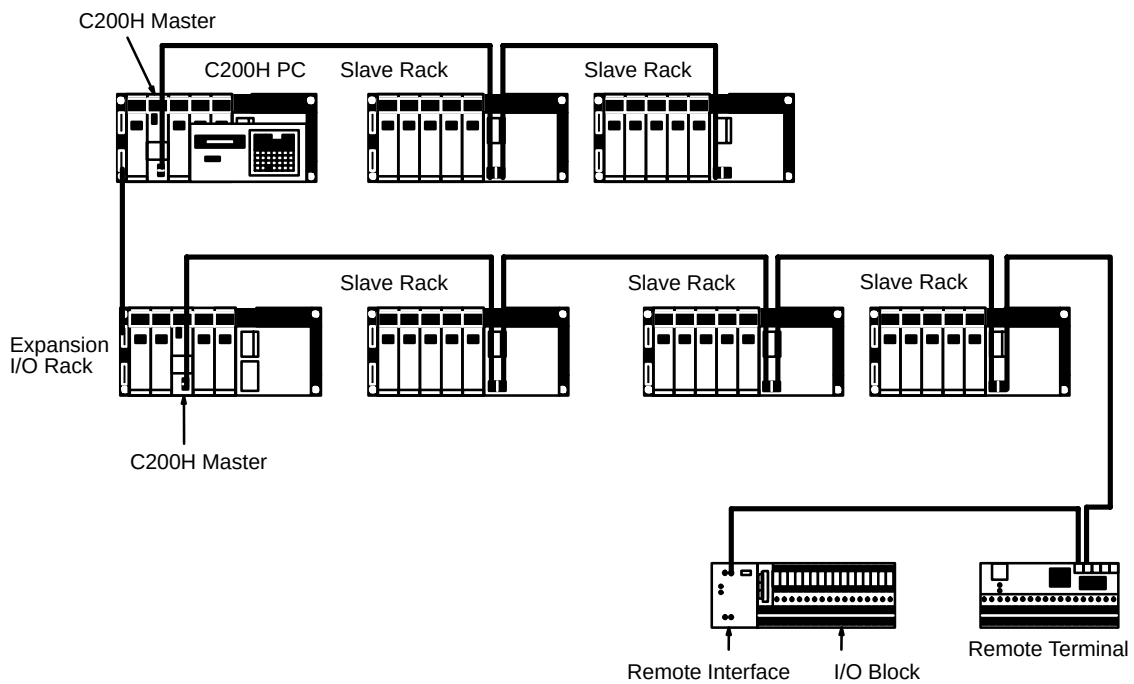**Example System 1: One Master****Example System 2: Two Masters****Example System 3: Master with Extra Expansion I/O Racks**

A maximum of two C200H Expansion I/O Racks can be connected to a Slave Rack. I/O Connecting Cable (2-conductor cable) is used to connect the extra Expansion I/O Racks.

Individual sections of cable must not be longer than 2 m. Each extra Expansion I/O Rack must be counted as a 'Slave' when computing the number of Slaves controlled by the PC.

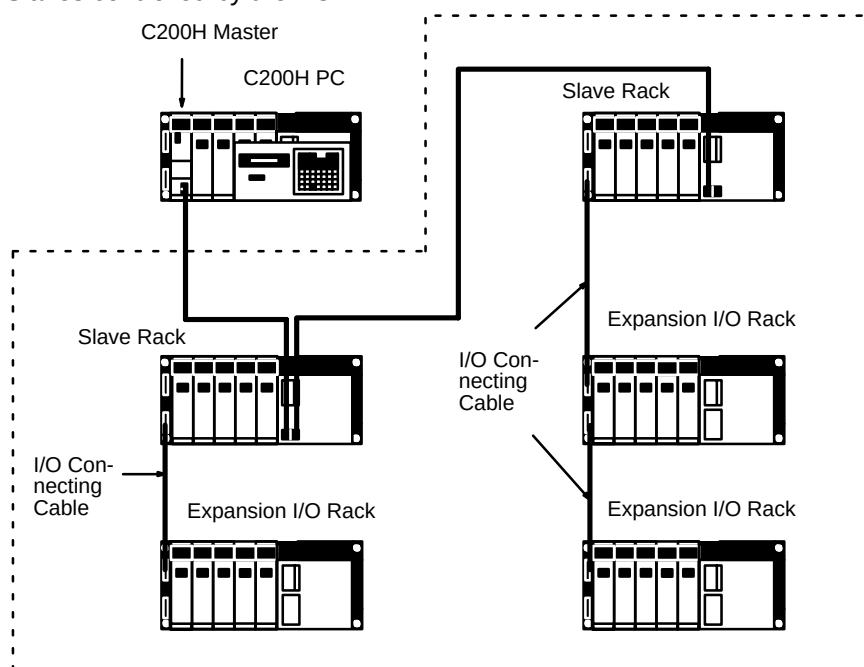


## 2-3 Combined Systems

C500 and C200H Remote I/O Units can be combined into the same System. That is, C500 Slaves can be connected to C200H Masters; C200H Slaves, to C500 Masters.

### Example 1: C500 Master and C200H Slaves

The maximum number of connectable Units is the same as in any Remote I/O System based on the C500-RM201 (see 2-1 Basic System). Word assignments will be based on the C500 PC, i.e., based on the order and positions of I/O Units mounted, and not on fixed slot words. Special I/O Units cannot be mounted to C200H Slave Racks controlled by a C500 Master; all mounted Units will be assigned only one word each. The "type of Master" switch on all C200H Slaves controlled by C500 Masters must be turned ON to designate a Master other than the C200H Master.

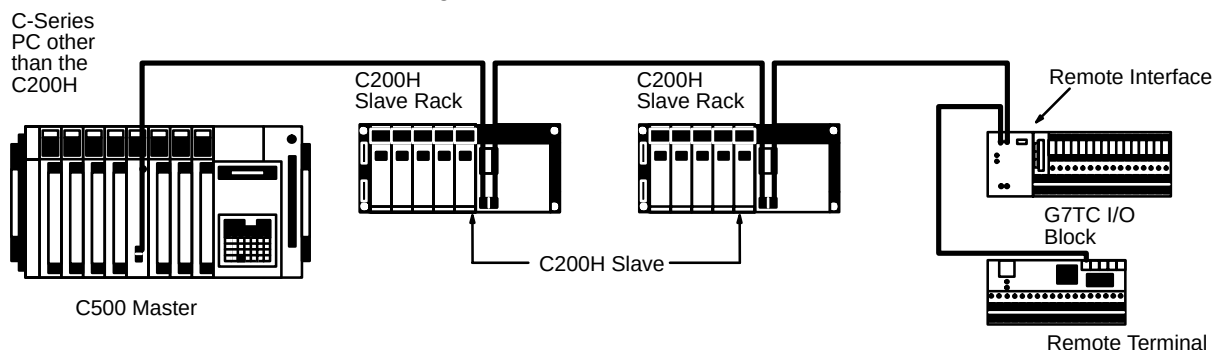


**Caution**

When C200H Slave Racks are connected to Masters on PCs other than the C200H/C200HS, all Output Units on these Slave Racks will be treated as having at least 16 output points, disabling the Fuse-burnout and Alarm Detection Bits on Units that normally provide them (e.g., C200H-OD411, C200H-OD213, C200H-OD214, and C200H-OA221).

When using the C200H Backplane for 10 slots as a remote I/O Slave for the CVM1/CV500/CV1000/CV2000, only the 8 slots from the left can be used; the 9th and 10th slots from the left cannot be used.

**Example 2: C200H Master and C500 Slaves**

When connecting C500 Slaves to C200H Masters, each C500 Slave must be counted as 2 Slaves when figuring the total number of Slaves. This total, which includes all optical and wired Slaves, must be no greater than 5 for any one C200H PC. Here, Special I/O Units can be mounted to C500 Slave Racks. Word assignments will be based on the C500 PC's System, i.e., based on the order and positions of I/O Units mounted (starting at the left), and not on fixed slot words.

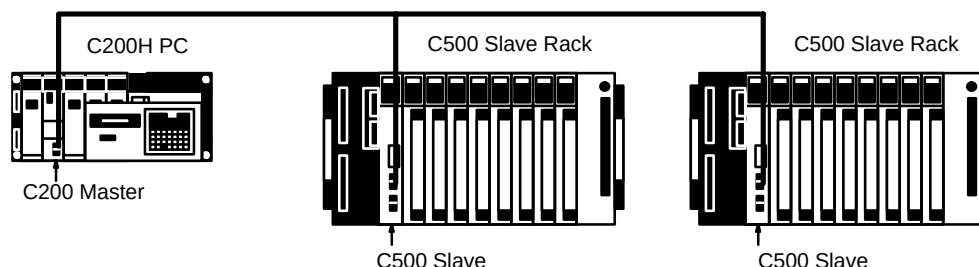


## 2-4 Optical Connections in Wired Systems

Two B500-AL007-P Link Adapters can be used to extend the transmission distance and/or to prevent interference from noise by inserting an optical link between two Remote I/O Units. The two Link Adapters convert between wire and optical signals, transmitting over the optical link between them. The AL007-P Link Adapter is thus always used in pairs, and always between Wired Remote I/O Units. The entire Master Subsystem, from Master to terminator, must still be connected in series.

Up to 8 Link Adapters (4 pairs) can be used for each Master. To take full advantage of an optical link, shorten wire links as much as possible, even to the point of placing the Link Adapter on the same control panels as the Remote I/O Units.

Maximum cable length for any one section of optical cable is 20 m for all-plastic optical fiber cable (APF); 200 m for plastic clad optical fiber cable (PCF).

Refer to the Link Adapter manual for details on this and other uses of Link Adapters.

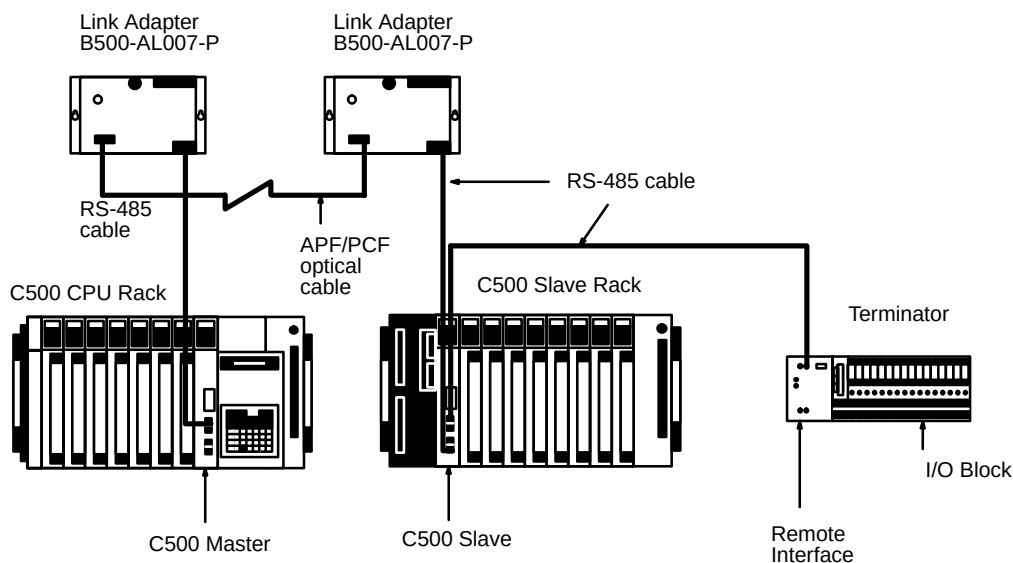

**Handling Optical Fiber Cable**

Although special characteristics of optical fibers call for care in connecting optical devices, laying optical fiber cables basically does not differ from laying wire cables. All OMRON PCF Cables and the 3G5A2-PF101 APF (length: 1 m) Cable come with connectors attached. Connectors for all other APF Cables must be assembled by the customer. Note the following precautions when handling optical fiber cables:

- 1, 2, 3...** 1. Always turn the power off to the Link Adapter when connecting or disconnecting an optical fiber cable.
2. Always hold the connect when disconnecting an optical fiber cable; never pull on the cable.
3. APF and PCF connectors are designed to be inserted only in one direct; do not try to force them in the wrong way.
4. Insert APF and PCF connectors until they lock into position.
5. Always place the protective caps on unused Link Adapter modules.
6. If dirty, clean connectors gently with a tissue or sanitary cotton, using ethyl alcohol if necessary. Do not use any solvent other than ethyl alcohol.
7. Do not allow heavy objects to fall on optical cable or otherwise subject it to excessive shock or strain.

## 2-5 Multilevel Systems


There is no reason that a Remote I/O System must remain restricted to either wired or optical communications. PCs support multiple Masters, some of which can be Wired and some of which can be Optical.

Although the number of Subsystems supported by each PC is limited, each Subsystem can be considered independently from the others as long as the total capacity of the PC is not exceeded. It is important to note that although both Wired and Optical Masters can be controlled by the same CPU Unit, Optical and Wired Remote I/O Units cannot be combined in the same Subsystem, i.e., Optical Masters can be connected only to Optical Slaves, Optical I/O Units, and I/O Link Units; Wired Masters can be connected only to Wired Slaves and Remote Terminals.

In the following example, two CPU Racks are used. The one in the upper left corner controls two Remote I/O Subsystems, one Wired and one Optical. The Optical System contains an I/O Link to the other CPU Rack (at the right), which has one Remote I/O Subsystem controlled by it.

The Optical I/O Units, Slave Rack, and Expansion I/O Rack beneath the CPU Rack at the right are controlled through the Optical Master on this CPU Rack. Note that if there was no Master on this Rack and the Optical I/O Units and Slave Rack were connected through the I/O Link Unit, they would become the last Units in the Optical Remote I/O Subsystem controlled by the CPU Unit at the upper left, and be controlled by it.

Another aspect of Remote I/O Systems demonstrated by this diagram is the presence of Expansion I/O Racks, both connected to a CPU Rack and to Slave Racks. Although normally not shown in system diagrams for Link Systems, Expansion I/O Racks can be used to increase the number of I/O Units mountable at any one location.

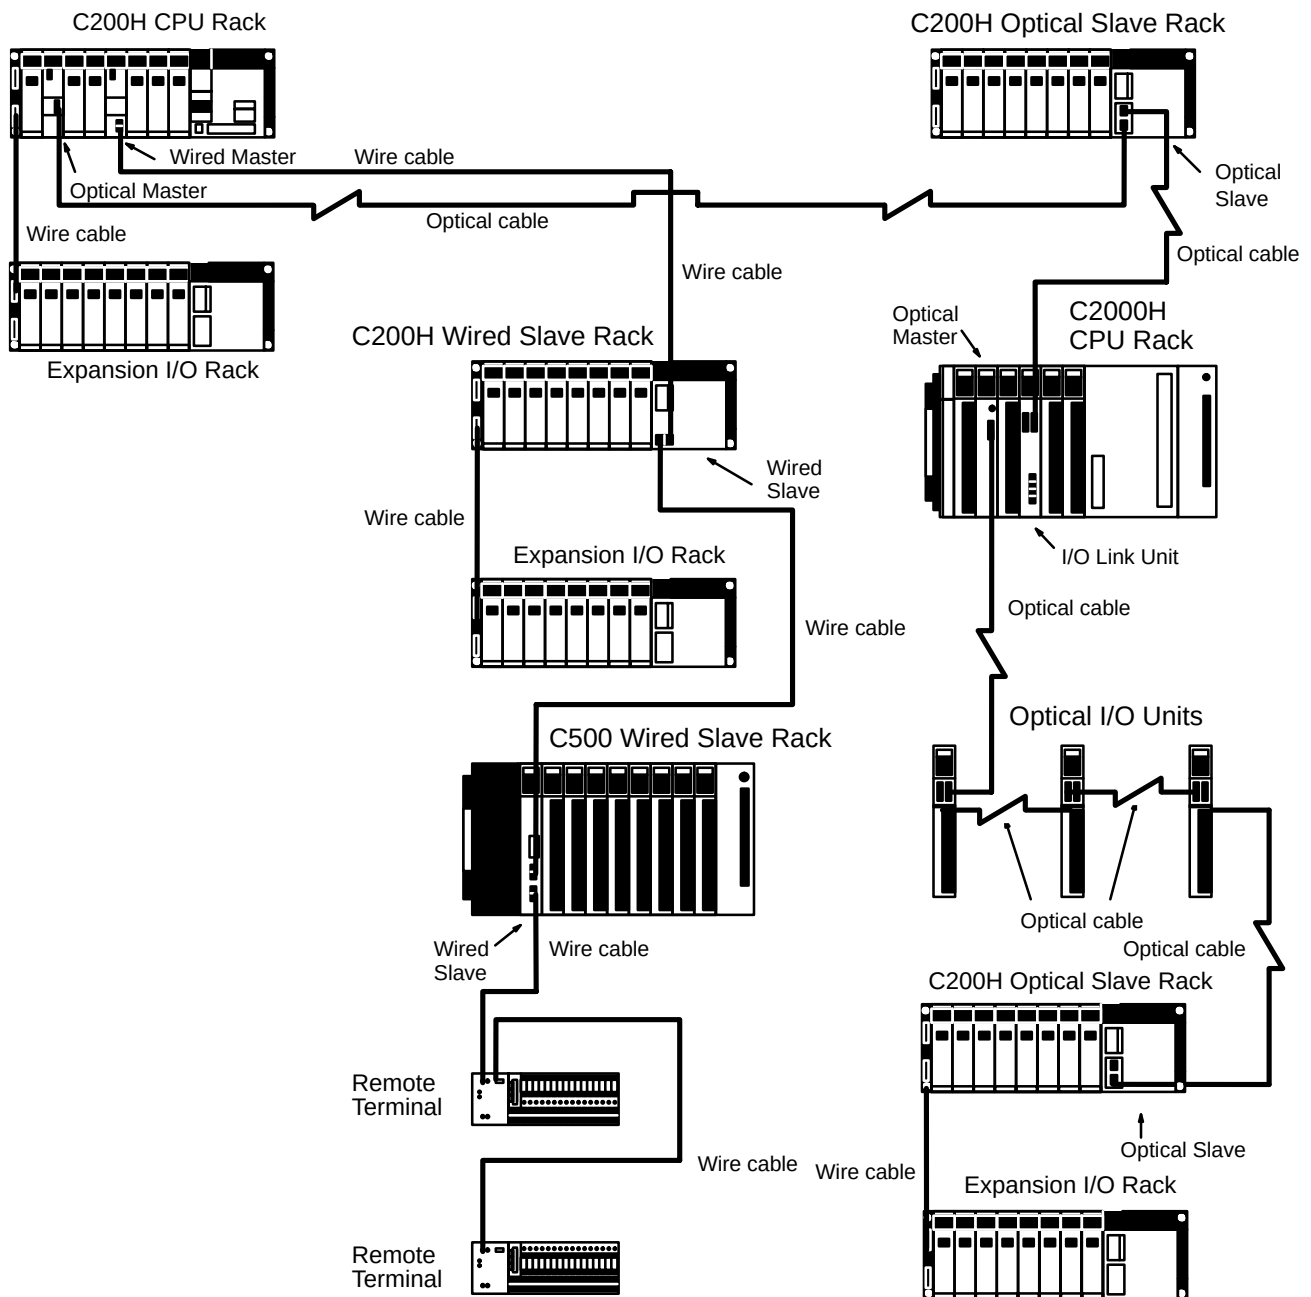

## SECTION 3

# Data Exchange and Operations

PCs transmit I/O data through Masters, Slaves, and Remote Terminals according to allocated words.

Although words are not allocated to Masters and Slaves, they are allocated to all I/O Units and Remote Terminals in the System. To enable proper word allocation, Unit numbers must be set for all Slaves and, in some Systems, word multipliers must be set for Masters. A Slave or Remote Terminal must also be set as a terminator for each Master.

*Section 3-1* provides block diagrams of various Remote I/O Units. *Section 3-2* provides details and examples of Unit connections, word settings, terminator settings, word multiplier registration, and the word allocations that result from these. The basic setting procedure for the entire System is outlined in *Section 3-3*. Finally, *Section 3-4* provides example program sections used to start System operation when power is turned on to a Slave, rather than to the Master as it normally is.


|       |                                            |    |
|-------|--------------------------------------------|----|
| 3-1   | Block Diagrams .....                       | 22 |
| 3-2   | Unit Numbers and I/O Word Allocation ..... | 25 |
| 3-2-1 | C500 Masters .....                         | 26 |
| 3-2-2 | C200H Masters .....                        | 34 |
| 3-2-3 | Combined Systems .....                     | 37 |
| 3-3   | Setting Procedure .....                    | 39 |
| 3-4   | Delayed Activation of Slaves .....         | 41 |




## 3-1 Block Diagrams

The following block diagrams are for Units available in Wired Remote I/O Systems.


### C500 Master and Slave

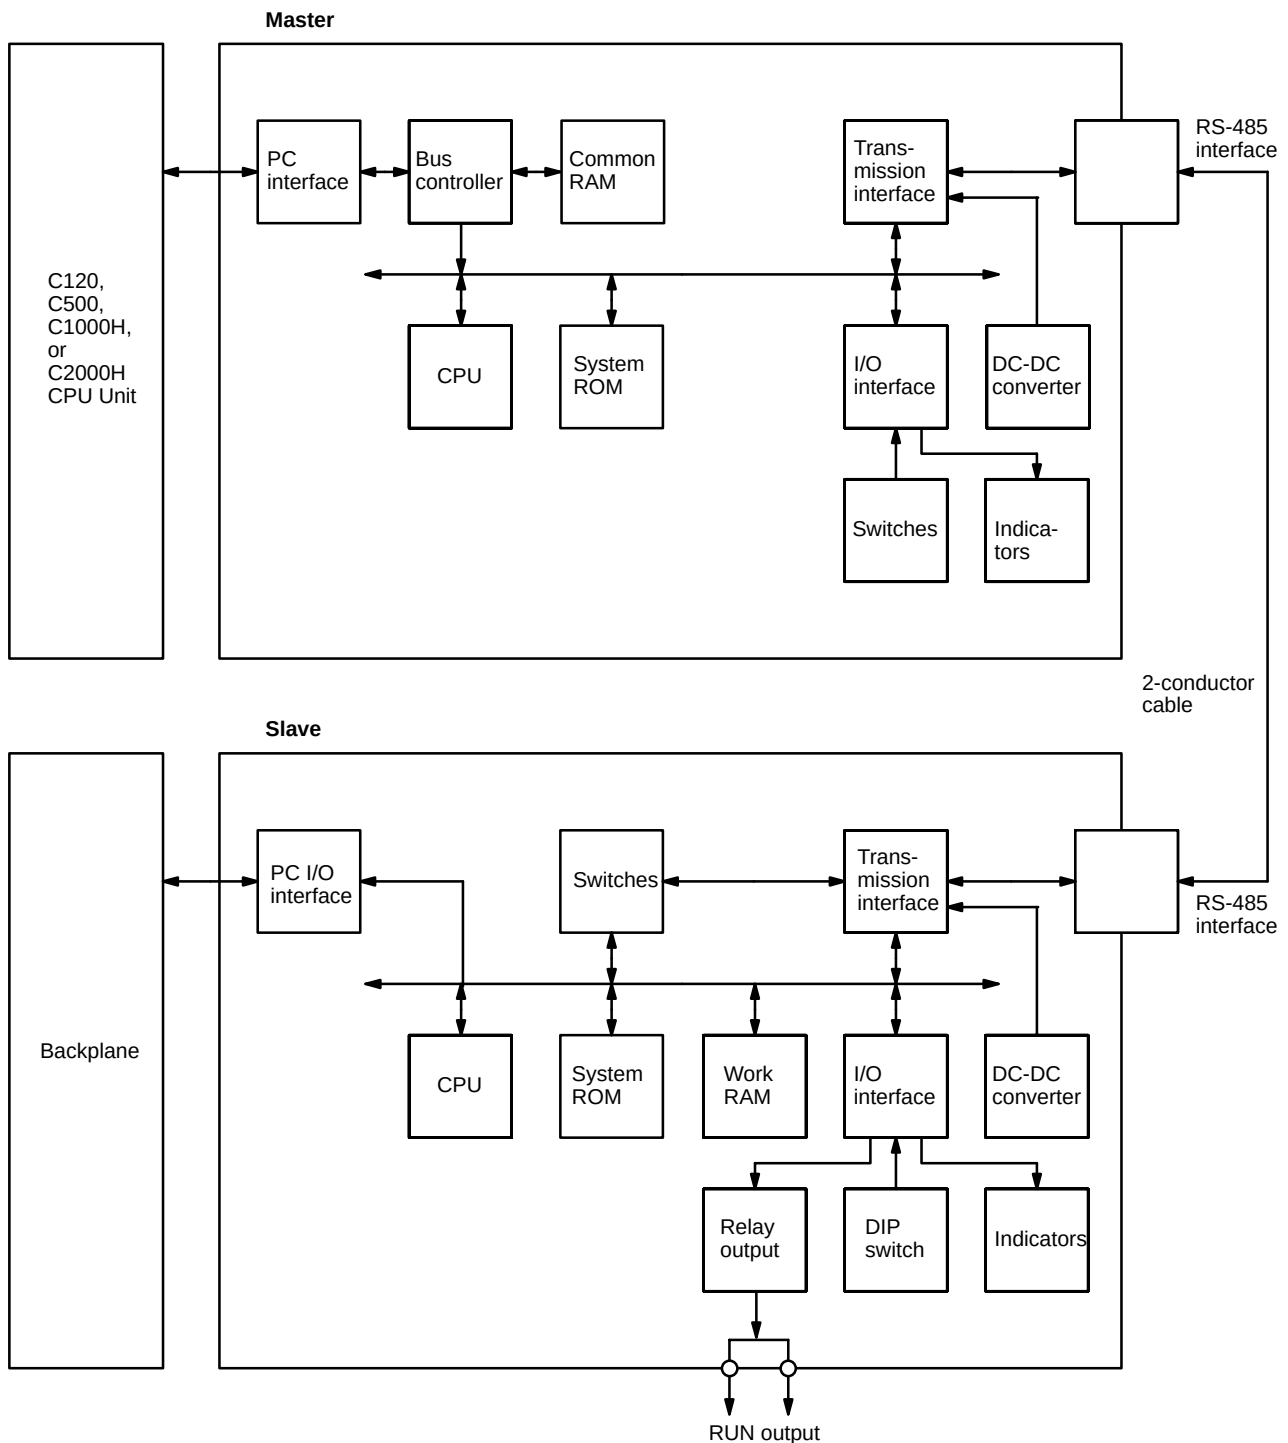


## C200H Master and Slave

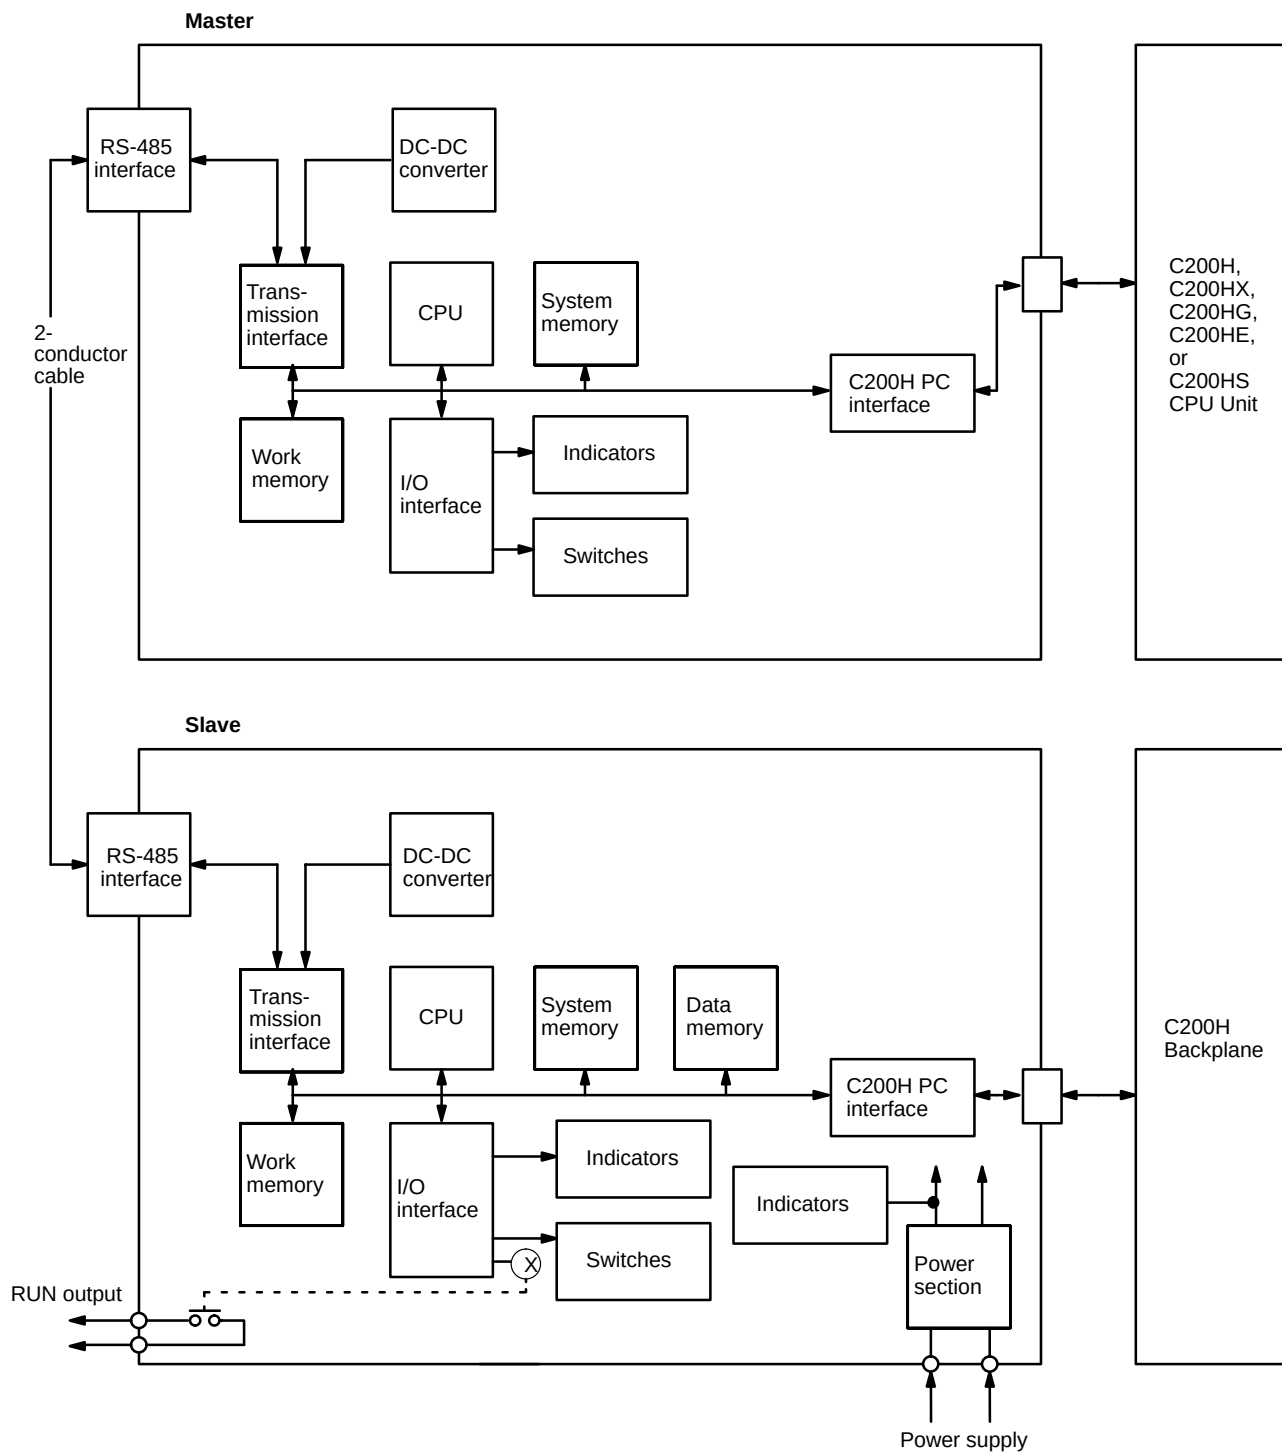


## Remote Interface and I/O Blocks

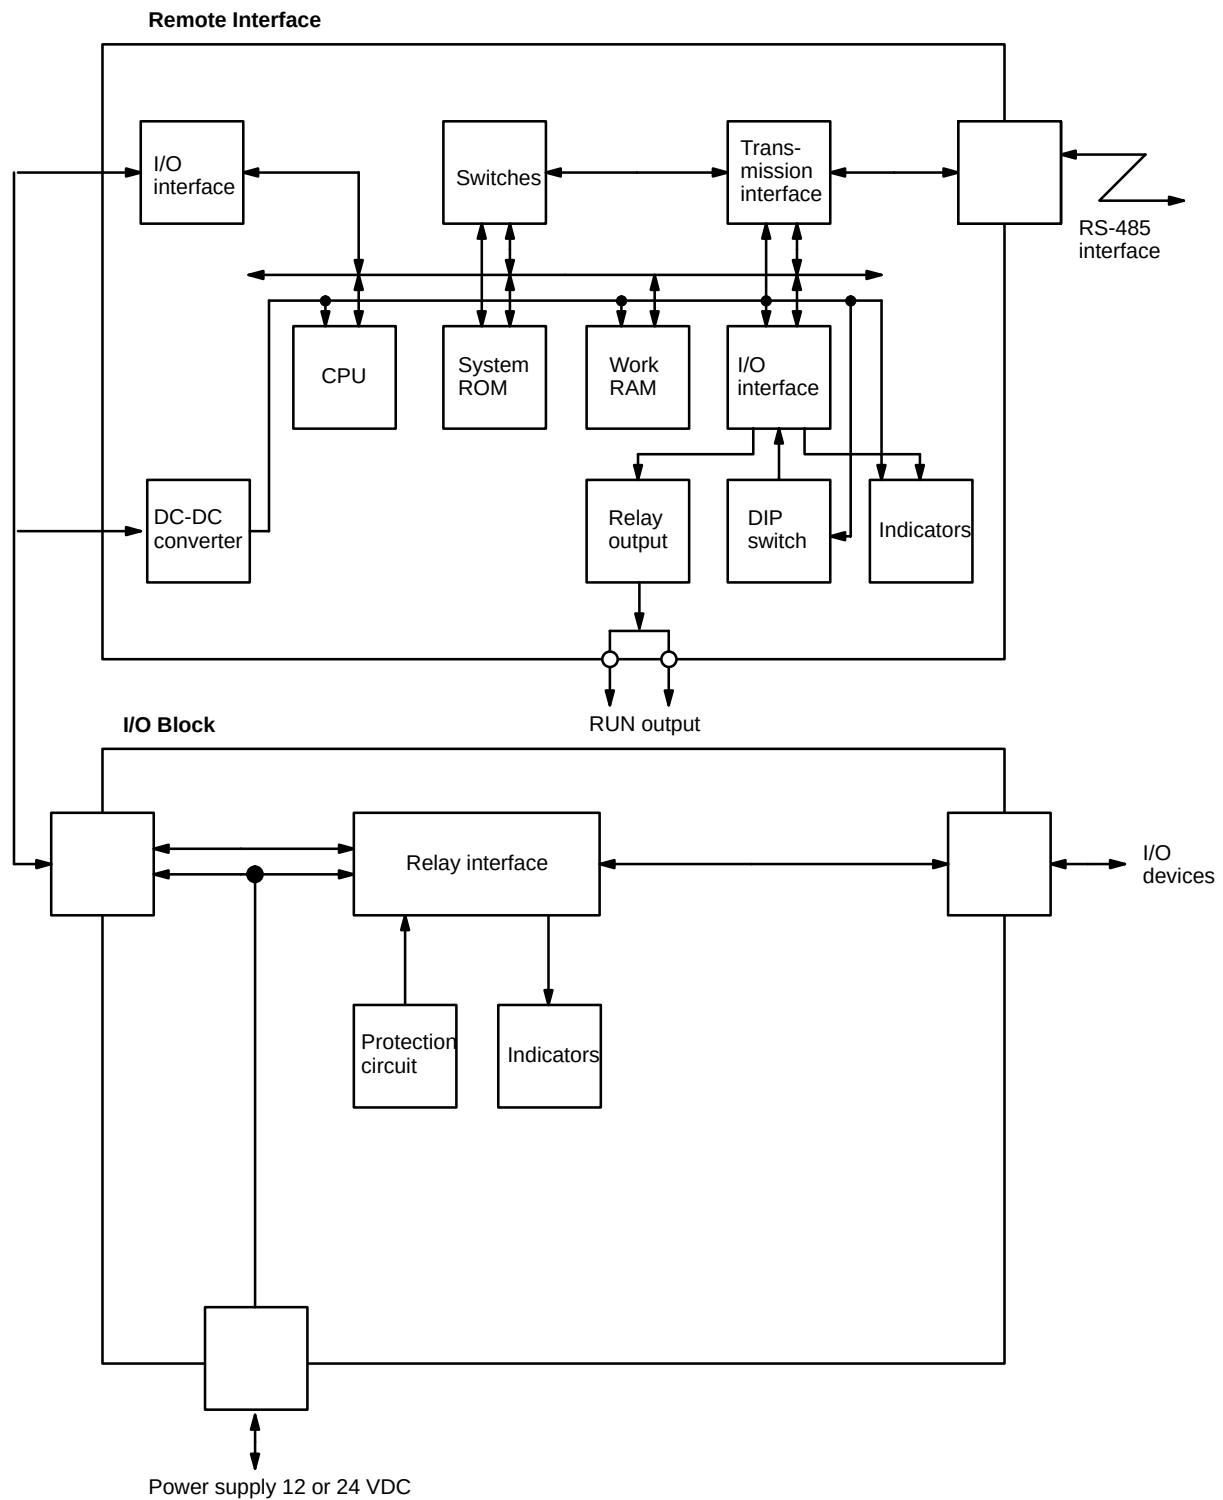

## G72C Remote Terminal

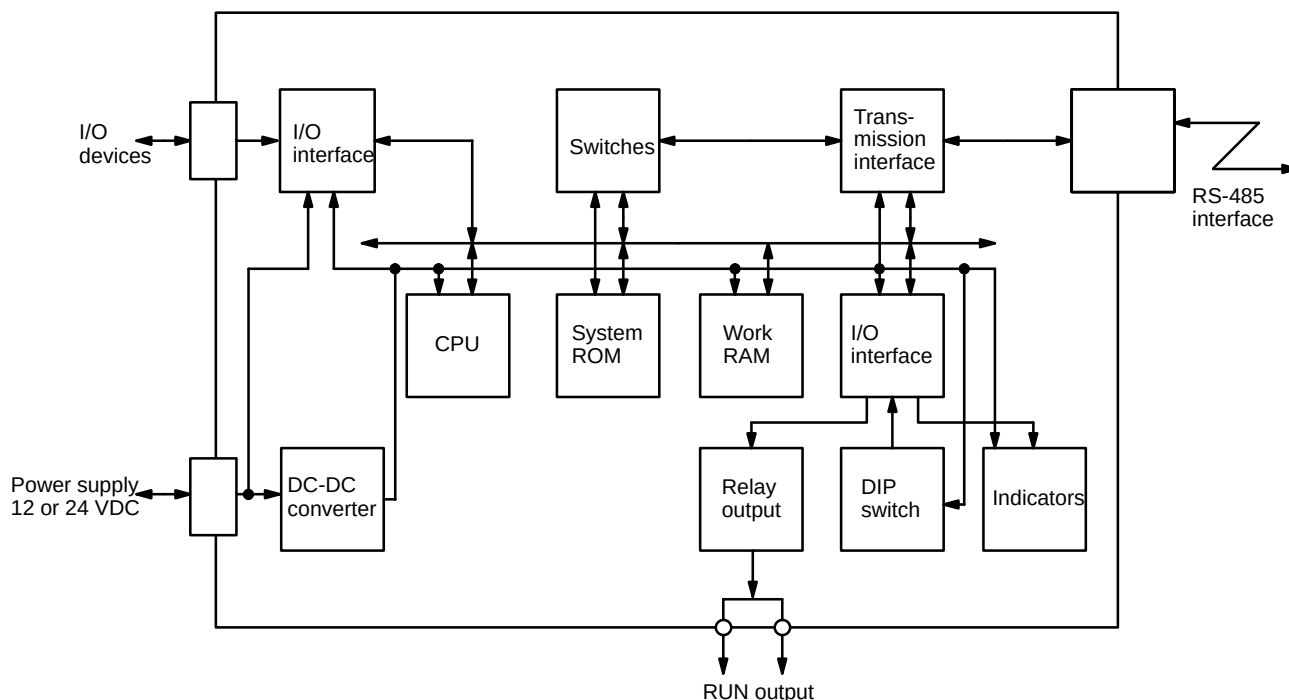

## AL007-P Link Adapter

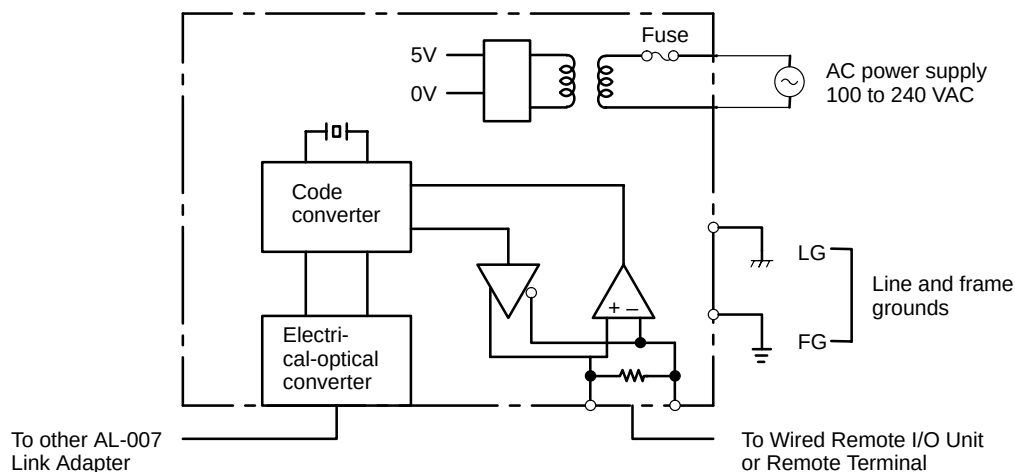

## 3-2 Unit Numbers and I/O Word Allocation

### Basic Allocation

Word allocations on Racks in Remote I/O Systems follow basically the same pattern as the PC to which the Master is mounted, i.e., by the mounting order of and by the number of words required for each Unit mounted for C120, C500, C1000H, and C2000H Systems and by fixed slot words in C200H Systems.

In either case, allocations start from the lowest word starting on the left side of the CPU Rack. When a Master is reached on a Rack, allocation jumps to the leftmost Unit mounted on the first Slave Rack connected to the Master, and then to the second Slave Rack, etc, until the terminator is reached. Then allocations return to the Unit following the Master and continue across the CPU Rack and Expansion I/O Racks until all the Units on all Racks have been allocated. Details on and examples of allocation are provided below.

Words for Units not mounted to Racks (i.e., Remote Terminals) are not determined as described above, but according to switch settings on the Units, as described below.

### Terminator

There must be one terminator set for each Master, and it must be the Unit at the opposite end of the I/O bus from the Master. The terminator may be a Slave or a Remote Terminal. The Master checks for a terminator immediately upon power application. If the terminator is properly set, the other Units connected to the I/O bus are acknowledged. All following operation is based on this initial check. Therefore, if a Unit is not attached properly or if the power to a Unit is not on when this check is performed, that Unit will be ignored during actual operation.

## 3-2-1 C500 Masters

### Setting Slave Unit Numbers and Terminators

Because more than one Slave can be attached to each Master, Unit number settings are necessary to distinguish the Slaves. Unit numbers 0 through 7 can be set for C1000H and C2000H, Slaves; unit numbers 0 and 1, for all others. The Slave assigned unit number 0 is referred to as Slave #0; the Slave assigned unit number 1, as Slave #1, etc. The same unit number cannot be used on more than one Slave under the same Master. Setting unit numbers other than those listed above will prevent Slave operation.

Set the Slave directly connected to a Master as Slave #0, the Slave connected to Slave #0 as Slave #1, and so on. Setting unit numbers and a terminator is necessary for every Master, even when only one Slave is connected. Refer to *Section 4 Switch Settings* for details on setting procedures.

I/O Units can be mounted to Slave Racks in any location desired numbers are automatically allocated left to right in the order the I/O Units are mounted.

### Setting Remote Terminal Words

A PC I/O word must be allocated for each Remote Terminal connected in the System; words are not automatically allocated. Any word from 0 through 31 can be set in all Systems but C120 Systems, where words between 0 and 15 must be set.

In C1000H and C2000H Systems, words 0 through 127 are allocated by the PC's CPU Unit to enable use of up to 128 words even though actual word settings are from 0 through 31. This is achieved by combining word settings with word multipliers, which are explained next.

### Word Multipliers in C1000H and C2000H Systems

Because the C1000H and C2000H PCs can handle up to 2,048 points (or 128 words), words 32 to 127 of these PCs cannot be allocated without some identification other than word settings. It is therefore necessary to assign word multipliers to the Masters to which Remote Terminals are mounted and identify the words with these multipliers as well. These numbers run from 0 through 3.

Word numbers, word settings, and word allocations are related as shown by the following equation:

$$\text{I/O word allocation} = (32 \text{ words} \times \text{word multiplier}) + (\text{word set on Unit})$$

For example, suppose word 28 is set on a Remote Terminal and word multiplier 2 is assigned to the Master of that Remote Terminal. The I/O word allocated to the Remote Terminal, viewed from the PC, is computed as follows:


$$32 \text{ words} \times 2 + 28 \text{ words} = \text{word } 92$$

A word multiplier is not assigned to a Master to which only Slaves are connected because words will be automatically allocated to the I/O Units on these Slaves. The I/O words assigned in Remote I/O Systems must not be the same as the I/O words allocated elsewhere.


The same word multiplier can be assigned to more than one Master as long as the word settings for the Units connected to the Masters are different, i.e., as long as the allocated words differ.

Setting Word Multipliers

Set the word multipliers in a C1000H and C2000H System using the Programming Console as shown below. Before setting word multipliers, set the mode selector to PROGRAM. Word multipliers must be assigned only to the Masters to which Remote Terminals are connected. Displays for word multipliers are not displayed for Masters to which only Slaves are connected.

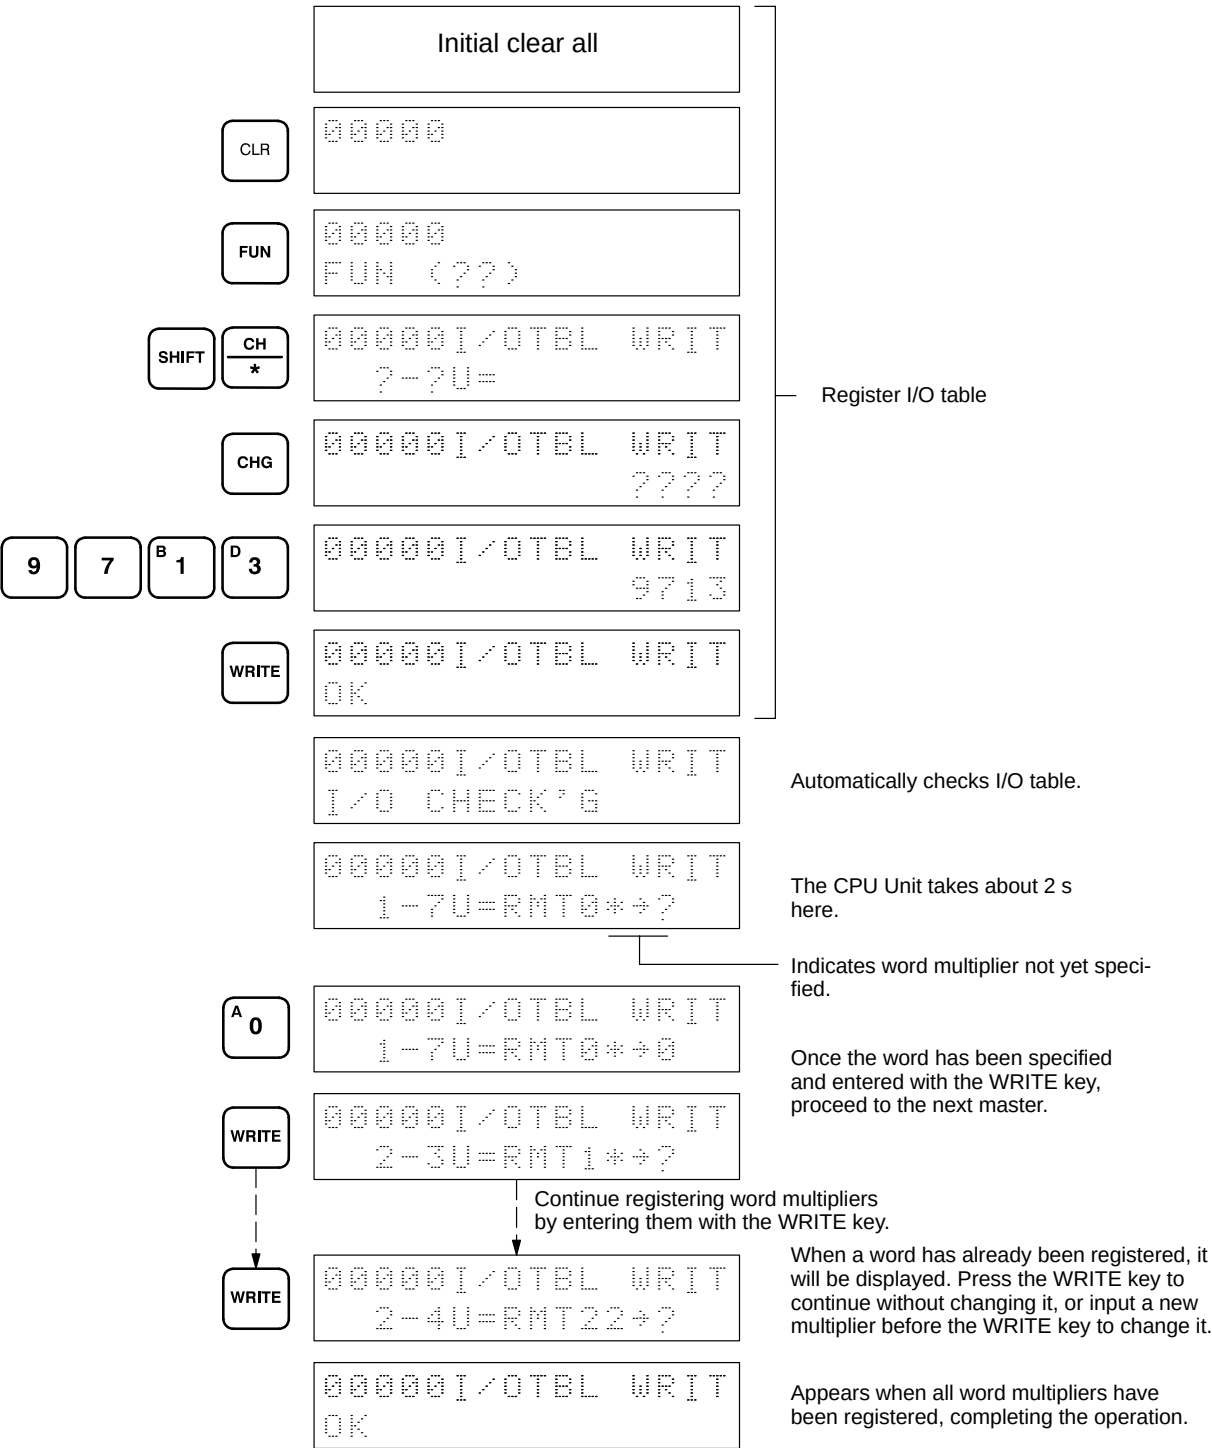

Meaning of Displays

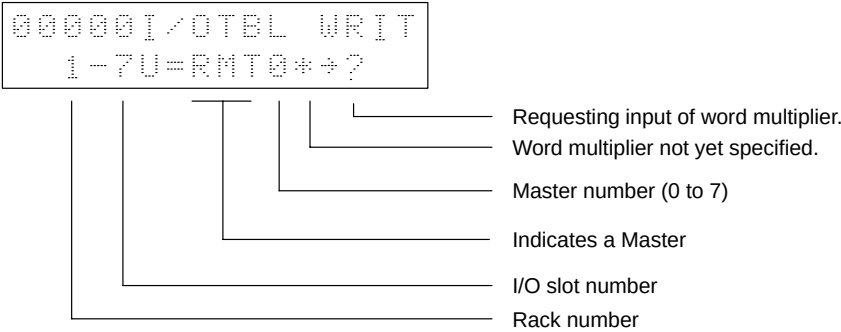




**I/O Word Allocation Examples**

The following examples show four possible Systems and the word allocations for them. They do not show all possible connections or the maximum number of Units possible for each System. Refer to *Section 4-1* for the maximum number of connectable Units.


**Example 1: C500 with Slaves**

With two Slaves connected to one Master, the Slaves are set to unit numbers 0 and 1. The order does not matter. The last Unit must be set as the terminator. If only one Slave is connected, set it to unit number 0 and as the terminator. Words are automatically allocated for all I/O Units.

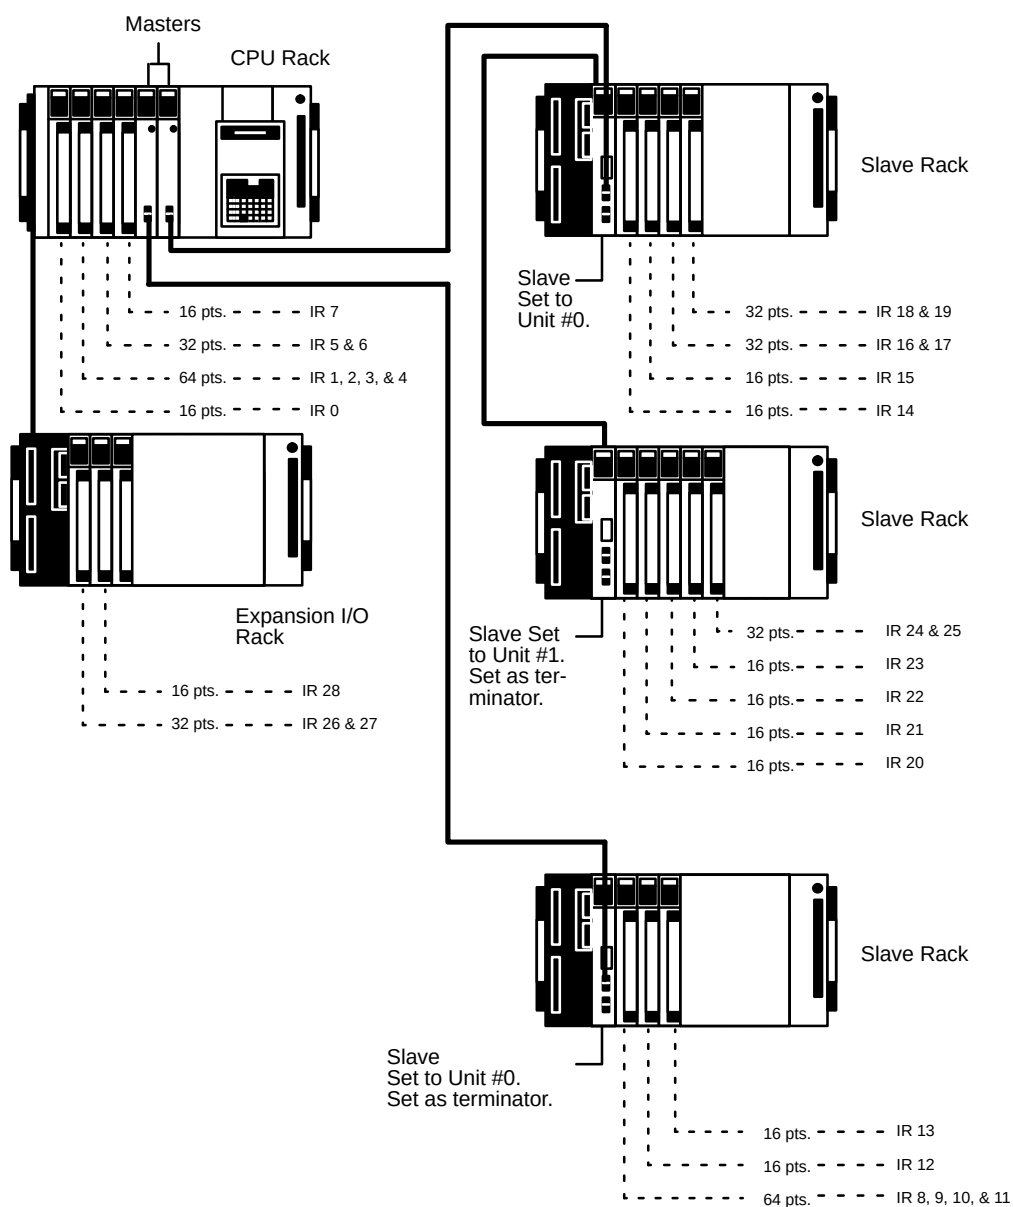


**Example 2: C500 with Remote Terminals**

Because the I/O Units are allocated words starting at the lower end (word 00), duplication can be avoided by starting Remote Terminal words from the upper end, i.e., from 31 in all Systems except C120 Systems, where it is best to start word settings backward from 15. Do not set words that are already being used for other I/O points.

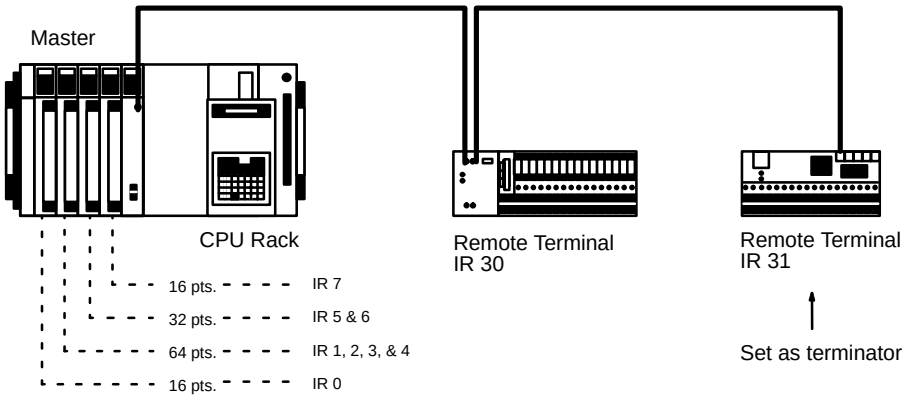

**Example 3: C500 with  
Slaves and Remote  
Terminals**


Here, as in Example 2, word duplication can be avoided by setting Remote  
Terminal words starting from the upper end.

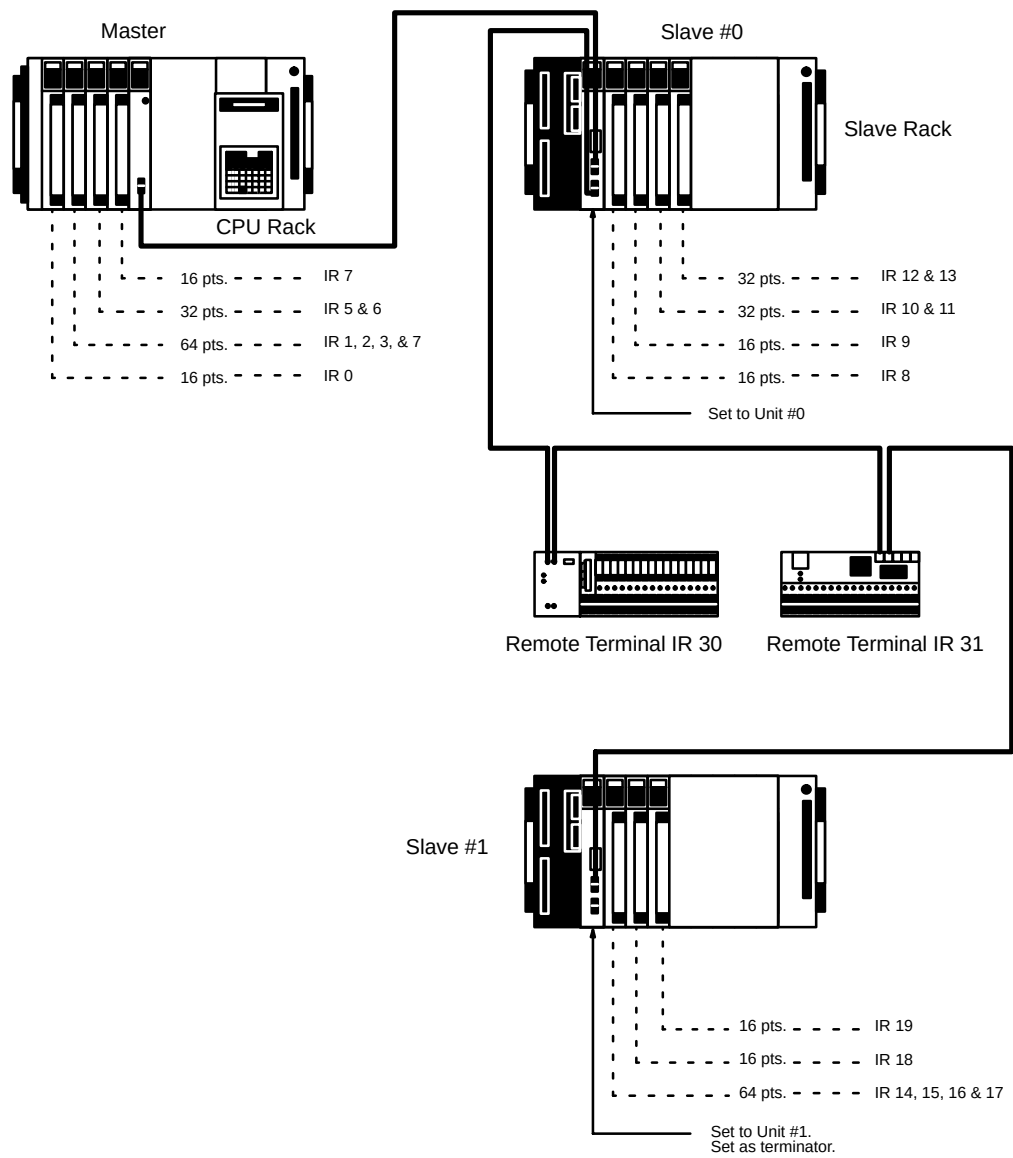

**Example 4: C1000H and C2000H with Slaves and Remote Terminals**

Duplication can be avoided here too by starting Remote Terminal words from the upper end. (See Example 2, above, for details.)

Do not set words that are being used for other I/Os.

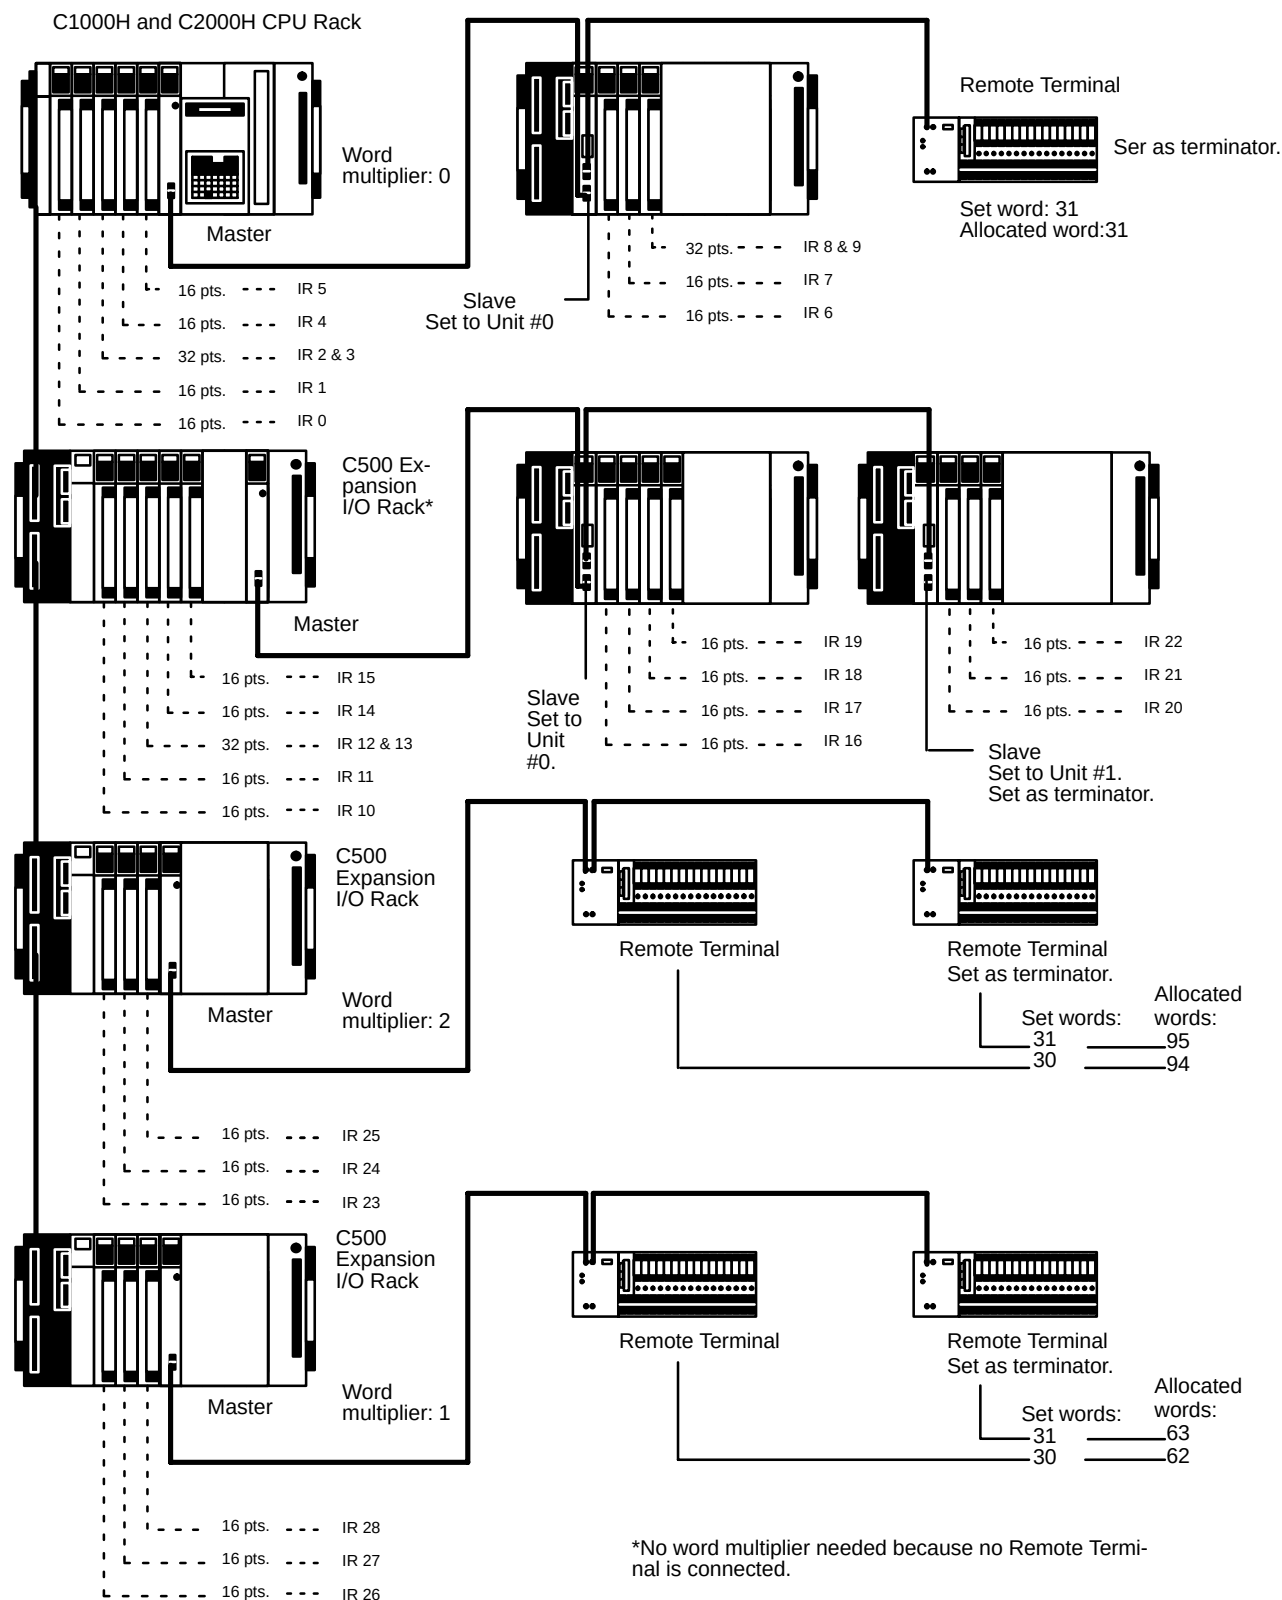

## 3-2-2 C200H Masters

### I/O Unit Word Allocations

I/O Units on C200H Slave Racks are allocated words according to the unit number set on the Slave and the word assigned to the slot to which the I/O Unit is mounted. For example, if the Slave is Unit #0, words 50 through 59 are allocated to the Slave Rack. I/O slots on the Rack would be, from left to right, 50, 51, 52 ... 58, and 59. Slot words do not change even if an I/O Unit is not mounted in every slot. Slot words not used on shorter Racks can be used as work words. The following table shows the words allocated for each Slave unit number. Note that the Slave will not operate if the same unit number is set for more than one Slave or if a number not between 0 and 4 (inclusive) is assigned. If an Expansion I/O Rack is connected to a C200H Slave Rack via I/O Connecting Cable, the Expansion I/O Rack will be automatically assigned the words for the next unit number. Such unit numbers cannot be set on any other Slave.

| Unit number | Words         |
|-------------|---------------|
| 0           | 50 through 59 |
| 1           | 60 through 69 |
| 2           | 70 through 79 |
| 3           | 80 through 89 |
| 4           | 90 through 99 |

### Remote Terminal Words

Remote Terminals connected to C200H Masters are allocated words 200 through 231. The actual word numbers will be 200 greater than the numbers set on the Remote Terminals.

### Terminators

The last Slave, Remote Terminal in each Master Subsystem must be set as the terminator no matter how large the Subsystem is. Without a terminator set for each Master Subsystem, the I/O System and the PC will not operate, and the END RS indicator on the PC will remain lit. If a Programming Console is mounted, the display will show that the CPU Unit is on standby.

### Master Unit Numbers

C200H Masters must also be assigned unit numbers. These numbers determine response to error processing and AR area Error flags and Restart bits. See *4-1 Remote I/O Units* for unit number switch settings and *7-2 Error Codes and Monitoring* for details on error flags and restart bits.


C200H Masters must also be assigned Unit numbers. These numbers determine response to error processing and AR area error flags and restart bits. See *4-1 Masters and Slaves* for unit number switch settings and *7-2 Error Codes and Monitoring* for details on Error flags and Restart bits.

### Master Designations on C200H Slaves

The Master to which a C200H Slave is connected must be designated on the "type of Master" switch on each C200H Slave. See *Section 4* for details on switch settings.


**Example 1: C200H Masters and Slaves**

This example System shows word allocations for two C200H Masters, one on the CPU Rack and one on an Expansion I/O Rack, and four of the maximum possible five C200H Slaves. (The unallocated I/O words may be used as work words.)

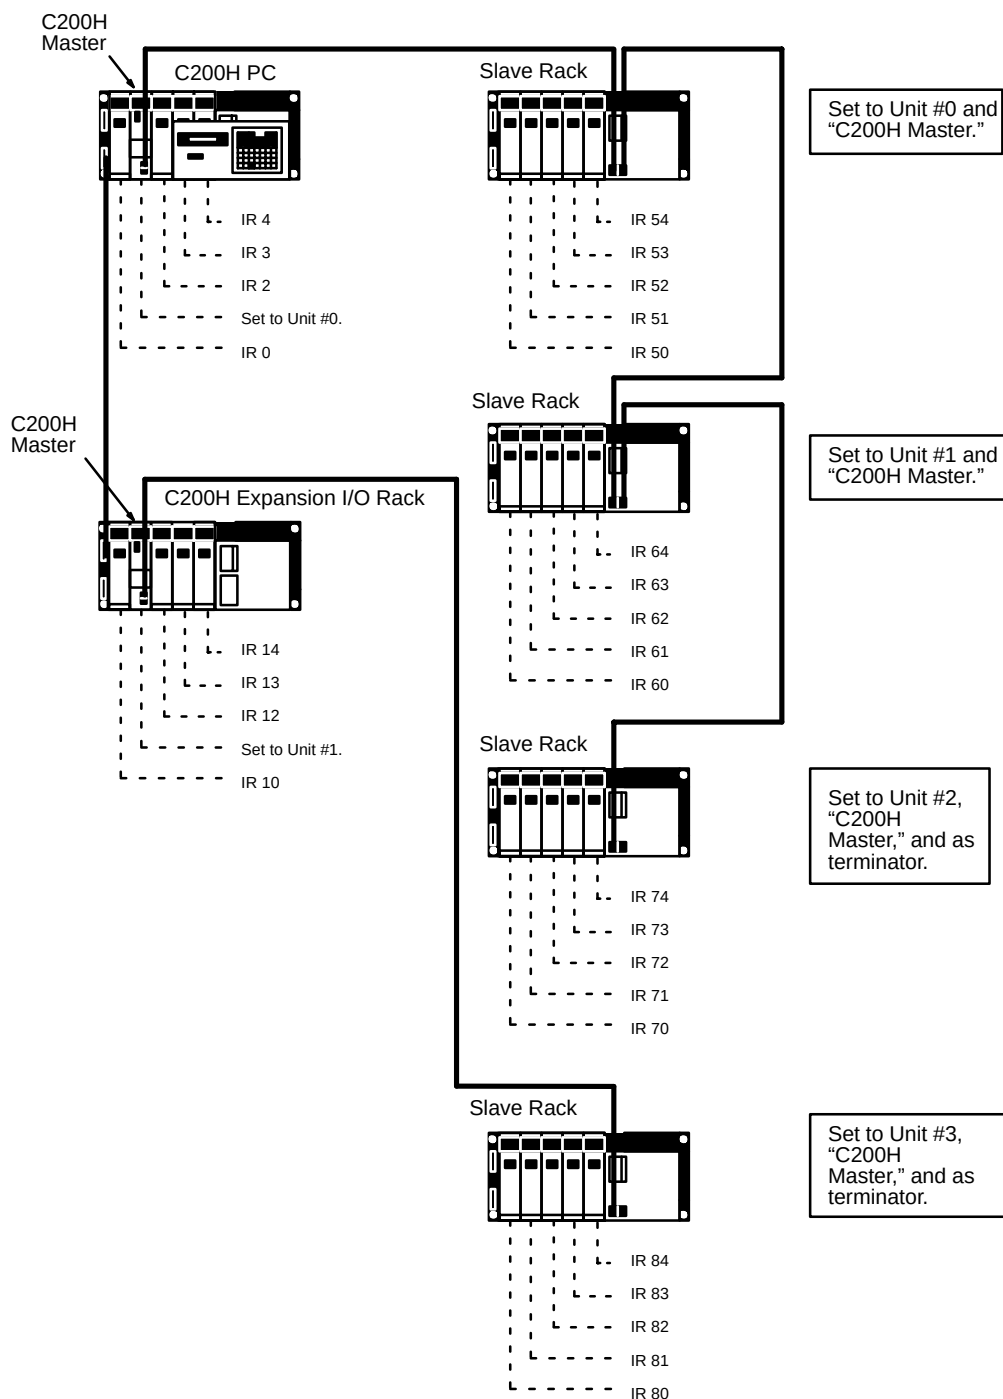


**Example 2: C200H Masters,  
Slaves, and Extra  
Expansion I/O Racks**

This example System shows word allocations for two C200H Masters, one on the CPU Rack and one on an Expansion I/O Rack, two of the maximum possible five C200H Slaves, and two extra Expansion I/O Racks. The extra Expansion I/O Racks are counted as two more Slaves in the maximum of five and automatically allocated word for unit numbers. (The unallocated I/O words may be used as work words.)

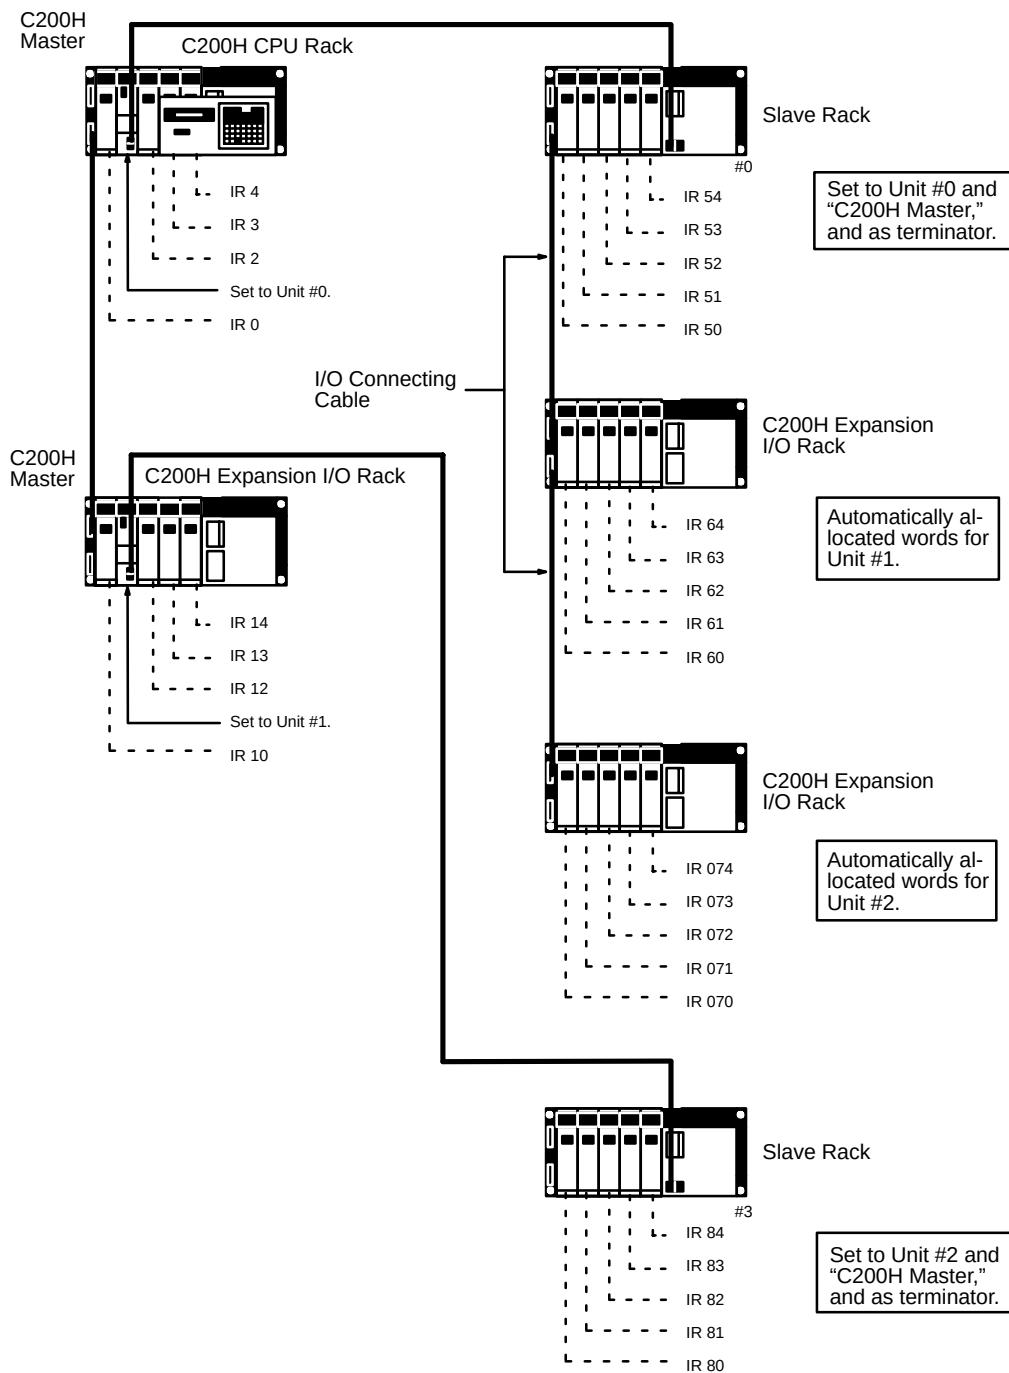

Example 3: C200H Masters and Remote Terminals

This example Systems shows word allocations for one C200H Master, and two of the maximum possible 32 Remote Terminals. As shown, the words actually allocated to Remote Terminals connected in C200H Master Subsystems are 200 higher than the settings. (Unallocated I/O words may be used as work words.)

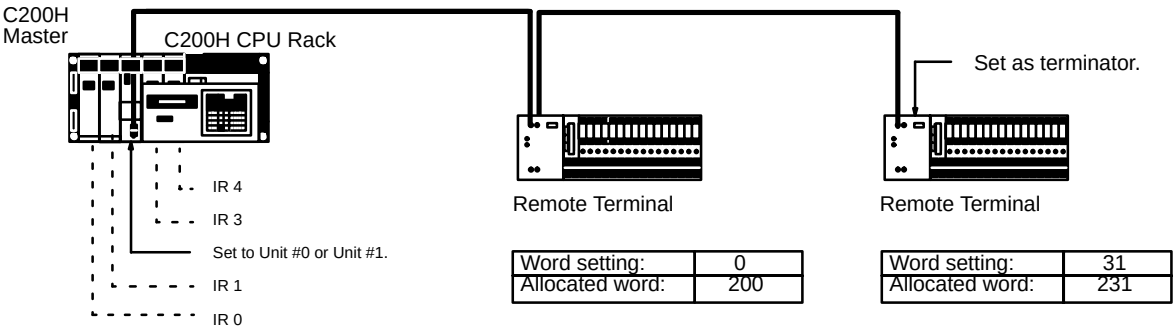

3-2-3 Combined Systems

C200H Masters and C500 Slaves


C500 Slaves connected to C200H Masters must be counted as two Slaves in counting the maximum possible Slaves connected to the Master. Each C500 Slave Rack is allocated the words shown in the following table. Word allocations overlap for consecutive unit numbers. Be sure that word allocations are not duplicated. Note that unit number 4 cannot be designated. Words will be allocated according to the C500 System, i.e., not according to slot words, but left to right to actually mounted I/O Units. The total number of words used by the Units mounted to a C500 Slave Rack must not exceed 20. Expansion I/O Racks cannot be connected to C500 Slave Racks.

| Unit number | Allocated words |
|-------------|-----------------|
| 0           | 50 to 69        |
| 1           | 60 to 79        |
| 2           | 70 to 89        |
| 3           | 80 to 99        |



**Example**


The following example shows the maximum number of C500 Slaves that can be connected to a C200H Master. Note that a C200H Slave could be connected to this System, either to another Master or in the present Master Sub-system, to bring the total number of Slaves controlled by the PC to 5 (C500 Slaves count as 2).

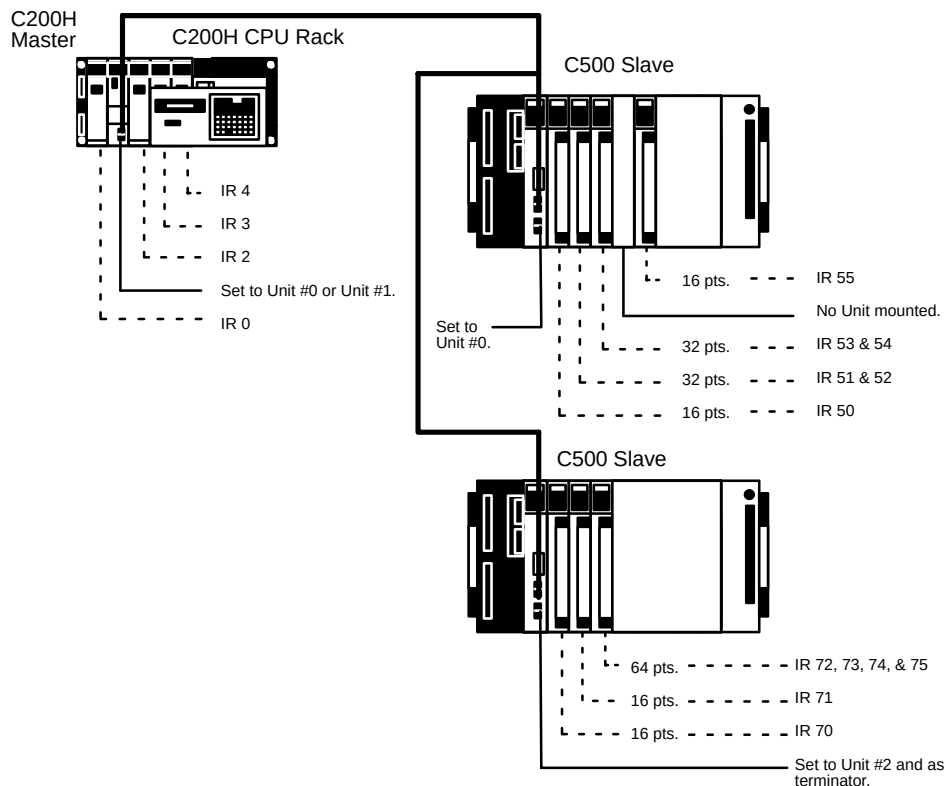**C500 Masters and C200H Slaves**

When C200H Slaves are attached to C500 Masters mounted on a C-Series PC, the normal limits for the number of various Units controllable from the PC apply (see 2-1 *Basic System*). Here the type of Master setting on the C200H Slaves must designate a Master other than C200H. Word allocations will be according to the C500 System, i.e., not according to slot words, but left to right to actually mounted I/O Units. Special I/O Units cannot be mounted to C200H Slave Racks connected to a C500 Master.

**C1000H Example**

Restrictions placed on Systems combining C500 Masters and C200H Slaves depend on the PC to which the Master(s) is mounted. Refer to 2-1 *Basic System* for details.

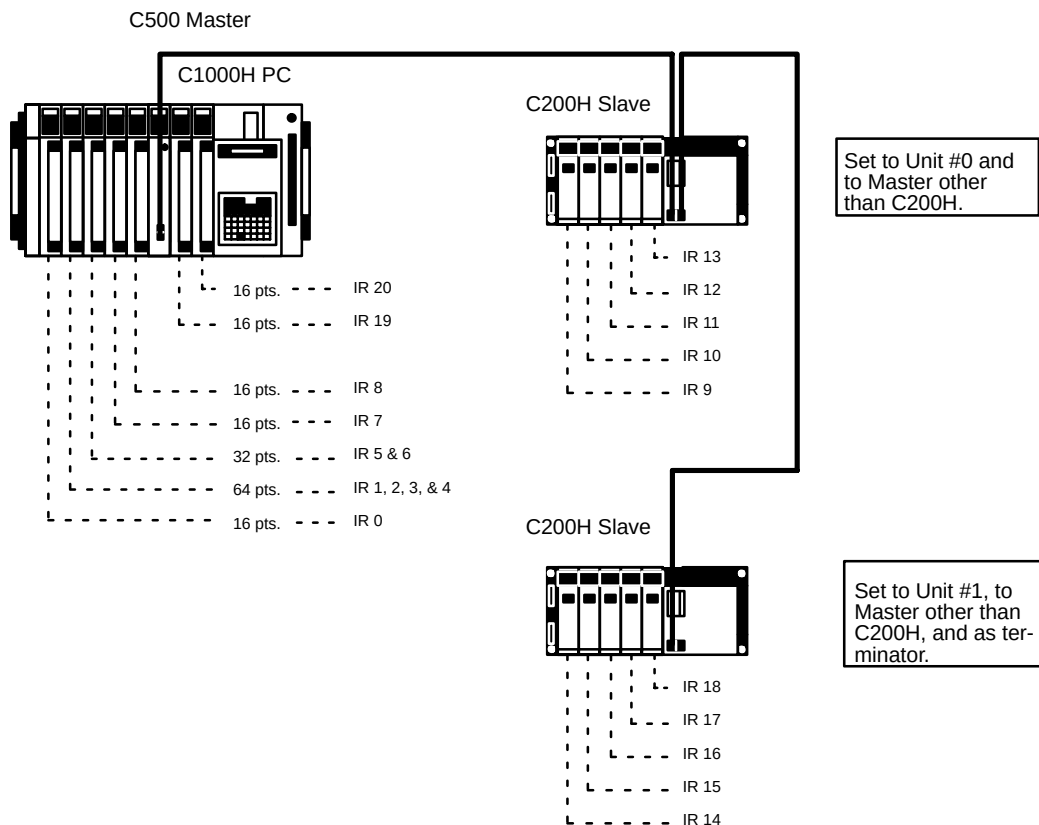**Caution**

When C200H Slave Racks are connected to Masters on PCs other than the C200H/C200HS, all Output Units on these Slave Racks will be treated as having at least 16 output points. disabling the Fuse-burnout and Alarm Detection Bits on Units that normally provide them (e.g., C200H-OD411, C200H-OD213, C200H-OD214, and C200H-OA221).

When using the C200H Backplane for 10 slots as a remote I/O Slave for the CVM1/CV500/CV1000/CV2000, only the 8 slots from the left can be used; the 9th and 10th slots from the left cannot be used.

## 3-3 Setting Procedure


Set the Units in the following order. This procedure must be carried out whenever Masters, Slaves, or Remote Terminals are added to the System.

- 1, 2, 3...** 1. Turn off the power, set the unit numbers of the Slaves and check the last I/O word being used by the PC. For a C1000H or C2000H System, always set Slave unit numbers in order starting from number 0. (See *Maximum Number of Connectable Units* under 2-1 *Basic System*.)
2. Set Remote Terminal words so that no words being used by the PC are used again. Also, do not set more than the available number of words. Doing so will result in an I/O error.
3. Connect the 2-conductor cables starting from each Master and working out to each Unit that will be a terminator. Be sure to connect positive to positive, negative to negative.

4. Set the terminator selector to the terminator setting for the last Unit for each Master. Check to confirm that no intermediate Units have been accidentally set as terminators.
5. Apply power to all Units except Masters in any convenient order. Apply power to the Masters last. A terminator check will be automatically executed when power is supplied to each Master. (All Slaves and Remote Terminals turned on after their Master will be ignored in the terminator check and will not be involved in System communications. Refer to 3-4 *Delayed Activation of Slaves* for an example program that activates System operation when a Slave is turned on.)
6. After the terminator check indicator(s) on the Master(s) goes out, enter the I/O table (see note 3) through the Programming Console and then verify the I/O table. If a terminator is not found, CPU WAIT'G will be displayed on the Programming Console. Once the I/O table has been entered, it is not necessary to reenter it each time power is turned on, unless there is a change in it.
7. After entering the I/O table, specify the word multipliers if you are using a C1000H and C2000H System. Word multipliers are not necessary in other Systems.
8. Begin operation in RUN or MONITOR mode.

- Note**
1. Once the I/O table has been generated, it is retained in the memory even while power is turned off. If I/O table creation is not possible following changes to C1000H and C2000H Systems, refer to 7-6 *I/O Table Creation Problems*.
  2. If the System does not operate properly after following the above procedure, refer to *Section 5 Error Processing*.
  3. Although C200H PCs will operate properly even if an I/O table is not created, creating one is highly recommended with a Remote I/O System to enable error messages. If an I/O table is not created, all Slaves turned on after their Master will be ignored in operations.
  4. If the Remote I/O System configuration is changed, regenerate the table.
  5. Once an I/O table has been created, operations will continue with only the Slaves to which power is being supplied, and any Slave that was originally turned off will be added to operations whenever it is turned on.

The following flowchart illustrates the above procedure.

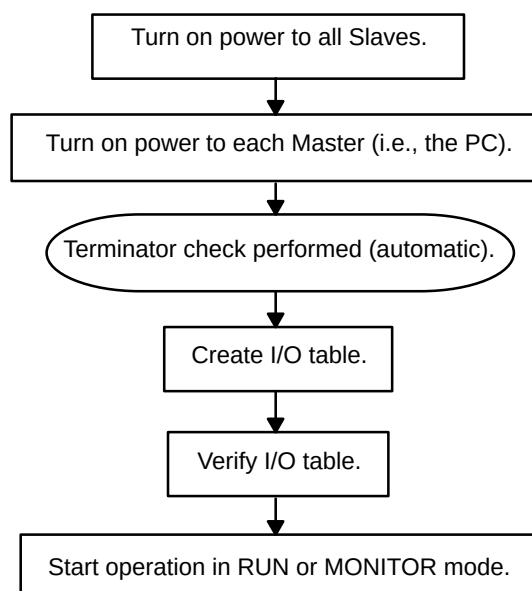

**Required Settings**

The following settings are required before operating the PC System.

| Unit             | Settings                                                  |
|------------------|-----------------------------------------------------------|
| C500 Masters     | CONTINUE/STOP                                             |
| C500 Slaves      | Unit number, terminator, output HOLD/STOP                 |
| C200H Masters    | Unit number, CONTINUE/STOP                                |
| C200H Slaves     | Unit number, terminator, output HOLD/STOP, type of Master |
| Remote Terminals | Word, terminator, output HOLD/STOP                        |


## 3-4 Delayed Activation of Slaves

The following examples illustrate program sections that can be inserted to start System operation when power to a Slave is turned on after its Master has been turned on. Note, however, that the normal procedure, i.e., turning on all Slaves before their Masters, must be followed when creating the I/O table.

### Example 1: Load Cutoff (C500 PCs)


This program section is used when using ladder diagram programming for C500 Systems, and can be inserted at the beginning of the program for normal Systems and at the beginning of the main program for high-speed Systems. When an I/O verification error occurs using this program section, the load is cut off and FALS(06) 00 is executed until the error is cleared.

**Note** All inputs will be refreshed for this program section.

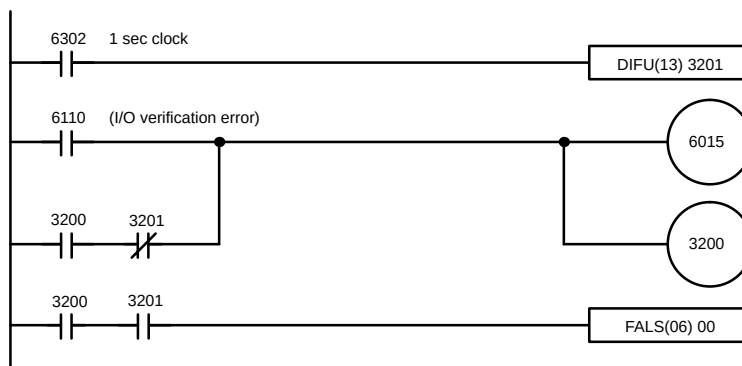


**Example 2: JMP/JME  
Programming (C1000H and  
C2000H PCs)**

The section of the following program between JMP and JME will not be executed until the I/O verification error is cleared (i.e., until all Slaves are turned on). The initial and main programs will thus be executed only after all Slaves have been turned on.

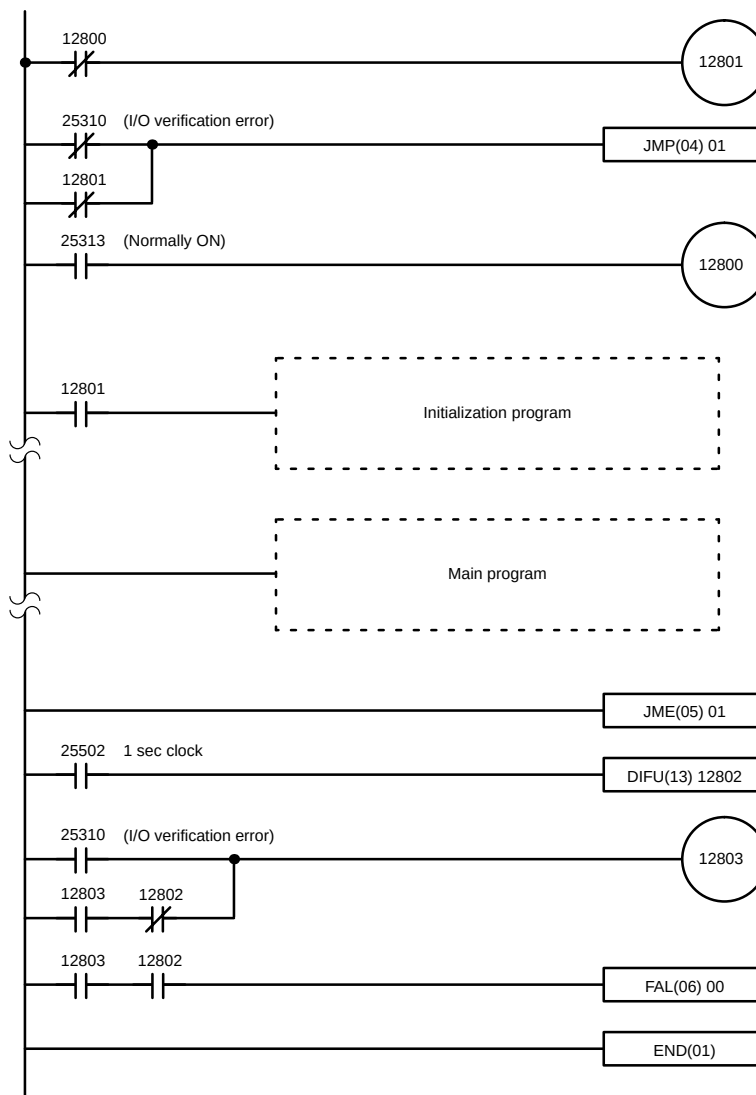

**Example 4: JMP/JME Programming (C200H PCs)**

The initialization and main programs in the following ladder diagram will not be executed until the remote I/O error and I/O verification error have been cleared (i.e., until all Slaves have been turned on). Errors are cleared with FAL(06) 00. The type of programming in this example is only effective after an I/O table has been created.

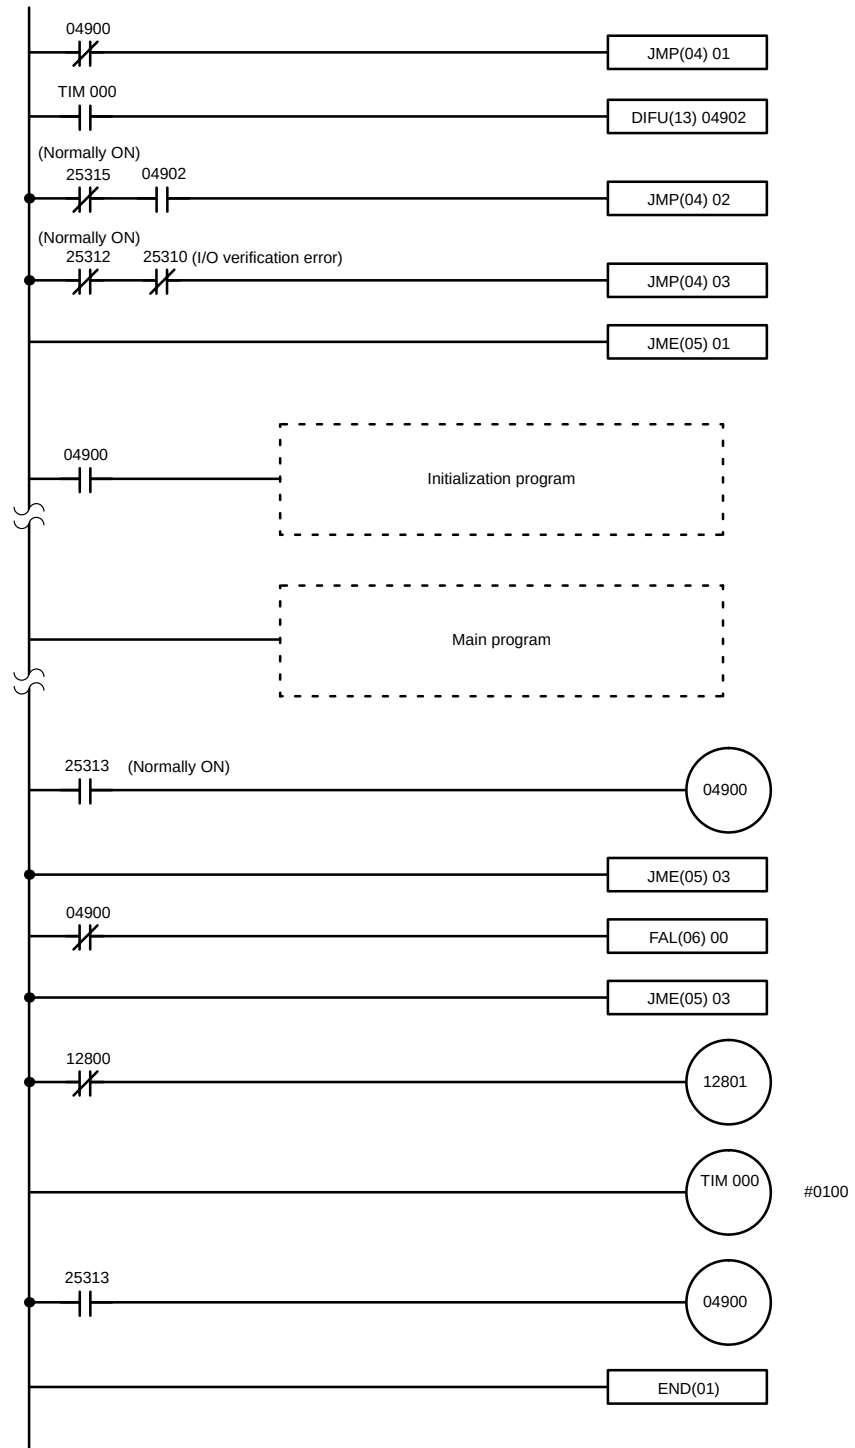

## SECTION 4


# Unit Components and Switch Settings

Subsections 4-1 through 4-2 provide the names and functions of the indicators, switches, and selectors of Masters, Slaves, and Remote Terminals.

|       |                          |    |
|-------|--------------------------|----|
| 4-1   | Masters and Slaves ..... | 46 |
| 4-1-1 | C500 Master .....        | 46 |
| 4-1-2 | C500 Slave .....         | 48 |
| 4-1-3 | C200H Master .....       | 50 |
| 4-1-4 | C200H Slaves .....       | 51 |
| 4-2   | Remote Terminal .....    | 53 |

4-1 Masters and Slaves

4-1-1 C500 Master

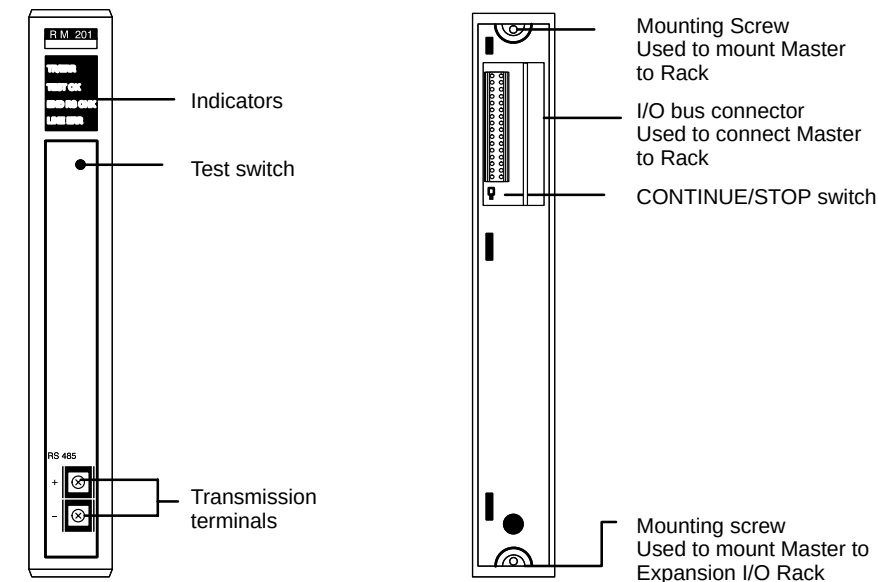


Indicators

|            |                                                                                                                 |
|------------|-----------------------------------------------------------------------------------------------------------------|
| TR/ERR     | Flashes during normal transmission.                                                                             |
|            | Lights for transmission errors.                                                                                 |
|            | Goes out for CPU Unit errors (via watchdog timer monitoring) or when waiting for I/O table registration.        |
| TEST OK    | Lights for normal endings to transmission line tests executed via TEST switch.                                  |
|            | Remains unlit for errors found in transmission line tests executed via TEST switch.                             |
| END RS CHK | Lit until terminator is found.                                                                                  |
|            | Flashes if more than one terminator is found. Refer to 7-7 <i>Slave Unit Numbers with Multiple Terminator</i> . |
|            | Goes out if one and only one terminator is found.                                                               |
| LINE ERR   | Lights for transmission line errors.                                                                            |
|            | Remains unlit while transmission line remains normal.                                                           |



Switches


|               |                                                                                                                                                                                         |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TEST          | Pressed to test the transmission line when the PC is in PROGRAM mode. Test is repeatedly performed while button is held down. This switch is also pressed to clear transmission errors. |
| CONTINUE/STOP | Used to select whether or not transmission is to be STOP continued for transmission errors or I/O bus errors at Slaves.                                                                 |

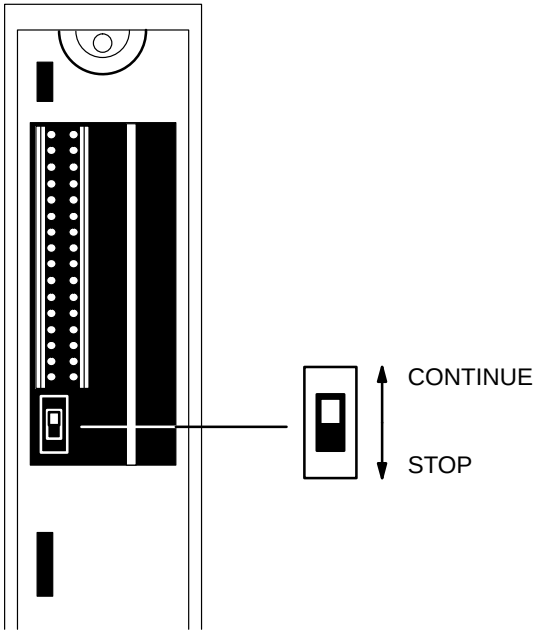

**CONTINUE/STOP Switch** This switch is used to set either CONTINUE or STOP mode to designate response to transmission errors. When a transmission error occurs, data transmission to Slaves will continue in CONTINUE mode and stop in STOP mode. Transmission errors for Masters include BCC errors, no-Slave-response errors, and transmission line check errors.

|          |                                                                                                                                     |
|----------|-------------------------------------------------------------------------------------------------------------------------------------|
| CONTINUE | Communications with Slaves continued for transmission errors. Normal operation continued after error cleared.                       |
| STOP     | Communications with Slaves discontinued for transmission errors. Refer to <i>Section 5 Error Processing</i> for recovery procedure. |


4-1-2 C500 Slave

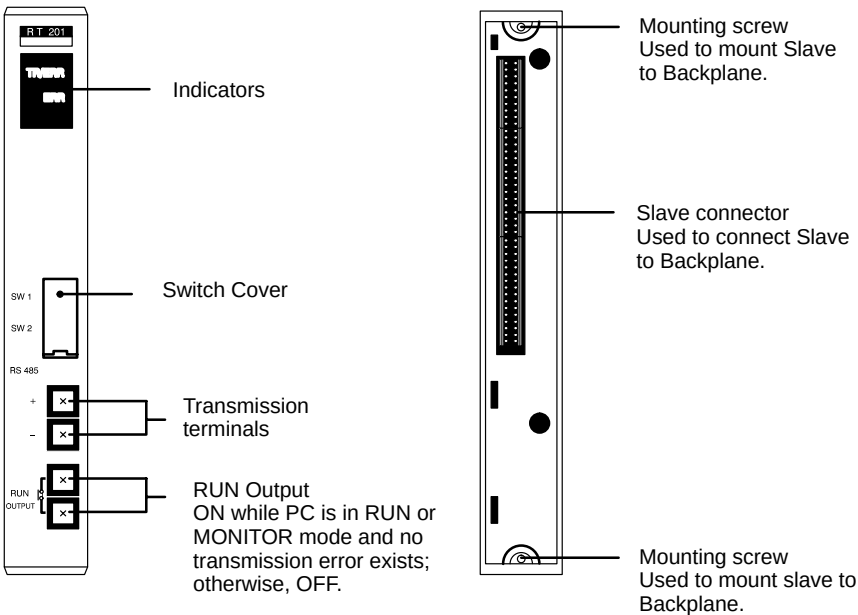

Indicators

|        |                                                                                                             |
|--------|-------------------------------------------------------------------------------------------------------------|
| TR/ERR | Flashes during normal transmission.                                                                         |
|        | Lights when on standby or for transmission errors.                                                          |
|        | Goes out for CPU Unit errors (via watchdog timer monitoring).                                               |
| ERR    | Lights for I/O bus errors at Slave or when PC detects discrepancy in inputs and outputs connected to Slave. |
|        | Remains unlit during normal Slave I/O operation.                                                            |

Remove the switch cover to access the DIP switch and terminator switch. Set these as shown on the following. Setting the terminator switch to ON sets the termination resistance.

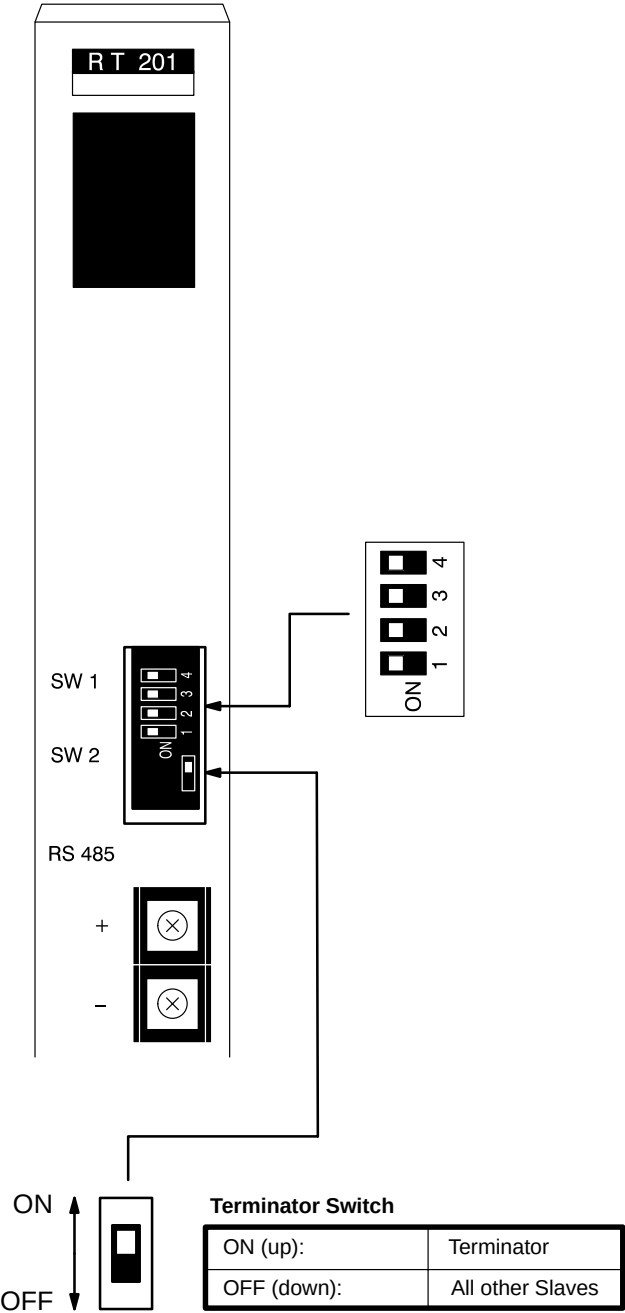

## Pins 1 to 3: Unit Number

| Unit no. | Pin settings |       |       |
|----------|--------------|-------|-------|
|          | Pin 1        | Pin 2 | Pin 3 |
| 0        | OFF          | OFF   | OFF   |
| 1        | ON           | OFF   | OFF   |
| 2        | OFF          | ON    | OFF   |
| 3        | ON           | ON    | OFF   |
| 4        | OFF          | OFF   | ON    |
| 5        | ON           | OFF   | ON    |
| 6        | OFF          | ON    | ON    |
| 7        | ON           | ON    | ON    |


**Note** Unit numbers 0 through 7 are used in C1000H and C2000H Systems. Use numbers 0 and 2 or numbers 1 and 3 for C500 Slaves attached to a C200H Master (to prevent overlapping word assignments). All other PC Systems use only unit numbers 0 and 1.

## Pin 4: Output HOLD/STOP Mode

|                |                                                      |
|----------------|------------------------------------------------------|
| OFF: STOP mode | All output words set to OFF for transmission errors. |
| ON: HOLD mode  | All output words retain status transmission errors.  |

Transmission errors for Slaves include errors in data from the Master and no-data errors. Note that HOLD mode is not effective for all errors detected by the CPU Unit.

## 4-1-3 C200H Master

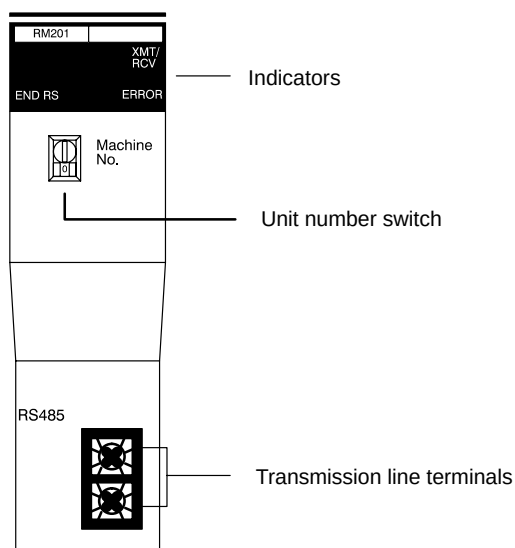

## Indicators

|                   |                                                                                                                                                                                                                  |                                                                                                                                                                                                                       |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>LINE ERROR</b> | Lights for transmission line errors. Remains unlit while transmission line remains normal.                                                                                                                       |                                                                                                                                                                                                                       |
| <b>XMT/RCT</b>    | Setting of 0 or 1 on unit number switch                                                                                                                                                                          | Flashes when any of the Slaves or Remote Terminals in the Master Subsystem are transmitting normally. Goes out if all Slaves and Remote Terminals are abnormal or for errors occurring in the CPU Unit refresh cycle. |
|                   | Setting of 2 or 3 on unit number switch                                                                                                                                                                          | Goes out if an error occurs in any Slave or Remote Terminal transmitting data or for errors occurring in the CPU Unit refresh cycle. All transmissions will be stopped when this indicator goes out.                  |
| <b>ERROR</b>      | Lights if an error occurs in any Slave or Remote Terminal transmitting data or for errors occurring in the refresh cycle. Remains unlit as long as all Slaves and Remote Terminals transmitting data are normal. |                                                                                                                                                                                                                       |
| <b>END RS</b>     | Lights at the beginning of operation until a terminator is detected. Flashes if more than one terminator is found. Refer to 7-7 <i>Slave Unit Numbers with Multiple Terminator</i> .                             |                                                                                                                                                                                                                       |


## Switches and Selectors

|                                |                                                                                                                                                                                                                                           |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unit Number<br>("Machine No.") | Set to 0 or 2 to set Unit #0; 1 or 3 to set Unit #1. If 0 or 1 is used, transmission will continue even if a transmission error occurs. If 2 or 3 is used, transmission to all Slaves will be interrupted if a transmission error occurs. |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

The only setting necessary for C200H Masters is the unit number. Power to the PC must be turned off when setting Master unit numbers. The unit number determines AR area Error flags and Restart bits (see 7-2 *Error Codes and Monitoring*).

## 4-1-4 C200H Slaves

Two models of C200H Slave are available: C200H-RT201 and C200H-RT202. They differ only in the power supply. The C200H-RT201 is switchable between 100/110 VAC and 200/220 VAC; the C200H-RT202 uses 24 VDC. Indicators and switches are the same for both. The RT201 is shown below.

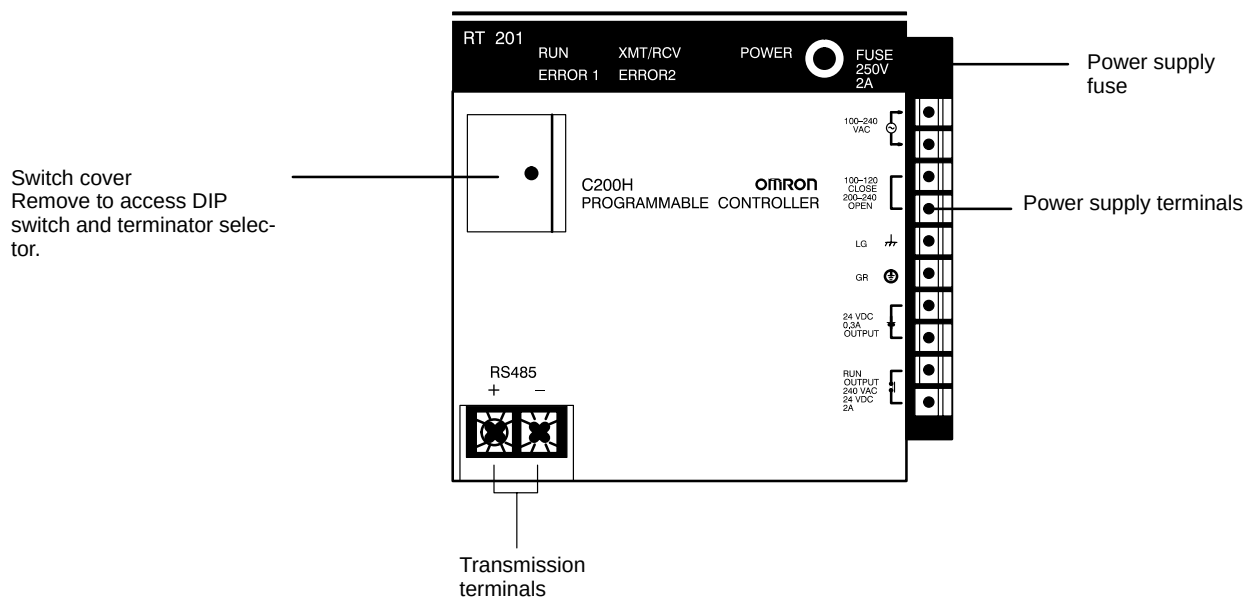


**Indicators**

C200H Slaves indicators function together to show the status of the System. The RUN indicator is controlled by the mode setting on the CPU Unit.

| XMT/RCV | ERROR1  | ERROR2  | RUN     | Status                           | Meaning                                                                                                    |
|---------|---------|---------|---------|----------------------------------|------------------------------------------------------------------------------------------------------------|
| not lit | not lit | not lit | not lit | System not started or power off. | Master is still testing System or power off. Power has not yet been turned on.                             |
| flash   | not lit | not lit | ---     | Normal transmission              | Normal transmissions are occurring between Slave and Master.                                               |
| ---     | lit     | ---     | not lit | Transmission error               | Error has occurred in transmissions with Master.                                                           |
| ---     | lit     | lit     | not lit | I/O bus error                    | Error has occurred in I/O bus connecting Slaves to I/O Units.                                              |
| flash   | flash   | lit     | ---     | I/O verification error           | An I/O Unit configuration of Slave Rack has changed.                                                       |
| flash   | lit     | lit     | not lit | I/O setting error                | An I/O Unit designation on the Slave Rack is wrong.                                                        |
| flash   | lit     | flash   | ---     | Expansion I/O Rack missing.      | An Expansion I/O Rack connected to the Slave Rack with I/O Connecting Cable cannot be confirmed by the PC. |

**C200H Slave Switches**

The DIP switch and terminator selectors are accessed by removing the switch cover on the front of the Slave. Use a regular screwdriver to open the cover if necessary. Always be sure that the PC and Slave power are turned off before setting the switches.

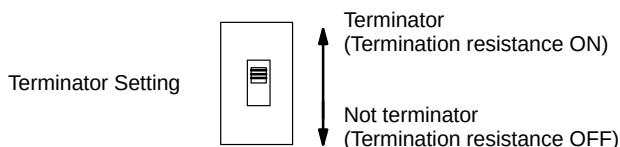**Terminator Selector****DIP Switch****Pins 1 through 3: Unit Number**

| Unit number* | Pin 1 | 2   | 3   |
|--------------|-------|-----|-----|
| 0            | OFF   | OFF | OFF |
| 1            | OFF   | OFF | ON  |
| 2            | OFF   | ON  | OFF |
| 3            | OFF   | ON  | ON  |
| 4            | ON    | OFF | OFF |
| 5            | ON    | OFF | ON  |
| 6            | ON    | ON  | OFF |
| 7            | ON    | ON  | ON  |

\*Unit numbers 0 and 1 can be set for C120 and C500 Systems; unit numbers 0 through 4 for C200H Systems; and 0 through 7 for C1000H and C2000H Systems.

## Pin 4: Type of Master

|     |                         |
|-----|-------------------------|
| ON  | Master other than C200H |
| OFF | C200H Master            |

## Pin 5: Output HOLD/STOP Mode


|     |                                                                             |
|-----|-----------------------------------------------------------------------------|
| ON  | HOLD mode, i.e., all output words retain status in for transmission errors. |
| OFF | STOP mode, i.e., all output words set to OFF for transmission errors.       |

## Pin 6:

Pin 6 should always be set to OFF.

## 4-2 Remote Terminal

The procedure for setting the switches in the Remote Interface is exactly the same as in the Remote Terminals. Only a Remote Interface is shown below.

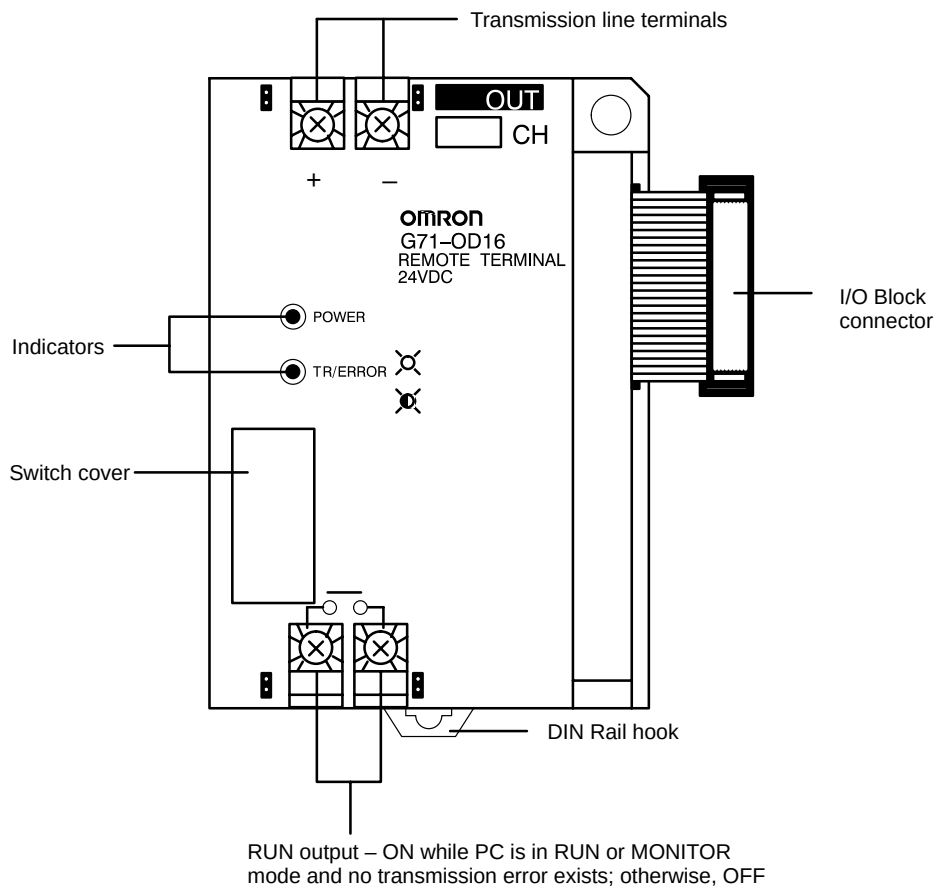


## Indicators

|                 |                                                                                                                                                      |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>POWER</b>    | Lit when power is supplied and Remote Terminal is operational. Not lit for power irregularities.                                                     |
| <b>TR/ERROR</b> | Flashes during normal transmission. Lights when on standby or for transmission errors. Goes out for CPU Unit errors (via watchdog timer monitoring). |

Switches

Remove the switch cover to access the DIP switch and terminator switch. Set these as shown below. The switch cover is in a slightly different position on G72C Remote Terminals.

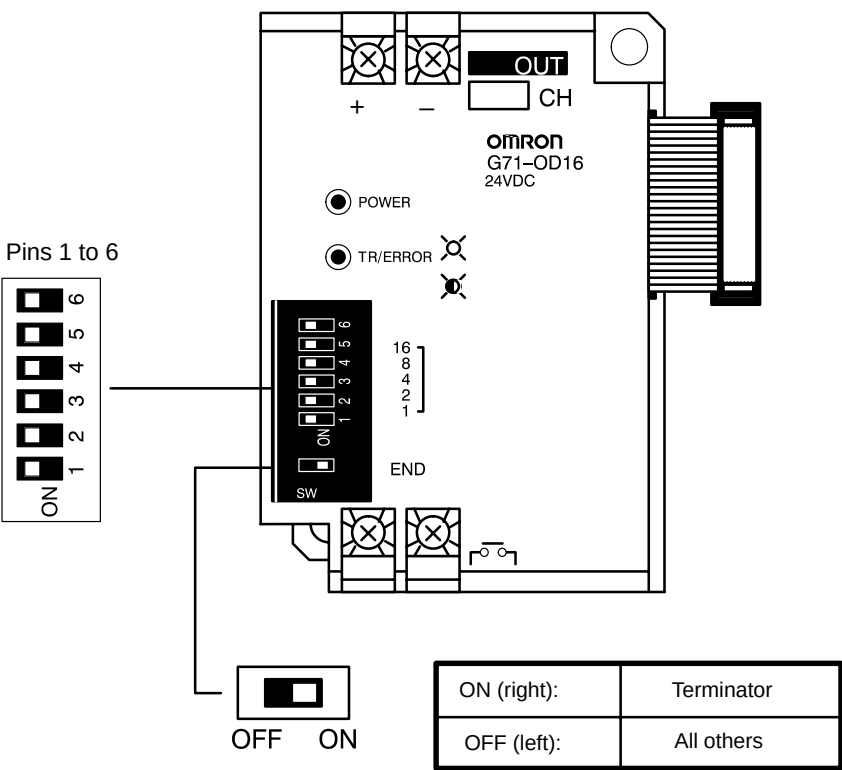

Pins 1 to 5: Word Setting

Word numbers are computed as binary numbers with pins 1 through 5 representing the one's place through the 16's place. For example, turning on all five pins would set word 31, i.e.,  $2^0 + 2^1 + 2^2 + 2^3 + 2^4 = 1 + 2 + 4 + 8 + 16 = 31$ . Pin 5 must be set OFF for all Remote Terminals, in C120 Systems, i.e., the highest word that can be set is 15.

The word actually allocated to a Remote Terminal depends on the PC that controls it and is computed as shown in the following table.

| PC                | Allocated word                                  |
|-------------------|-------------------------------------------------|
| C120 and C500     | Same as switch setting                          |
| C1000H and C2000H | 32 x word multiplier of Master + switch setting |
| C200H             | Switch setting + 200                            |

Pin 6: Output HOLD/STOP Mode

|                |                                                         |
|----------------|---------------------------------------------------------|
| OFF: STOP mode | All output words set to OFF for transmission errors.    |
| ON: HOLD mode  | All output words retain status for transmission errors. |

Transmission errors for Remote Terminals are the same as those for Slaves.



## SECTION 5

# System Installation


This section explains how to install Wired I/O Systems and includes information on dimensions, differences between some of the Units, and wiring.

|       |                                        |    |
|-------|----------------------------------------|----|
| 5-1   | Dimensions .....                       | 56 |
| 5-1-1 | Masters and Slaves .....               | 56 |
| 5-1-2 | Remote Interface (Unit: mm) .....      | 58 |
| 5-1-3 | I/O Blocks .....                       | 59 |
| 5-1-4 | G72C Remote Terminals (Unit: mm) ..... | 59 |
| 5-1-5 | Link Adapters .....                    | 60 |
| 5-2   | Differentiating Units .....            | 60 |
| 5-3   | I/O Block Connections .....            | 61 |
| 5-4   | Mounting and Wiring Precautions .....  | 62 |
| 5-5   | Wiring .....                           | 64 |


## 5-1 Dimensions

### 5-1-1 Masters and Slaves


C500 Master (Unit: mm)

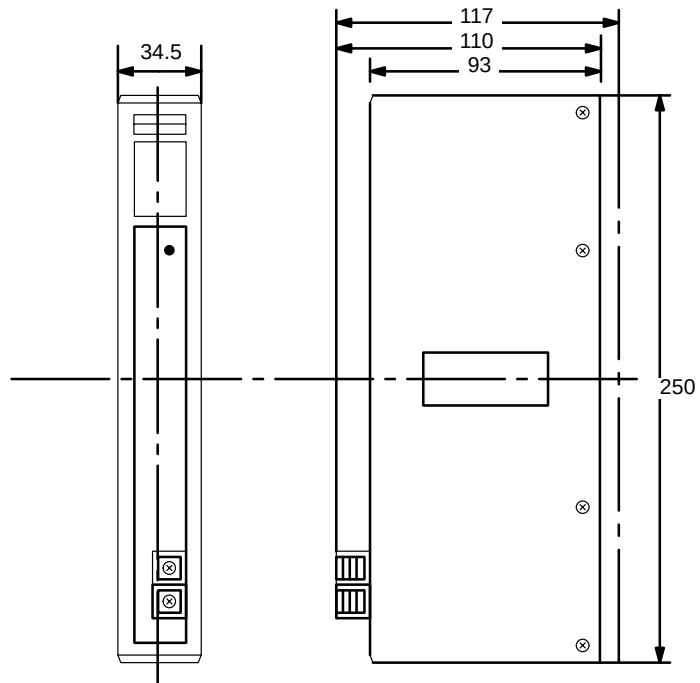


C500 Slave (Unit: mm)

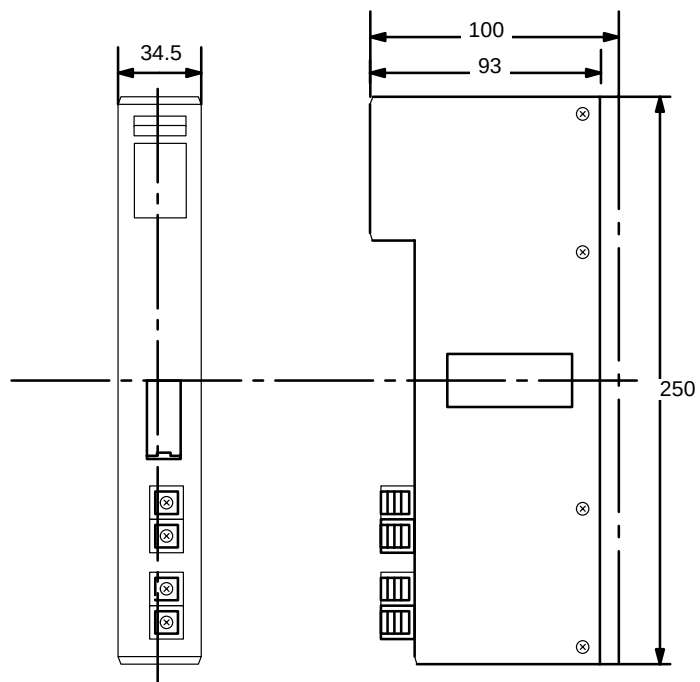

C200H Master (Unit: mm)

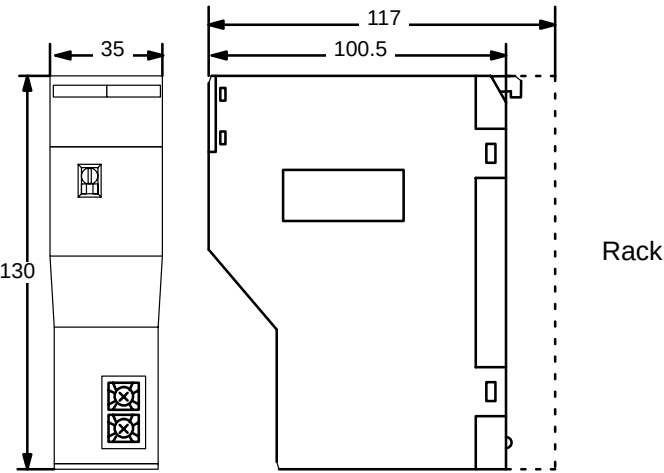

C200H Slave (Unit: mm)

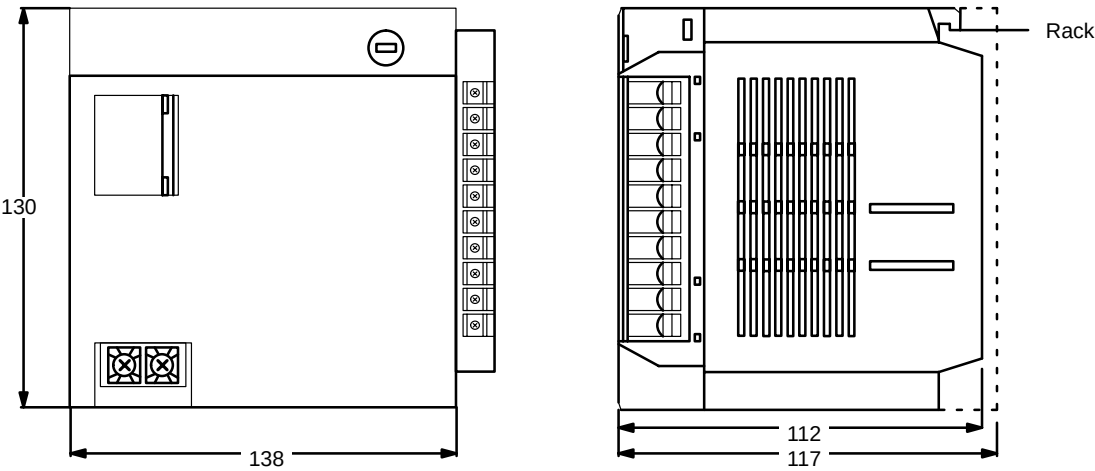


C200H Racks

C200H Racks provide either 3, 5, 8, or 10 slots and are used to mount the C200H PC (CPU Racks), Slaves and other Units (Slave Racks), or other Units without a Slave (Expansion I/O Racks). The appearance and parts of the Rack are shown below. Rack and Slave model numbers are as follows:

|              |                                        |                |
|--------------|----------------------------------------|----------------|
| C200H Slaves | 100 to 120/200 to 240 VAC (switchable) | C200H-RT201    |
|              | 24 VDC                                 | C200H-RT202    |
| Racks        | 3 slots                                | C200H-BC031-V2 |
|              | 5 slots                                | C200H-BC051-V2 |
|              | 8 slots                                | C200H-BC081-V2 |
|              | 10 slots                               | C200H-BC101-V2 |


C200H Rack (Unit: mm)

Dimensions for mounting holes in the following diagram have 0.2 mm tolerances.

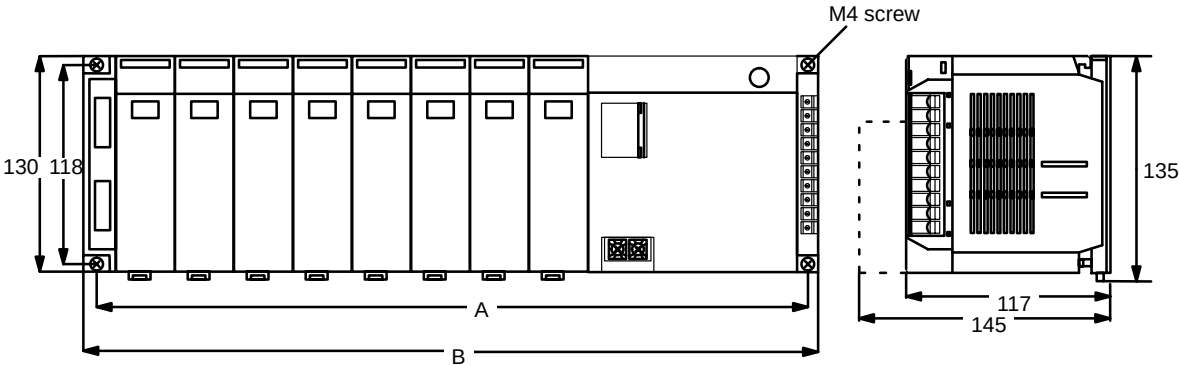


| Rack Lengths   | A   | B   |
|----------------|-----|-----|
| C200H-BC031-V2 | 246 | 260 |
| C200H-BC051-V2 | 316 | 340 |
| C200H-BC081-V2 | 421 | 435 |
| C200H-BC101-V2 | 491 | 505 |

5-1-2 Remote Interface (Unit: mm)

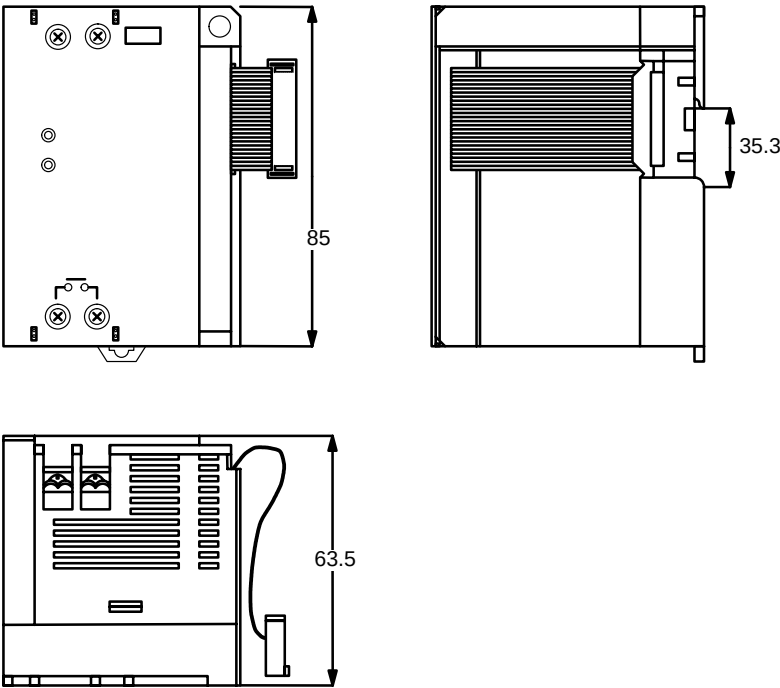


### 5-1-3 I/O Blocks


#### Input Block (Unit: mm)

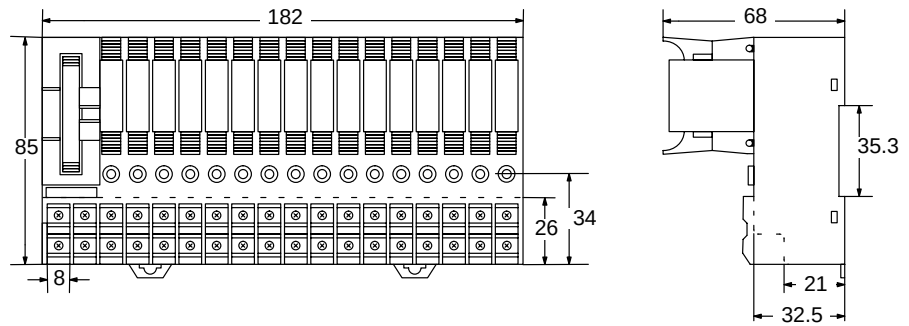


#### Output Block (Unit: mm)

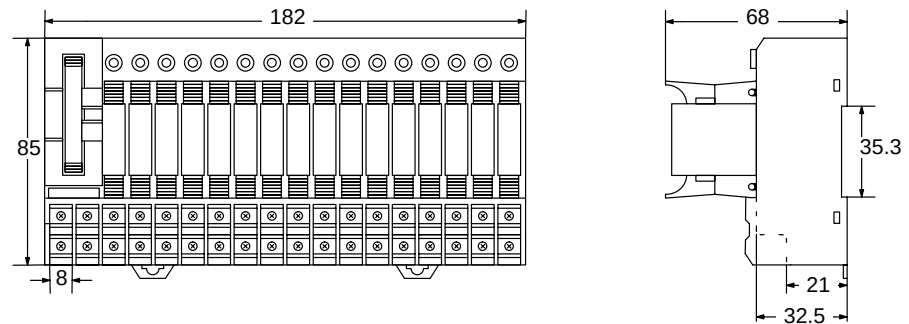

### 5-1-4 G72C Remote Terminals (Unit: mm)

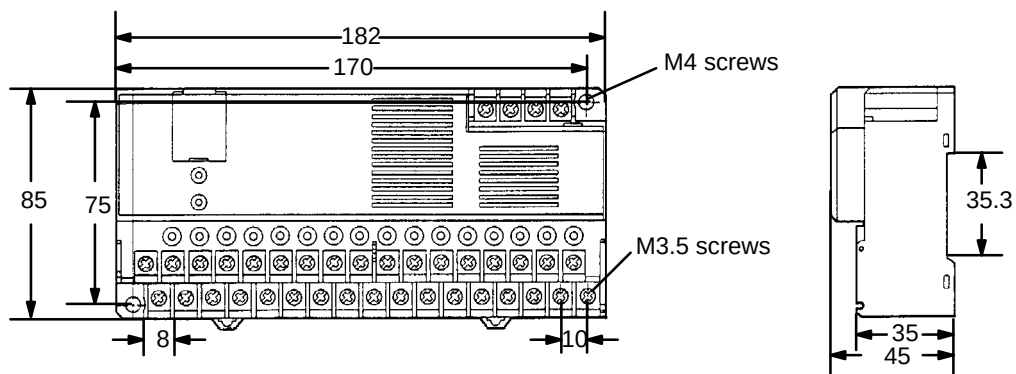


5-1-5     Link Adapters

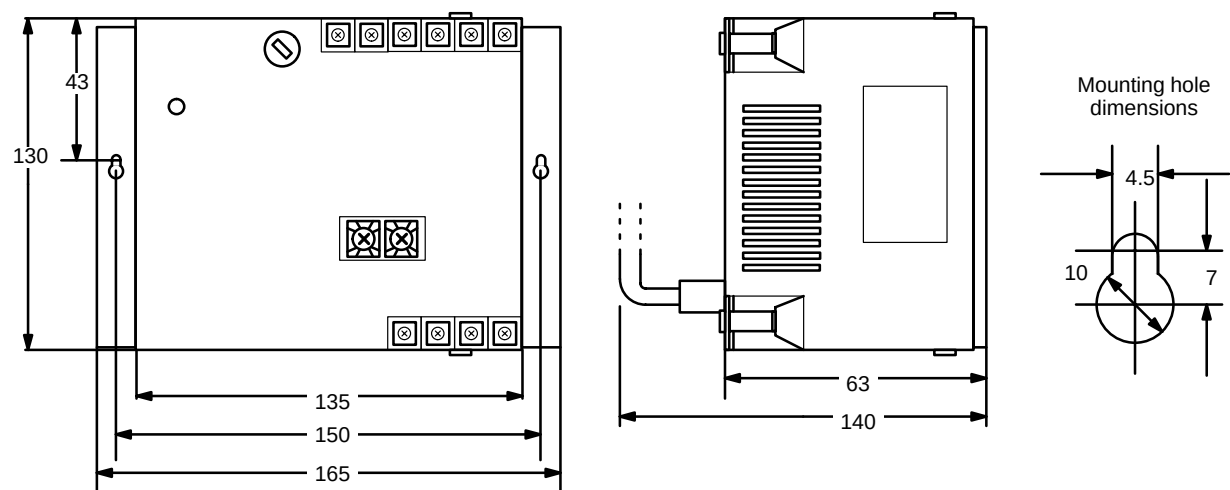

Power Supply Wiring  
Precautions

Use thick cables (1.25 mm<sup>2</sup> min.) to prevent against voltage drops.

M4 self-rising terminals screws are used for the terminal block. When wiring to the terminal block, use crimp terminals for M4 screws. Do not connect stranded wires directly to the terminal block.



Tighten the screws on the terminal block to a torque of 1.2 N • m.

5-2     Differentiating Units

Nameplate, LED, and relay case colors are used to differentiate between Input and Output Blocks and between AC and DC Input Blocks as shown in the following table.


| ---          |      | Nameplate | LEDs  | Relay Case |
|--------------|------|-----------|-------|------------|
| Input Blocks | (DC) | Red       | Green | Green      |
|              | (AC) | Red       | Red   | Red        |
| Output Block | (DC) | Yellow    | Green | Clear      |

I/O Block nameplates are color matched with PC I/O Units.


LED positions and relay orientation also differ between Input and Output Blocks and can be used to differentiate between them. Relays are also positioned to assist in following signal flow.

## 5-3 I/O Block Connections


### Input Block

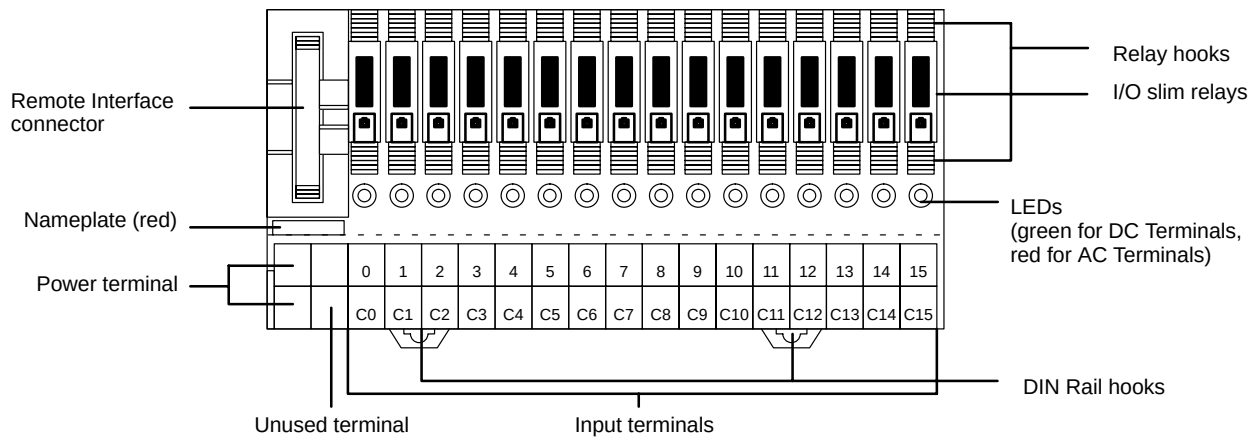


### Internal Connections

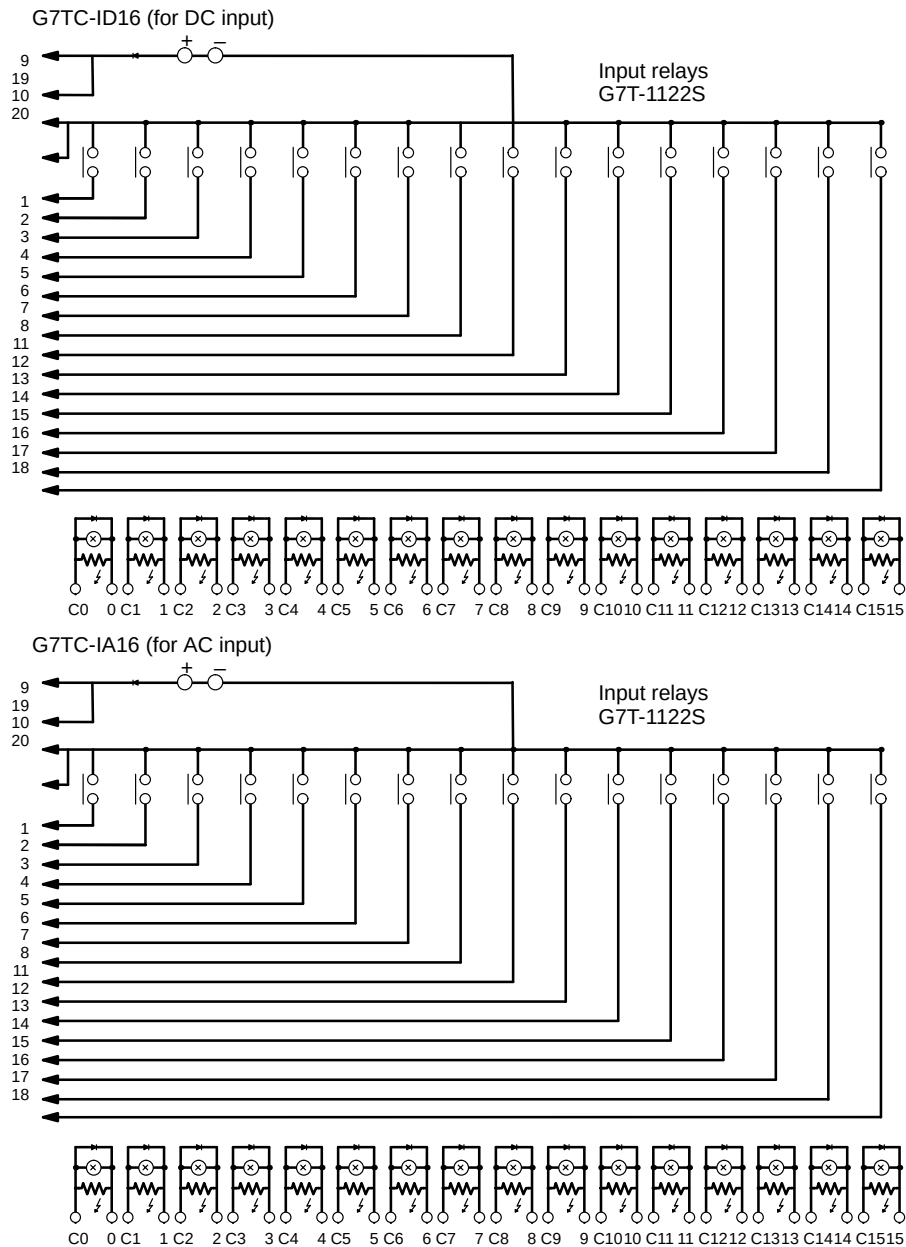

## Output Block

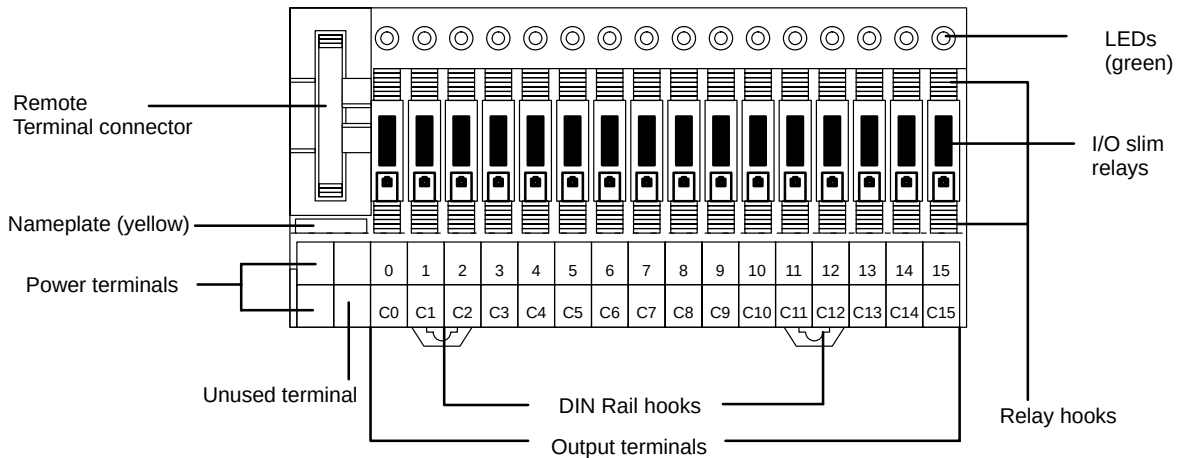

## Internal Connections

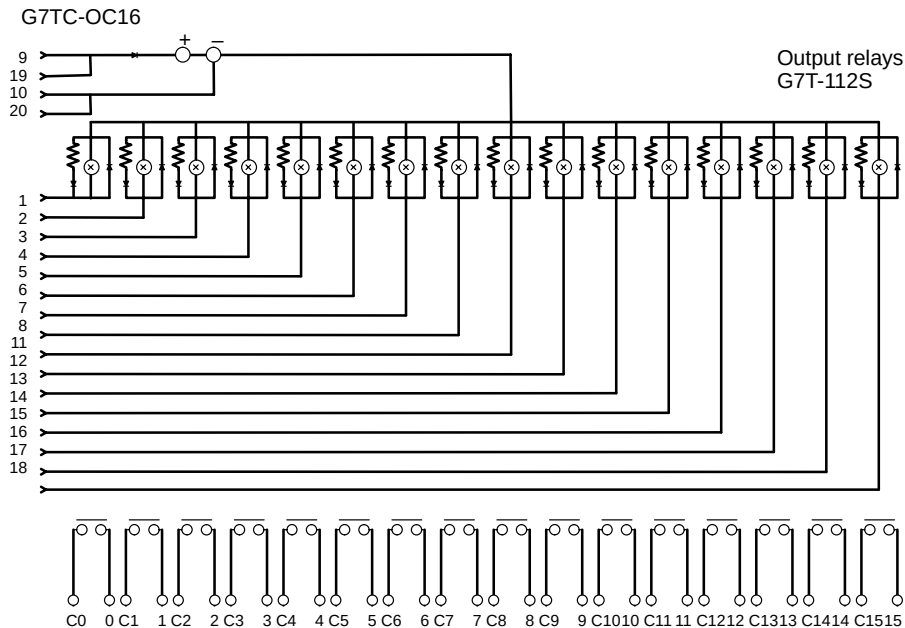

# 5-4 Mounting and Wiring Precautions

## Mounting Remote Interface and I/O Blocks


Remote Interface and I/O Blocks are generally mounted to DIN Rail using two End Plates (model number PFP-M). Four short bars are provided for common points. Output capacity limits the number of common point to four. For outputs, do not connect the same terminal to more than one other terminal. Input terminals can be connected to more than one other terminal as necessary.

Press firmly on the front of relays until the hooks are completely engaged. Improper engagement can cause errors or overheating.


Unlabeled terminals have no electrical connections; use them for repeater terminals.




### C500 Remote I/O Units

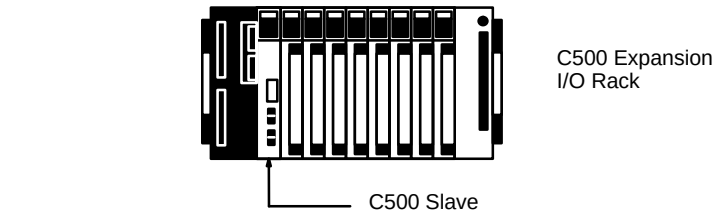

A Master and a Slave cannot be mounted to the same Rack

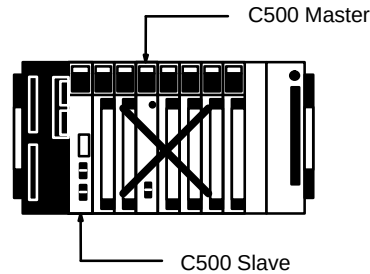

A CPU Rack cannot be connected directly to a Slave Rack; i.e., any Slave Rack containing a Slave must be connected through the Slave. An Expansion I/O Rack cannot be connected to a Slave Rack.

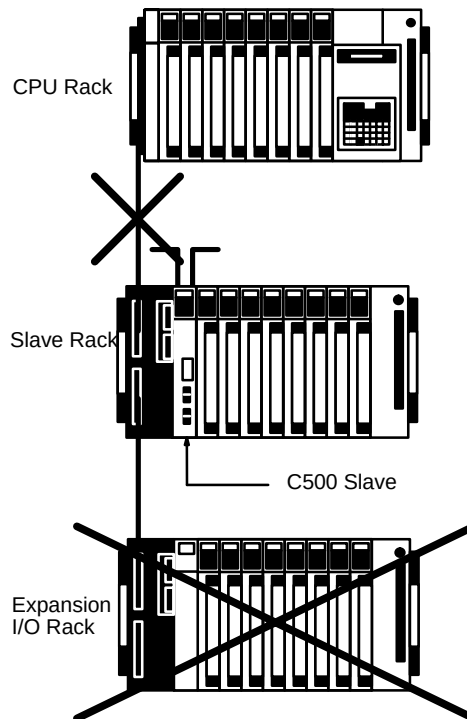


### C200H Remote I/O Units

- 1, 2, 3... 1. Do not mount the C200H Master to either of the rightmost two slots on the CPU Rack. Doing so will prevent mounting devices directly to the CPU Unit.
2. Do not mount the C200H Master to a Slave Rack or to an Expansion I/O Rack connected to a Slave Rack.
3. Slaves must be connected directly to the Master or another Slave. Do not connect the Slave Rack with I/O Connecting Cable.
4. Special I/O Units cannot be used on C200H Slave Rack connected to any Master other than a C200H Master.


## 5-5 Wiring

### Transmission Lines

Masters, Slaves and Remote Interfaces are connected using 2-conductor cable in the manner shown below.


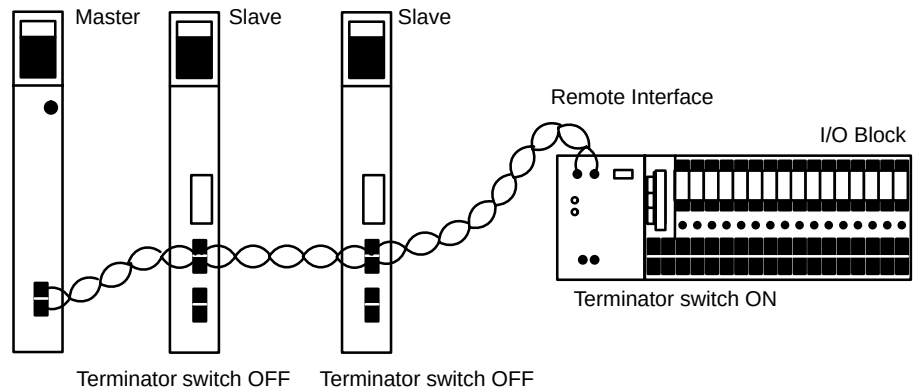


- 1, 2, 3...**
1. All 2-conductor cable used for connections must be 0.75 mm VCTF (vinyl cabtire fiber cable).
  2. Connect positive to positive, negative to negative.
  3. Do not wire a Master directly to more than one other Unit; i.e., start wiring at each Master and continue in order through the last Unit at the other end of each line.
  4. Set the last Unit as the terminator.
  5. Do not branch the wiring at a Slave; i.e., wire a Slave in series to a maximum of two other Units, one before it and one following it.
  6. The total cable length must be 200 meters or less from each Master to its terminator.
  7. Do not run transmission lines parallel to or in the vicinity of high-voltage or high-current lines. (Running transmission lines with normal I/O lines or normal power lines presents no problem.)
  8. RS-485 interfaces are used for transmission lines, as shown below.

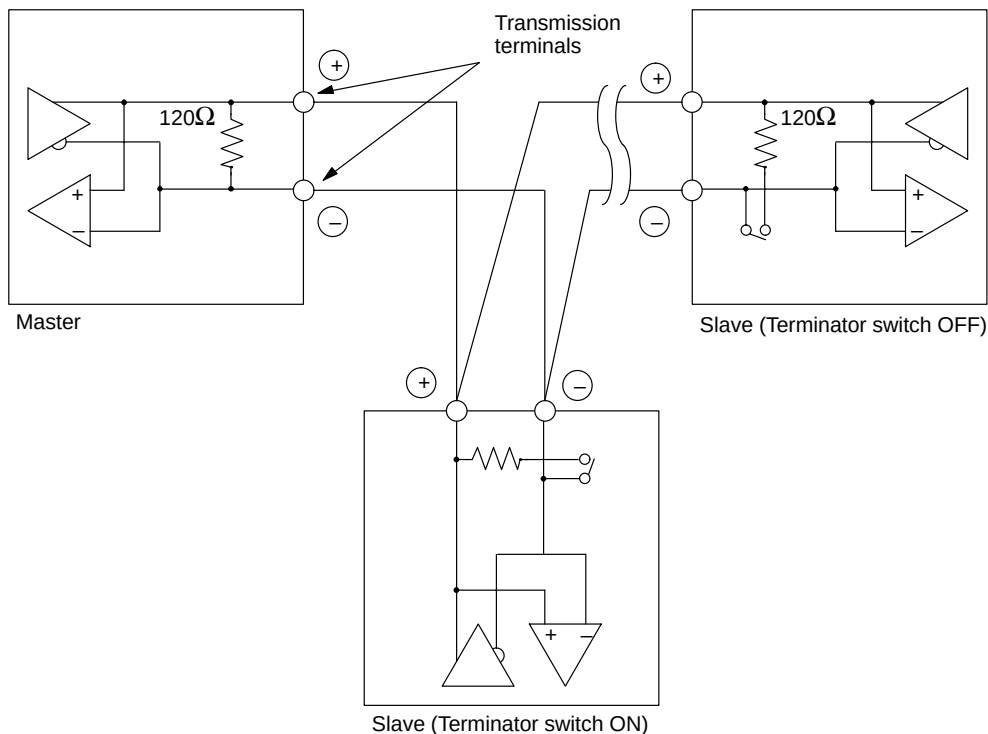

**C200H Slave Connectors**

C200H Slaves use a 2-piece connector. When attaching this connector, press down firmly until you hear it lock into place, and then confirm that the lock lever is in place. The connectors are wired as shown below.

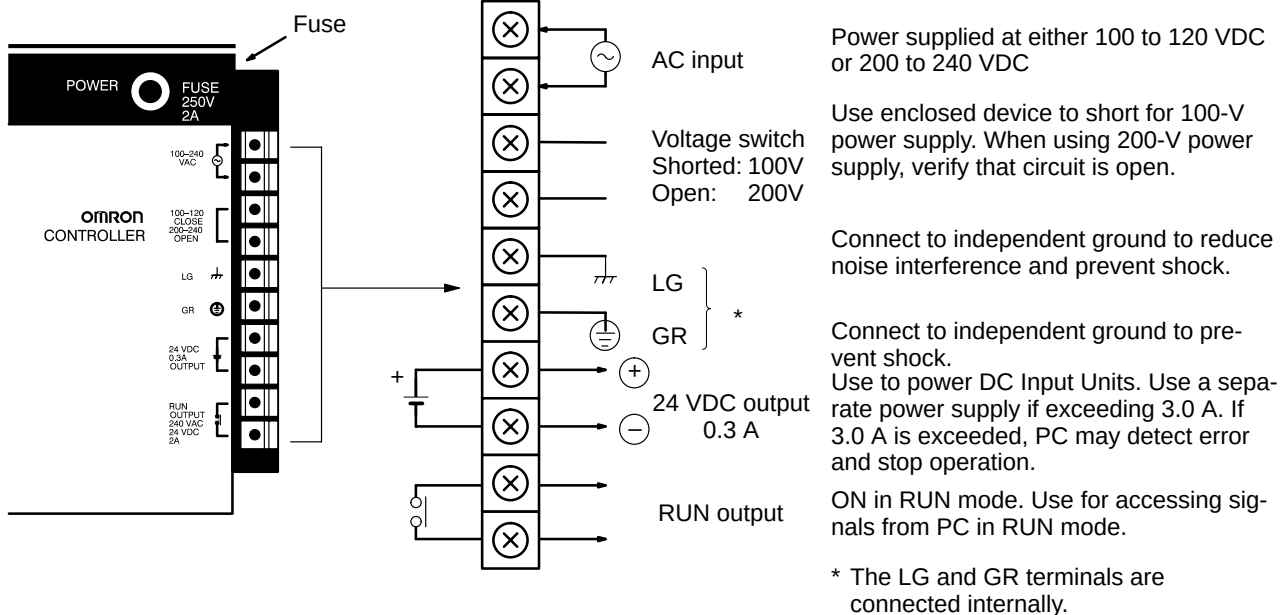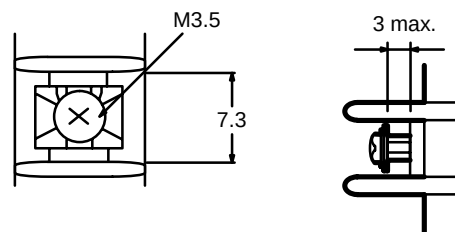**C200H-RT201****Terminals****AC Power Supply Wiring Precautions**


Use thick cables (1.25 mm<sup>2</sup> min.) to prevent against voltage drops.

M3.5 self-rising terminals screws are used for the terminal block. When wiring to the terminal block, use round crimp terminals with the M3.5 screws. Do not connect stranded wires directly to the terminal block.


**Caution**

Tighten the screws on the terminal block of the AC Power Supply Unit to a torque of 0.8 N • m. Loose screws may result in short-circuiting, malfunction, or burning.

## C200H-RT202

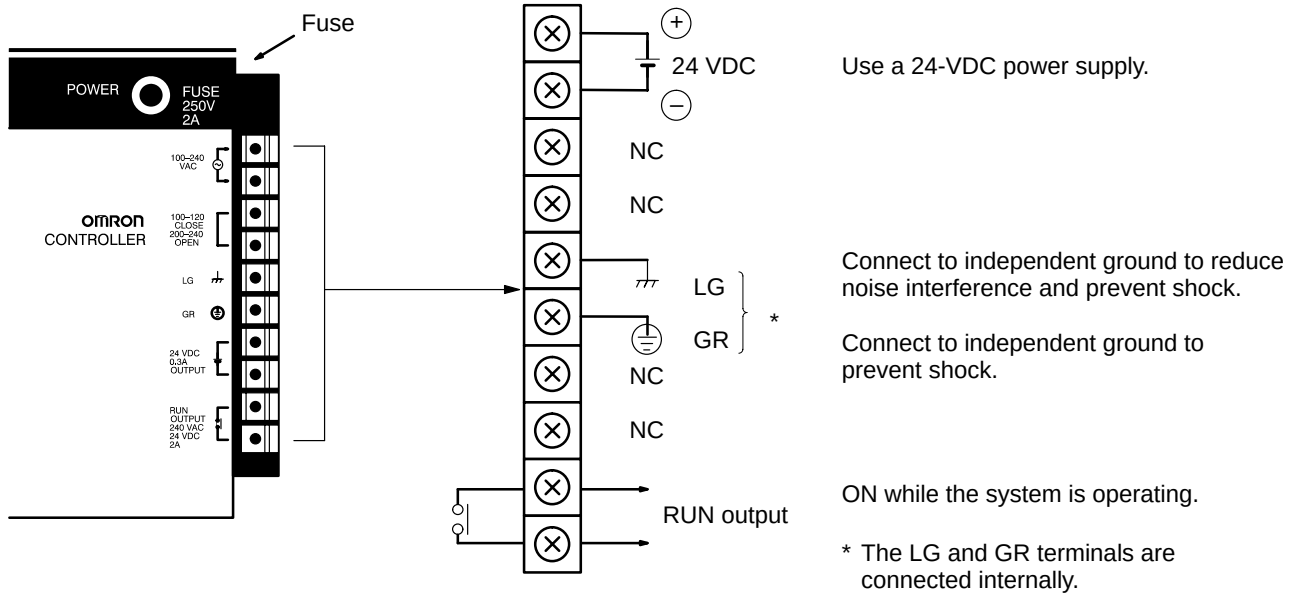


## Terminals

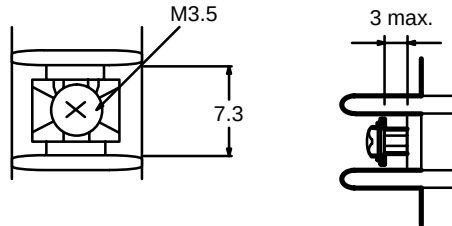

## Power Supply Wiring Precautions

Use thick cables (1.25 mm<sup>2</sup> min.) to prevent against voltage drops.

M3.5 self-rising terminals screws are used for the terminal block. When wiring to the terminal block, use crimp terminals for M3.5 screws. Do not connect stranded wires directly to the terminal block.




Tighten the screws on the terminal block to a torque of 0.8 N • m.


Wiring I/O Blocks

Wire I/O Blocks according to the following diagrams. Wire to either one power supply or several power supplies according to Unit specifications.

Input Blocks

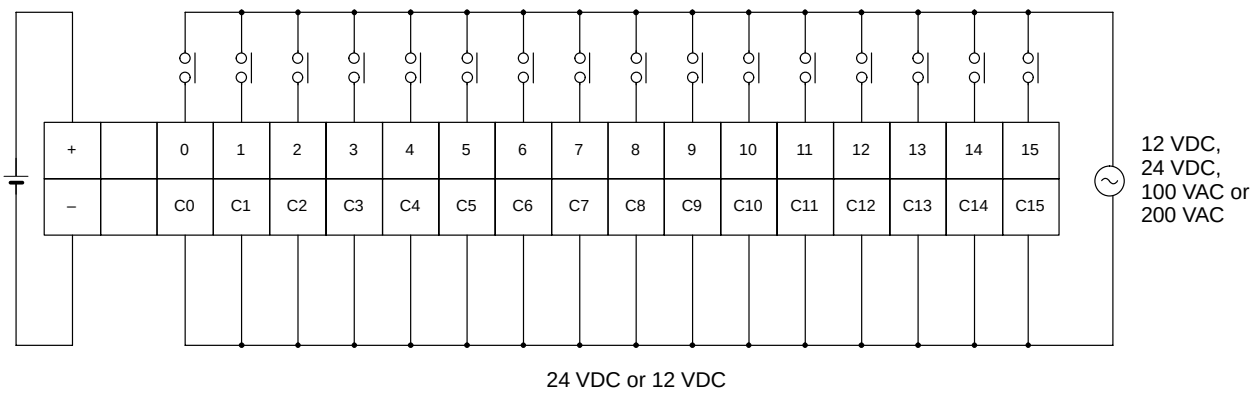

Output Blocks

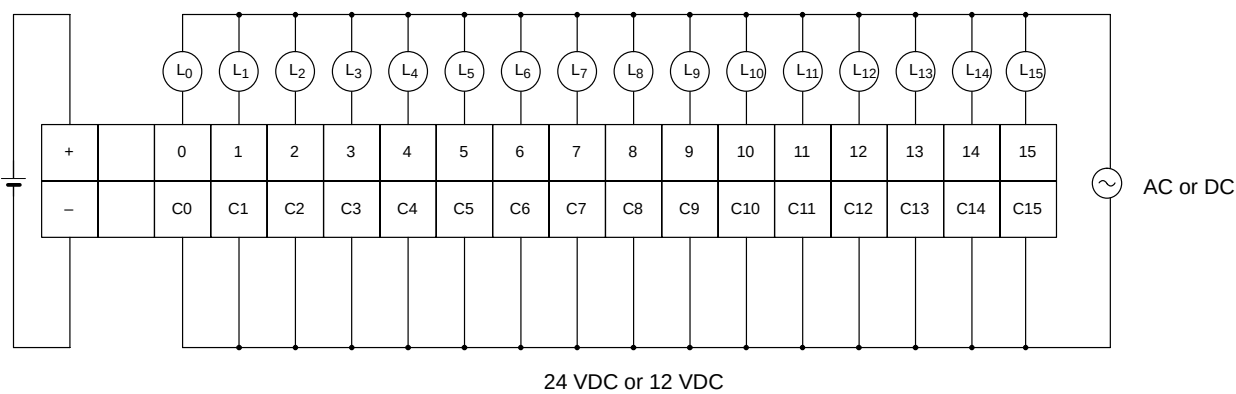

Power Supply


Both Output and Input Blocks must be provided with an external power supply. (They do not contain built-in power supplies.) For Output Blocks, the relay drive power supply must be connected to the positive and negative terminals. On the load side (points 0 through 15), power supplies must be provided to drive the loads. For Input Blocks, power must be connected to the positive and negative terminals, and the relay drive power supply must be provided to individual input points (points 0 through 15).

Use the connecting cable to supply power from each I/O Block power terminal to its Remote Interface. Do not supply power to the I/O Block until it has been connected to its Remote Interface.

G72C Remote Terminals


The following examples show various wiring possibilities for G72C Remote Terminals.

Input Terminals

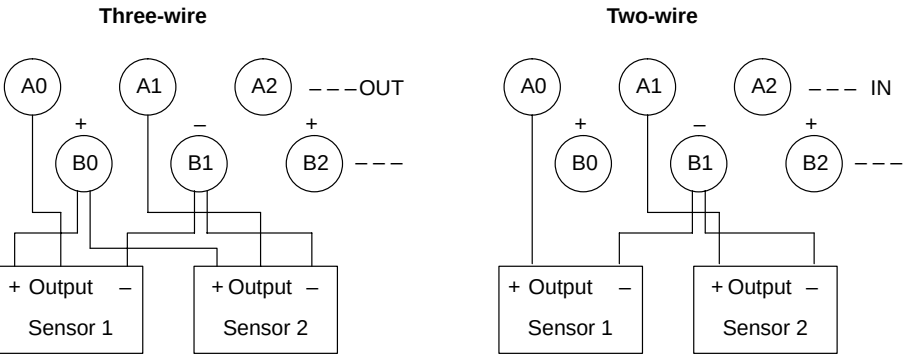

Output Terminals

When connecting outputs to logic external circuits, the external circuits must be designed to be compatible with the output specifications of the Output Terminal (pull-up resistance: 4.3 kΩ; residual voltage: 1.2 V).

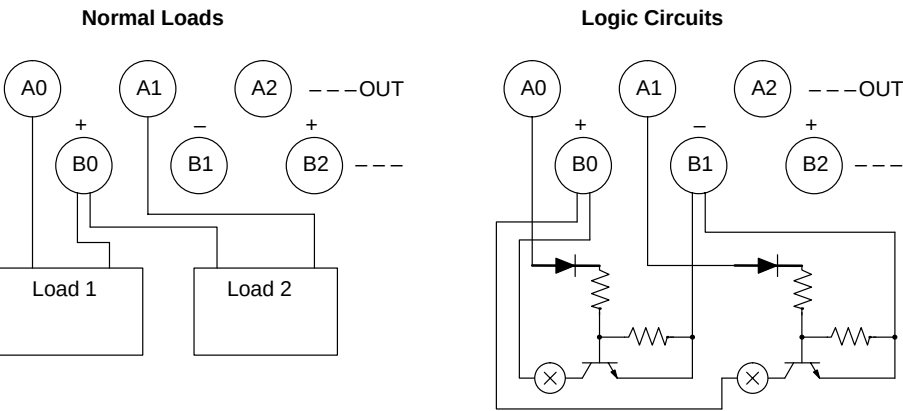

## SECTION 6

### I/O Response Times

This section provide details on response time computations for different Wired I/O Systems.

|     |                                 |    |
|-----|---------------------------------|----|
| 6-1 | Introduction .....              | 70 |
| 6-2 | C500 Systems .....              | 70 |
| 6-3 | C1000H and C2000H Systems ..... | 71 |
| 6-4 | C200H Systems .....             | 72 |


## 6-1 Introduction

The time required to produce a programmed output to an input within a Remote I/O System varies with the scan time of the PC, the transmission time of the Remote I/O System, and the timing of the input.

The processing that determines and the methods for calculating maximum and minimum response times from input to output are provided in this subsection. Calculations assume that both the input and the output are located on Slave Racks in a Remote I/O System.

Although more precise equations are possible if required, equations used for the following calculations do not consider fractions of a scan.

In looking at the following timing charts, it is important to remember the sequence processing occurs during the PC scan, particular that inputs will not produce programmed-actions until the program has been execution.

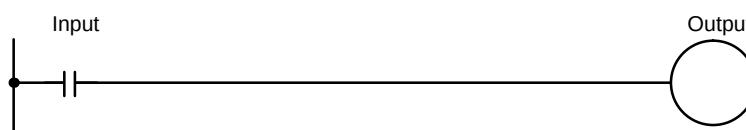

 **Caution** Noise may increase I/O delays.

## 6-2 C500 Systems

With C500 Remote I/O Systems, both the scan time of the PC and the transmission time required by the Remote I/O System need to be considered in computing the I/O response times.

### Remote I/O Transmission Times

The remote I/O transmission time is computed as follows:

$T_{RM}$  = Total Slave transmission time for one Master

$$= \Sigma T_{RT} + T_{TT}$$

$T_{RT}$  = Transmission time for each Slave

$$= 1.4 \text{ ms} + (0.2 \text{ ms} \times n)$$

Where  $n$  = number of I/O words on the Slave Rack

$T_{TT}$  = Remote Terminal transmission time

$$= 0.2 \text{ ms} \times m$$

Where  $m$  = number of Remote Terminals

### Minimum I/O Response Times

The minimum response time occurs when all signals are processed as soon as they are received, meaning only one scan is required to execute the program before the output is made.

$$\text{Time} = \text{Input ON delay} + \text{scan time} + (T_{RT} \text{ or } T_{TT}) + \text{output ON delay}$$

### Maximum I/O Response Times

The maximum response time occurs when the input just misses both the first remote I/O transmission and the program execution portion of the scan, meaning that processing must wait for the next transmission and then the next scan.

$$\text{Time} = \text{Input ON delay} + (\text{scan time} \times 2) + (T_{RM} \times 2) + (T_{RT} \text{ or } T_{TT}) + \text{output ON delay}$$



**Example Computations**

Calculations would be as shown below for input and output ON delays of 10 ms and a scan time of 20 ms. This example uses only one Slave Rack connected to a Master and four words allocated on the Slave Rack. Because there is only one Slave,  $T_{RM}$  and  $T_{RT}$  are the same.

$$T_{RT} = 1.4 + (0.2 \times 4) = 2.2 \text{ ms}$$

$$T_{RM} = 2.2 \text{ ms}$$

**Minimum I/O Response Time**

$$\begin{aligned} \text{Time} &= 10 \text{ ms} + 20 \text{ ms} + 2.2 \text{ ms} + 10 \text{ ms} \\ &= 42.2 \text{ ms} \end{aligned}$$

**Maximum I/O Response Time**

$$\begin{aligned} \text{Time} &= 10 \text{ ms} + (20 \text{ ms} \times 2) + (2.2 \text{ ms} \times 2) + 2.2 \text{ ms} + 10 \text{ ms} \\ &= 66.6 \text{ ms} \end{aligned}$$

**Transmission Time for Remote I/O Errors**

The above computations assume that there is no remote I/O error (including power interruptions). If an error occurs for a Slave, the response time would be increased by 20 ms for each Slave connected to the same Master as the Slave where the error occurred. If an error occurs for a Remote Terminal, the overall delay time would be increased by 5 ms for each Remote Terminal connected to the same Master as the Remote Terminal where the error occurred.

## 6-3 C1000H and C2000H Systems

With C1000H and C2000H Remote I/O Systems, both the scan time of the PC and the transmission time required by the Remote I/O System need to be considered in computing the I/O response times.

**Remote I/O Transmission Times**

The remote I/O transmission time is computed as follows:

$$\begin{aligned} T_{RM} &= \text{Total Slave transmission time for one Master} \\ &= \Sigma T_{RT} + T_{TT} \end{aligned}$$

$$\begin{aligned} T_{RT} &= \text{Transmission time for each Slave} \\ &= 1.4 \text{ ms} + (0.2 \text{ ms} \times n) \end{aligned}$$

Where  $n$  = number of I/O words on the Slave Rack

$$\begin{aligned} T_{TT} &= \text{Remote Terminal transmission time} \\ &= 0.2 \text{ ms} \times m \end{aligned}$$

Where  $m$  = number of Remote Terminals

**Minimum I/O Response Times**

The minimum response time occurs when all signals are processed as soon as they are received. Because remote I/O processing is handled in parallel with program execution, two scans are required so that the program is executed.

$$\text{Time} = \text{Input ON delay} + (\text{scan time} \times 2) + (T_{RT} \text{ or } T_{TT}) + \text{output ON delay}$$

**Maximum I/O Response Times**

The maximum response time occurs when the input just misses both the first remote I/O transmission and the program execution portion of the scan, meaning that processing must wait for the next transmission and then the next (i.e., the third) scan.

$$\text{Time} = \text{Input ON delay} + (\text{scan time} \times 3) + (T_{RM} \times 2) + (T_{RT} \text{ or } T_{TT}) + \text{output ON delay}$$

**Example Computations**

Calculations would be as shown below for input and output ON delays of 10 ms and a scan time of 20 ms. This example uses a C1000H system with only one Slave Rack connected to a Master and four words allocated on the Slave Rack. Because there is only one Slave,  $T_{RM}$  and  $T_{RT}$  are the same.

$$T_{RT} = 1.4 + (0.2 \times 4) = 2.2 \text{ ms}$$

$$T_{RM} = 2.2 \text{ ms}$$

**Minimum I/O Response Time**

$$\begin{aligned} \text{Time} &= 10 \text{ ms} + 20 \text{ ms} \times 2 + 2.2 \text{ ms} + 10 \text{ ms} \\ &= 62.2 \text{ ms} \end{aligned}$$

**Maximum I/O Response Time**

$$\begin{aligned} \text{Time} &= 10 \text{ ms} + (20 \text{ ms} \times 3) + (2.2 \text{ ms} \times 2) + 2.2 \text{ ms} + 10 \text{ ms} \\ &= 86.6 \text{ ms} \end{aligned}$$

**Transmission Time for Remote I/O Errors**

The above computations assume that there is no remote I/O error (including power interruptions). If an error occurs for a Slave, the response time would be increased by 20 ms for each Slave connected to the same Master as the Slave where the error occurred. If an error occurs for a Remote Terminal, the overall delay time would be increased by 5 ms for each Remote Terminal connected to the same Master as the Remote Terminal where the error occurred.

## 6-4 C200H Systems

With C200H Remote I/O Systems, only the scan time of the PC needs to be considered in computing the I/O response times as long as the remote I/O transmission time is negligible and smaller than the scan time. The scan time, however, is increased by the presence of the Remote I/O System

**Scan Time**

The scan time for Remote I/O Systems is increased by the following amount for each Master (approx.):

$$1.3 \text{ ms} + 100 \mu\text{s} \times (\text{number of 8-pt. Units controlled through the Master} + (\text{number of 16-pt. Units controlled through Master} \times 2)) + \alpha$$

Where,

$$\alpha = 200 \mu\text{s} \times \text{number of words used by Special I/O Units}$$

A more detailed explanation of scan time operation and calculations is available in the *C200H PC Operation Manuals*.

**Minimum I/O Response Times**

The minimum response time occurs when all signals are processed as soon as they are received. Here, three scans are required so that the program is executed.

$$\text{Time} = \text{Input ON delay} + \text{scan time} \times 3 + \text{output ON delay}$$

**Maximum I/O Response Times**

The maximum response time occurs when the input just misses the program execution portion of the scan, meaning that processing must wait for the next transmission and then the next (i.e., the fourth) scan.

$$\text{Time} = \text{Input ON delay} + \text{scan time} \times 4 + \text{output ON delay}$$

**Example Computations**

Calculations would be as shown below for input and output ON delays of 10 ms and a scan time of 20 ms. This example uses only one Slave Rack connected to a Master and four words allocated on the Slave Rack.

**Minimum I/O Response Time**

$$\begin{aligned}\text{Time} &= 10 \text{ ms} + 20 \text{ ms} \times 3 + 10 \text{ ms} \\ &= 80 \text{ ms}\end{aligned}$$

**Maximum I/O Response Time**

$$\begin{aligned}\text{Time} &= 10 \text{ ms} + 20 \text{ ms} \times 4 + 10 \text{ ms} \\ &= 100 \text{ ms}\end{aligned}$$

## SECTION 7

### Error Processing

This section covers functions, procedures, and operational differences that are relevant when errors occur in your system. The table of *Section 7-1* provides easy reference to indicator functions, error causes, and appropriate corrective measures. *Section 7-2* shows how to monitor errors through SR words and the Programming Console. The procedures used to locate transmission errors are outlined in *Section 7-3*, while *Section 7-4* provides two tables that illustrate operational differences when errors occur in CONTINUE and STOP modes. Finally, *Section 7-5* gives three possible methods to achieve system recovery for errors in STOP mode.

|       |                                                    |    |
|-------|----------------------------------------------------|----|
| 7-1   | Self-Diagnosis .....                               | 76 |
| 7-2   | Error Codes and Monitoring .....                   | 81 |
| 7-3   | Locating Transmission Errors .....                 | 91 |
| 7-4   | CONTINUE and STOP Mode Operation .....             | 92 |
| 7-5   | Recovery in STOP Mode .....                        | 95 |
| 7-6   | I/O Table Creation Problems .....                  | 95 |
| 7-7   | Slave Unit Numbers with Multiple Terminators ..... | 95 |
| 7-7-1 | Applicable Products .....                          | 95 |
| 7-7-2 | Notification Method for Multiple Terminators ..... | 96 |

## **7-1 Self-Diagnosis**

C-series systems have self-diagnostic features to aid in the event of error. These features are divided into hardware diagnosis and system diagnosis. In either case, the error message or FAL number is read through the Programming Console. Some errors are also monitored by SR bits and can be programmed to indicate errors through external alarms. The SR bits can also be programmed to stop PC operation in the event of specific errors.

Error Processing Charts are provided on the following pages. In these charts, “—” indicates that the status of that LED is not relevant under the given conditions. If operation is not possible for LED indications other than those given, connect one Slave, then two Slaves, etc., checking operations after connecting each Slave until the error is discovered. All LED indications listed are for Units with errors.

## Error Before Operation: C500 Masters and Slaves

| Programming Console LEDs      | LEDs on Master |         |            |          | LEDs on Slave |         | Remote Terminal LEDs |         | Cause                                                                                                                                                    | Correction                                                                                                                       |
|-------------------------------|----------------|---------|------------|----------|---------------|---------|----------------------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
|                               | TR/ERR         | TEST OK | END RS CHK | LINE ERR | TR/ERR        | ERR     | POWER                | TR/ERR  |                                                                                                                                                          |                                                                                                                                  |
| CPU WAITING                   | flash          | not lit | lit        | not lit  | lit           | not lit | lit                  | lit     | Terminator not set.                                                                                                                                      | Set farthest Unit from Master as terminator.                                                                                     |
|                               |                |         |            |          |               |         |                      |         | Transmission line broken or wired incorrectly.                                                                                                           | Correct transmission line                                                                                                        |
|                               |                |         |            |          |               |         |                      |         | Slave and Remote Terminal points exceed 512.                                                                                                             | Reduce total number of points.                                                                                                   |
|                               |                |         |            |          | not lit       | not lit |                      |         | Power not supplied to terminator Slave.                                                                                                                  | Supply power to Slave.                                                                                                           |
|                               |                |         |            |          | lit           | not lit | not lit              | not lit | Power not supplied to terminator Remote Terminal.                                                                                                        | Supply power to Remote Terminal.                                                                                                 |
|                               | flash          | not lit | flash      | not lit  | lit           | not lit | lit                  | lit     | Multiple terminators set. Refer to 7-7 <i>Slave Unit Numbers with Multiple Terminators</i> .                                                             | Set only one terminator for each Master.                                                                                         |
| CPU WAITING or REMOTE I/O ERR | lit            | not lit | not lit    | lit      | lit           | not lit | lit                  | lit     | Transmission line shorted.                                                                                                                               | Correct transmission line.                                                                                                       |
|                               | flash /lit     | not lit | ---        | not lit  | lit           | not lit | lit                  | lit     | Same unit number or word set twice on Slaves.                                                                                                            | Correct settings so same word is not allocated twice.                                                                            |
| REMOTE I/O ERR or VER ERR     | lit            | not lit | ---        | not lit  | lit           | lit     | lit                  | lit     | Slave I/O bus error.                                                                                                                                     | Check Slave, I/O Units on Slave, and Slave's Rack.                                                                               |
|                               | not lit        | not lit | not lit    | not lit  | lit           | not lit | lit                  | lit     | CPU Unit error in Master.                                                                                                                                | Replace Master.                                                                                                                  |
| I/O VER ERR                   | not lit        | not lit | not lit    | not lit  | lit           | not lit | lit                  | lit     | I/O table not written or I/O table inconsistency. (LEDs will go out after TR/ERR LED on Master flashes and terminator LEDs are lit for several seconds.) | Check I/O table on Programming Console and correct if necessary. If I/O table verifies, check all Slaves not set as terminators. |

## Non-fatal Errors

| Programming Console LEDs | LEDs on Master |         |            |          | LEDs on Slave |         | Remote Terminal LEDs |         | Cause                                                                                                        | Correction                                                                                                      |
|--------------------------|----------------|---------|------------|----------|---------------|---------|----------------------|---------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|                          | TR/ERR         | TEST OK | END RS CHK | LINE ERR | TR/ERR        | ERR     | POWER                | TR/ERR  |                                                                                                              |                                                                                                                 |
| REMOTE I/O ERR           | lit            | not lit | lit        | not lit  | lit           | not lit | lit                  | lit     | Transmission line broken.                                                                                    | Correct transmission line.                                                                                      |
|                          | lit            | not lit | not lit    | not lit  | not lit       | not lit | not lit/lit          | not lit | CPU Unit error in Slave or Remote Terminal.                                                                  | Replace Slave or Remote Terminal.                                                                               |
|                          | lit            | not lit | ---        | not lit  | lit           | lit     | lit                  | lit     | Master or Slave I/O bus error.                                                                               | Check Slave I/O units on Slave and Rack.                                                                        |
|                          | not lit        | not lit | not lit    | not lit  | lit           | not lit | lit                  | lit     | CPU Unit error in Master.                                                                                    | Replace Master.                                                                                                 |
|                          | lit            | not lit | ---        | lit      | lit           | not lit | lit                  | lit     | Transmission line shorted.                                                                                   | Correct transmission line.                                                                                      |
|                          | lit            | ---     | ---        | not lit  | not lit       | not lit | ---                  | ---     | Power not supplied to Slave.                                                                                 | Supply power to Slave.                                                                                          |
|                          | lit            | ---     | ---        | not lit  | ---           | ---     | not lit              | not lit | Power not supplied to Remote Terminal.                                                                       | Supply power to Remote.                                                                                         |
| I/O VER ERR              | flash          | not lit | not lit    | not lit  | flash         | not lit | lit                  | ---     | I/O Unit added to or removed from Master, Slave, or Remote Terminal.                                         | Check I/O table on Programming Console and correct if necessary. If I/O table is Ok, correct I/O configuration. |
|                          | flash /not lit | not lit | ---        | not lit  | lit           | lit     | lit                  | lit     | Remote Terminal using same word as PC. Same Slave unit number or same Remote Terminal word number set twice. |                                                                                                                 |

## Fatal Errors

| Programming Console LEDs | LEDs on Master |         |            |          | LEDs on Slave |     | Remote Terminal LEDs |        | Cause                                                                                               | Correction                                                                                                           |
|--------------------------|----------------|---------|------------|----------|---------------|-----|----------------------|--------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
|                          | TR/ERR         | TEST OK | END RS CHK | LINE ERR | TR/ERR        | ERR | POWER                | TR/ERR |                                                                                                     |                                                                                                                      |
| I/O SET ERR              | flash /lit     | not lit | ---        | not lit  | lit           | lit | lit                  | lit    | Input and Output specifications are incorrect for I/O Units on Slave Racks or for Remote Terminals. | Check I/O table on Programming Console and correct if necessary. If I/O table is OK, correct I/O Unit configuration. |

## C200H Remote I/O Systems

| Item                            | Program-<br>ming<br>Console<br>Display       | C200H Master LEDs |         |           |             | C200H Slave LEDs |            |            |         | Cause                                                                                                                                   | Correction                                                                                                                                                                               |
|---------------------------------|----------------------------------------------|-------------------|---------|-----------|-------------|------------------|------------|------------|---------|-----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                 |                                              | XMT/<br>RCV       | Error   | END<br>RS | LINE<br>ERR | XMT/<br>RCV      | Error<br>1 | Error<br>2 | RUN     |                                                                                                                                         |                                                                                                                                                                                          |
| Prior to<br>system<br>operation | Master<br>not<br>detected                    | not lit           | not lit | not lit   | not lit     | ---              | ---        | ---        | ---     | CPU Unit doesn't<br>detect the Master.<br>Master not mount<br>properly or CPU<br>Unit error.                                            | Check mounting of Master;<br>turn power back ON. If error<br>cannot be cleared replace<br>Master.                                                                                        |
|                                 | CPU<br>Waiting<br>or<br>Remote<br>I/O errors | not lit           | not lit | lit       | not lit     | ---              | ---        | ---        | ---     | Slave power OFF<br>or I/O bus line<br>broken. Termina-<br>tor not set.                                                                  | Turn on power to the Slaves<br>and connected Units. Check<br>transmission cables. Set the<br>Unit farthest removed from<br>Master as the terminator.                                     |
|                                 |                                              | not lit           | lit     | lit       | not lit     | ---              | lit        | lit        | not lit | Slave I/O bus<br>error.                                                                                                                 | Replace faulty unit.                                                                                                                                                                     |
|                                 |                                              |                   |         |           | not lit     | ---              | ---        | ---        | not lit | Transmission<br>error in I/O bus.                                                                                                       | Check transmission cables.                                                                                                                                                               |
|                                 |                                              |                   |         |           | lit         | ---              | ---        | ---        | not lit | Transmission line<br>shorted                                                                                                            | Check transmission cables.                                                                                                                                                               |
|                                 |                                              |                   |         |           | not lit     | flash            | ---        | ---        | not lit | System<br>configuration<br>incorrect.                                                                                                   | Check unit numbers of I/O<br>Units. Confirm that the<br>same word number or unit<br>number is not allocated<br>twice. Check to see if the<br>maximum number of words<br>is not exceeded. |
|                                 |                                              | not lit           | not lit | flash     | not lit     | ---              | ---        | ---        | not lit | Two or more<br>terminators have<br>been designated.<br>Refer to 7-7<br><i>Slave Unit<br/>Numbers with<br/>Multiple<br/>Terminators.</i> | Make sure only 1 Unit has<br>been set as the terminator.                                                                                                                                 |
|                                 | Too many<br>I/O points                       | not lit           | lit     | not lit   | not lit     | not lit          | ---        | ---        | not lit | Same word<br>multiplier used for<br>more than one<br>Master.                                                                            | Check word multipliers and<br>correct any that are<br>redundant                                                                                                                          |
|                                 |                                              | flash             | not lit | not lit   | lit         | flash            | ---        | ---        | not lit | Same unit<br>number assigned<br>more than once.                                                                                         | Check AR 02 through AR<br>06 for the redundant unit<br>numbers and correct them.                                                                                                         |




| Item                                                 | Program-<br>ming Con-<br>sole Display        | C200H Master LEDs |            |            |             | C200H Slave LEDs |            |            |            | Cause                                                                             | Correction                                                                                                                                                                                                                                   |
|------------------------------------------------------|----------------------------------------------|-------------------|------------|------------|-------------|------------------|------------|------------|------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                      |                                              | XMT/<br>RCV       | Error      | END<br>RS  | LINE<br>ERR | XMT/<br>RCV      | Error<br>1 | Error<br>2 | RUN        |                                                                                   |                                                                                                                                                                                                                                              |
| Remote<br>I/O<br>System<br>operation<br>failure      | Slave not confirmed                          | flash             | not<br>lit | not<br>lit | not<br>lit  | not lit          | not<br>lit | not<br>lit | not<br>lit | Slave not verified.                                                               | Check Slave Units and turn power back ON. Then, turn CPU Unit power supply back ON or re-start Master.                                                                                                                                       |
|                                                      | Expansion<br>I/O Rack not confirmed          |                   |            |            |             | flash            | lit        | flash      | ---        | Expansion I/O Unit connected via I/O connecting cable not recognized by CPU Unit. | Check I/O Connecting Cable connections. Check Expansion I/O Rack words and the system configuration. If an I/O table is being used, reference it on the Programming Console, and restore the system configuration or recreate the I/O table. |
| Remote<br>I/O error<br>(after<br>starting<br>system) | Remote I/O<br>System<br>operation<br>failure | flash/<br>lit     | lit        | not<br>lit | not<br>lit  | not lit          | not<br>lit | not<br>lit | not<br>lit | I/O bus line break or CPU Unit error.                                             | Check optical fiber cable. If the cause is removed, recovery will be automatic. Otherwise replace unit.                                                                                                                                      |
|                                                      | Transmis-<br>sion error                      |                   |            |            |             | not lit          | lit        | not<br>lit | not<br>lit | I/O bus<br>transmission line<br>break or error.                                   |                                                                                                                                                                                                                                              |
|                                                      | I/O bus error                                |                   |            |            |             | flash            | lit        | lit        | not<br>lit | Slave I/O bus er-<br>ror.                                                         | Check all Slaves and Slave Racks. Replace faulty units.                                                                                                                                                                                      |
|                                                      | I/O<br>verification<br>error                 |                   |            |            |             | flash            | flash      | lit        | ---        | I/O Unit on Slave Rack removed or added.                                          | Reference the I/O table on the Programming Console, and reset I/O or re-create the I/O table.                                                                                                                                                |
|                                                      | I/O setting<br>error                         |                   |            |            |             | flash            | lit        | lit        | not<br>lit | Input and Output Units reversed on Slave Rack.                                    | Reference the I/O on the Programming Console, and restore the I/O Unit word allocations                                                                                                                                                      |
|                                                      | Transmis-<br>sion error                      |                   |            |            | lit         | not lit          | lit        | not<br>lit | not<br>lit | Transmission line<br>shorted.                                                     | Check transmission<br>cables.                                                                                                                                                                                                                |

**Note** I/O verification errors and I/O setting errors occur when an I/O table is used or when the power supply to a Slave is turned off and I/O Unit settings are changed during CPU Unit operation.

## 7-2 Error Codes and Monitoring

The following show how it is possible to monitor errors using SR words.

### C120 Systems

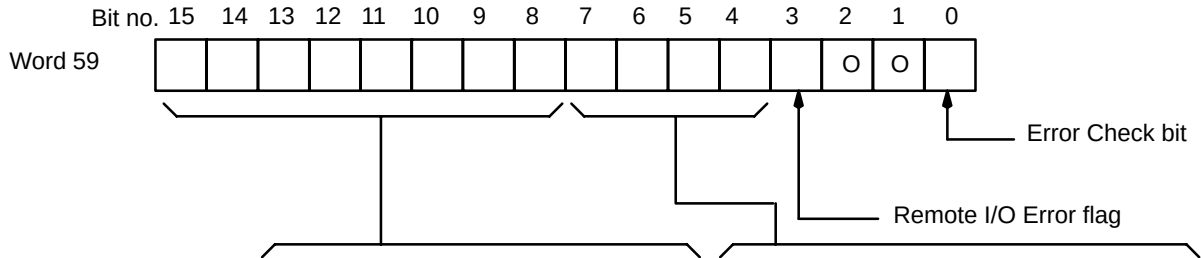


| Error Location  | Bits 8 to 15 | Definition                                                                        | Bits 4 to 7 | Definition                                  |
|-----------------|--------------|-----------------------------------------------------------------------------------|-------------|---------------------------------------------|
| Master or Slave | B0 to B3     | Indicates the Master by mounting location. B0 is the leftmost Master on the Rack. | 8           | Indicates a failure in the Master.          |
|                 |              |                                                                                   | 0           | Indicates a failure in Slave #0.            |
|                 |              |                                                                                   | 1           | Indicates a failure in Slave #1.            |
| Remote Terminal | 00 to 31     | Refers to the Remote Terminal word number.                                        | 0, 1        | Indicates a failure in the Remote Terminal. |

The Error Check bit can be turned ON and OFF to read errors when they have occurred in more than one Unit.

The Remote I/O Error flag indicates that an error has occurred in one of the Remote Units. This flag also turns ON for errors in optical Remote I/O Sub-systems.

## C1000H and C2000H Systems

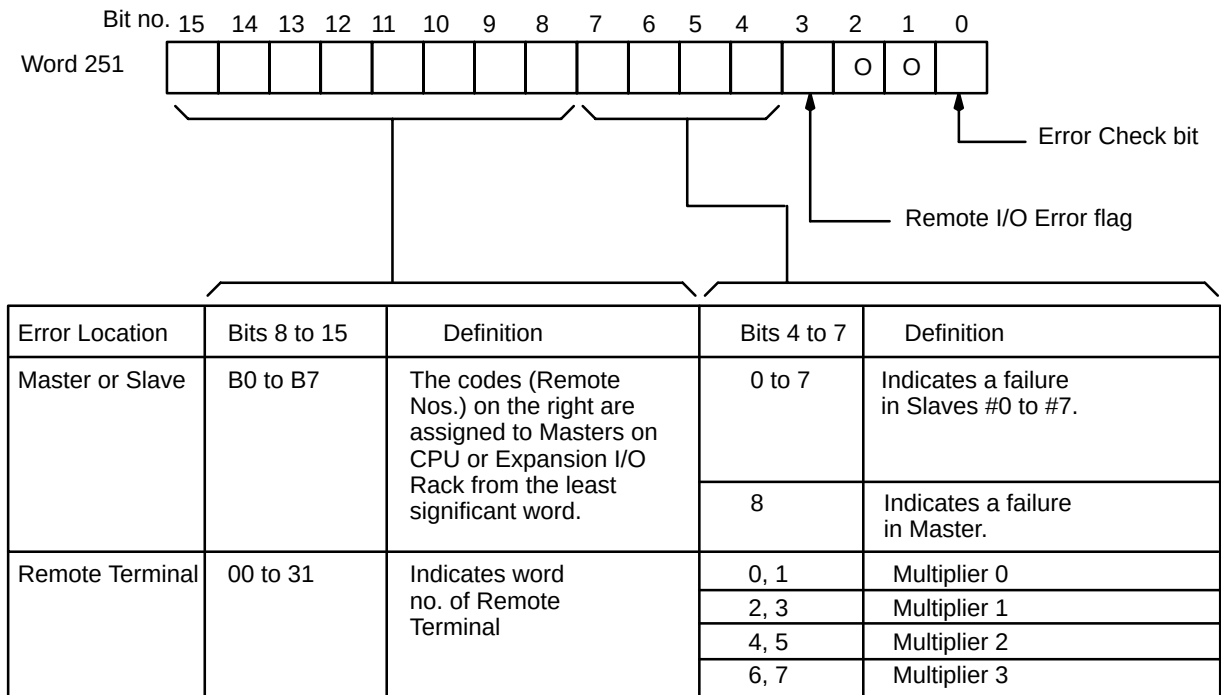


The Error Check bit can be turned ON and OFF to read errors when they have occurred in more than one Unit.

The Remote I/O Error flag indicates that an error has occurred in one of the Remote Units.

**Note** The number of the word that is actually allocated to a Remote Terminal is calculated using this formula:

$$\text{Word no.} = (\text{Word no. listed in the above table}) + (\text{Word Multiplier listed in the above table}) \times 32$$

## C200H Systems

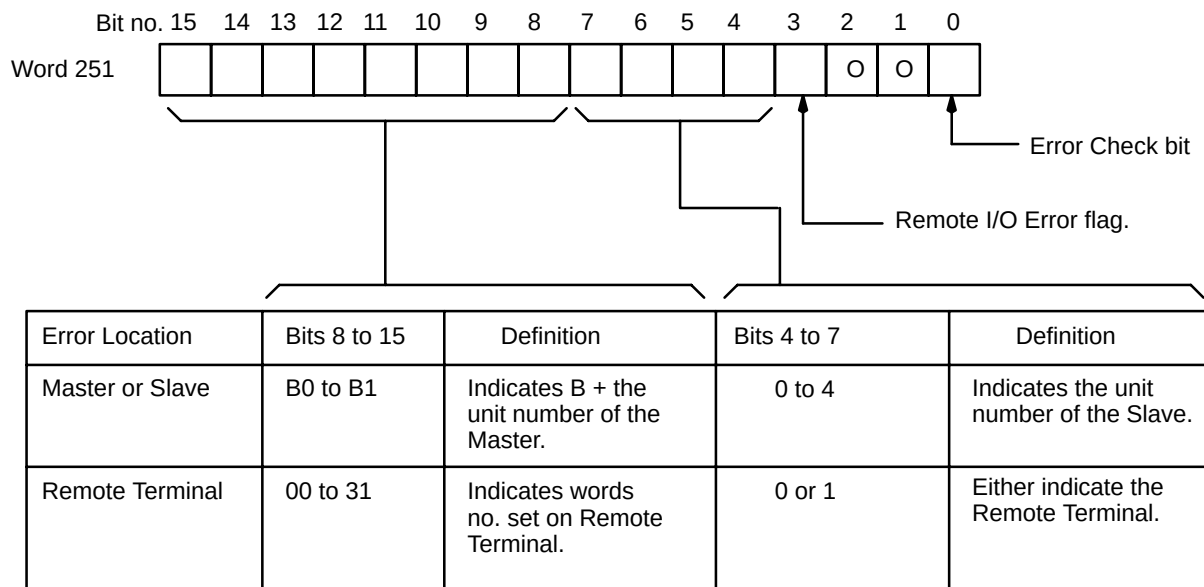

The Error Check bit can be turned ON and OFF to read errors when they have occurred in more than one Unit. The Remote I/O Error flag indicates that an error has occurred in a Remote I/O Slave Unit or Remote Terminal. When a remote I/O error has occurred, bit 25312 also turns ON.

#### Error Codes and SR/AR Bits

Whenever an error listed in the C200H table under *7-1 Self-Diagnosis* occurs, error information can be accessed in the following SR and AR bits and words.

| Word/bit       | Information                                                                  |
|----------------|------------------------------------------------------------------------------|
| AR 0014/0015   | Unit number of Master with error.                                            |
| AR 02          | Unit number of Slave with error at beginning of operations                   |
| AR 03 to AR 06 | Word number of Remote Terminal with error at beginning of operations.        |
| SR 251         | Unit number or word number of unit with error after beginning of operations. |

#### Master Error Flags and Restart Bits

Error flags and Restart bits for Masters are listed below. Restart bits can be turned ON and then OFF to restart a Master after first removing the cause of the error. Error flags are ON when an error has occurred.

| Bit     | Function              |
|---------|-----------------------|
| AR 0014 | Master #1 Error flag  |
| AR 0015 | Master #0 Error flag  |
| AR 0114 | Master #1 Restart bit |
| AR 0115 | Master #0 Restart bit |

#### Unit Number and Word Error Information Before Operation

The following bits can be used for error processing and debugging when establishing a new system.

#### Slaves

The following Error flags will be turned on when the same unit number has been set for two different Slaves.

| Bit     | Function           |
|---------|--------------------|
| AR 0200 | Unit #0 Error flag |
| AR 0201 | Unit #1 Error flag |
| AR 0202 | Unit #2 Error flag |
| AR 0203 | Unit #3 Error flag |
| AR 0204 | Unit #4 Error flag |


**Remote Terminals**

The following error flags (both bits) will be turned on when the same word has been allocated for two different Remote Terminals.

| Bit          | Function                                |
|--------------|-----------------------------------------|
| AR 0300/0301 | Error flags for Terminal set to word 0  |
| AR 0302/0303 | Error flags for Terminal set to word 1  |
| AR 0304/0305 | Error flags for Terminal set to word 2  |
| AR 0306/0307 | Error flags for Terminal set to word 3  |
| AR 0308/0309 | Error flags for Terminal set to word 4  |
| AR 0310/0311 | Error flags for Terminal set to word 5  |
| AR 0312/0313 | Error flags for Terminal set to word 6  |
| AR 0314/0315 | Error flags for Terminal set to word 7  |
| AR 0400/0401 | Error flags for Terminal set to word 8  |
| AR 0402/0403 | Error flags for Terminal set to word 9  |
| AR 0404/0405 | Error flags for Terminal set to word 10 |
| AR 0406/0407 | Error flags for Terminal set to word 11 |
| AR 0408/0409 | Error flags for Terminal set to word 12 |
| AR 0410/0411 | Error flags for Terminal set to word 13 |
| AR 0412/0413 | Error flags for Terminal set to word 14 |
| AR 0414/0415 | Error flags for Terminal set to word 15 |
| AR 0500/0501 | Error flags for Terminal set to word 16 |
| AR 0502/0503 | Error flags for Terminal set to word 17 |
| AR 0504/0505 | Error flags for Terminal set to word 18 |
| AR 0506/0507 | Error flags for Terminal set to word 19 |
| AR 0508/0509 | Error flags for Terminal set to word 20 |
| AR 0510/0511 | Error flags for Terminal set to word 21 |
| AR 0512/0513 | Error flags for Terminal set to word 22 |
| AR 0514/0515 | Error flags for Terminal set to word 23 |
| AR 0600/0601 | Error flags for Terminal set to word 24 |
| AR 0602/0603 | Error flags for Terminal set to word 25 |
| AR 0604/0605 | Error flags for Terminal set to word 26 |
| AR 0606/0607 | Error flags for Terminal set to word 27 |
| AR 0608/0609 | Error flags for Terminal set to word 28 |
| AR 0610/0611 | Error flags for Terminal set to word 29 |
| AR 0612/0613 | Error flags for Terminal set to word 30 |
| AR 0614/0615 | Error flags for Terminal set to word 31 |

**Locating Errors: C120 and C500 Systems**


Using the following system, let's assume an error has occurred in word 28 and that word 28 has been allocated to a Remote Terminal.

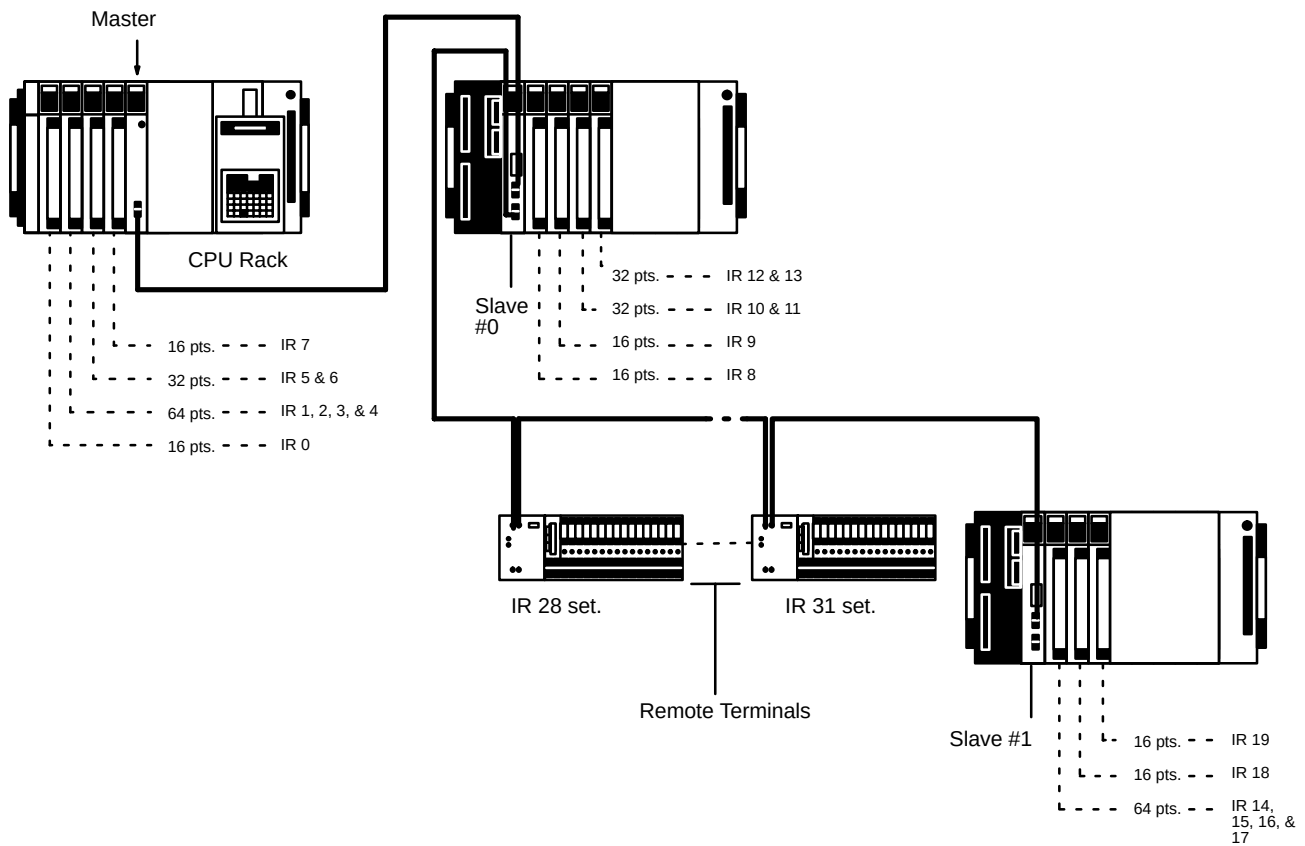


Word 59 shows the following data.

| Bit no. | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---------|----|----|----|----|----|----|---|---|---|---|---|---|---|---|---|---|
| Word 59 | 0  | 0  | 1  | 0  | 1  | 0  | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 |
|         | 2  |    | 8  |    |    |    | 0 |   |   |   | 8 |   |   |   |   |   |


Monitoring word 59 with the Programming Console reveals the following data.

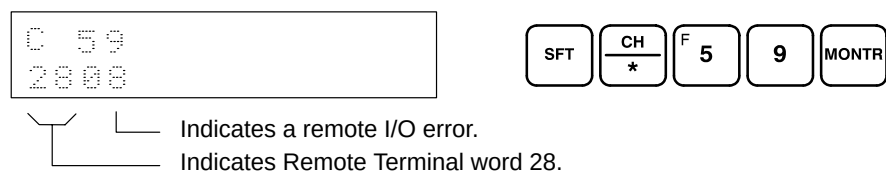


To check for other errors, monitor 5900 and force-set the system. This causes the next error word to be displayed.

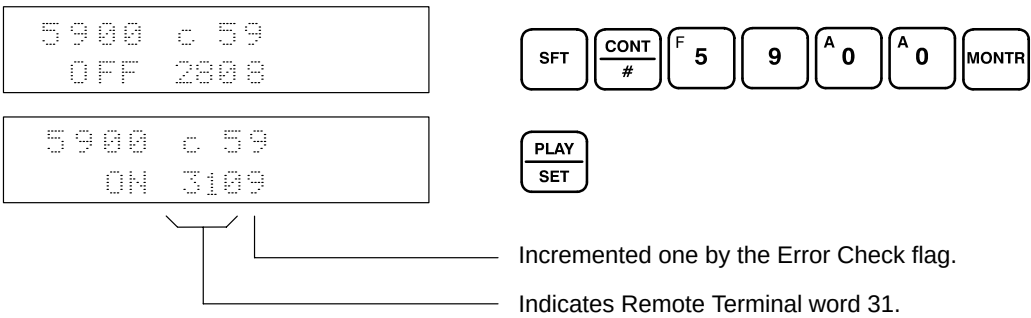

To read the next error, reset the Error Check bit, then set it again. If the left-most Master has an error, the following is displayed. Errors in the Slaves cannot be read if there is an error in the Master.

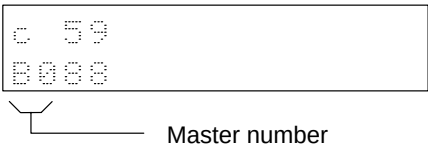


This is an example program to stop PC operation if an error occurs in the Remote Terminal allocated word 31. Operation can be restarted by first removing the cause of the error, then setting and resetting the Error Check bit until the contents of word 59 goes to 0000, and finally clearing the error via the Programming Console.

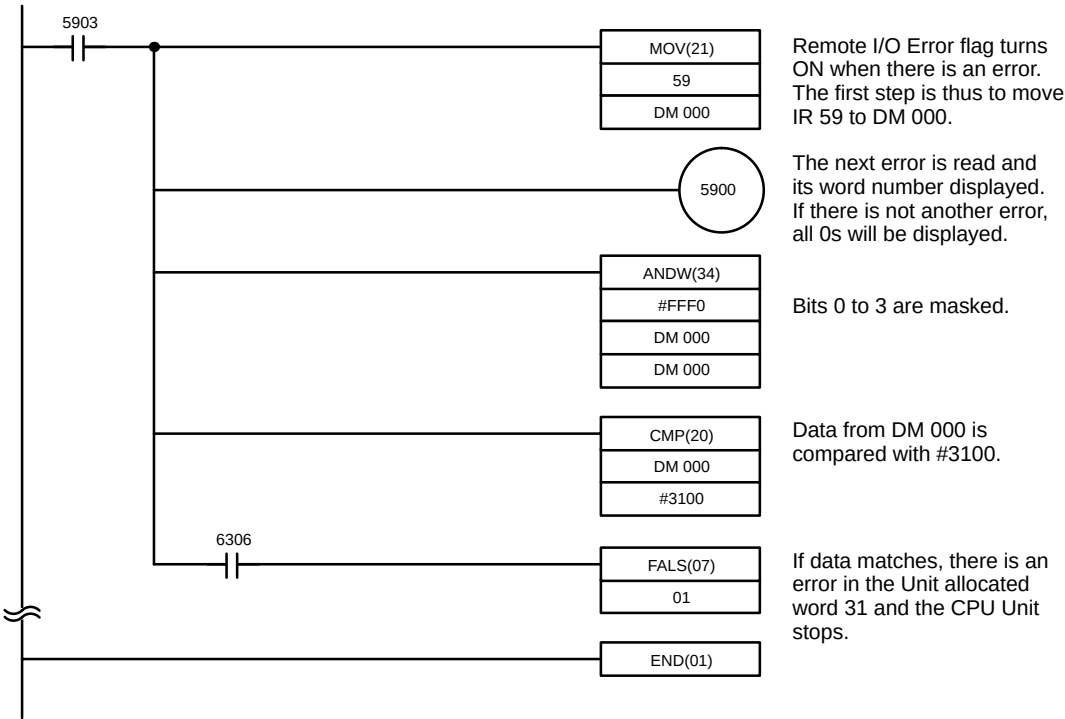


### Locating Errors: C1000H and C2000H Systems


Using the following System, let's assume an error has occurred in word 62, that this word has been allocated to a Remote Terminal (word 30 in the Sub-system of the Master with a word multiplier of 1), and the Master is set in CONTINUE mode.

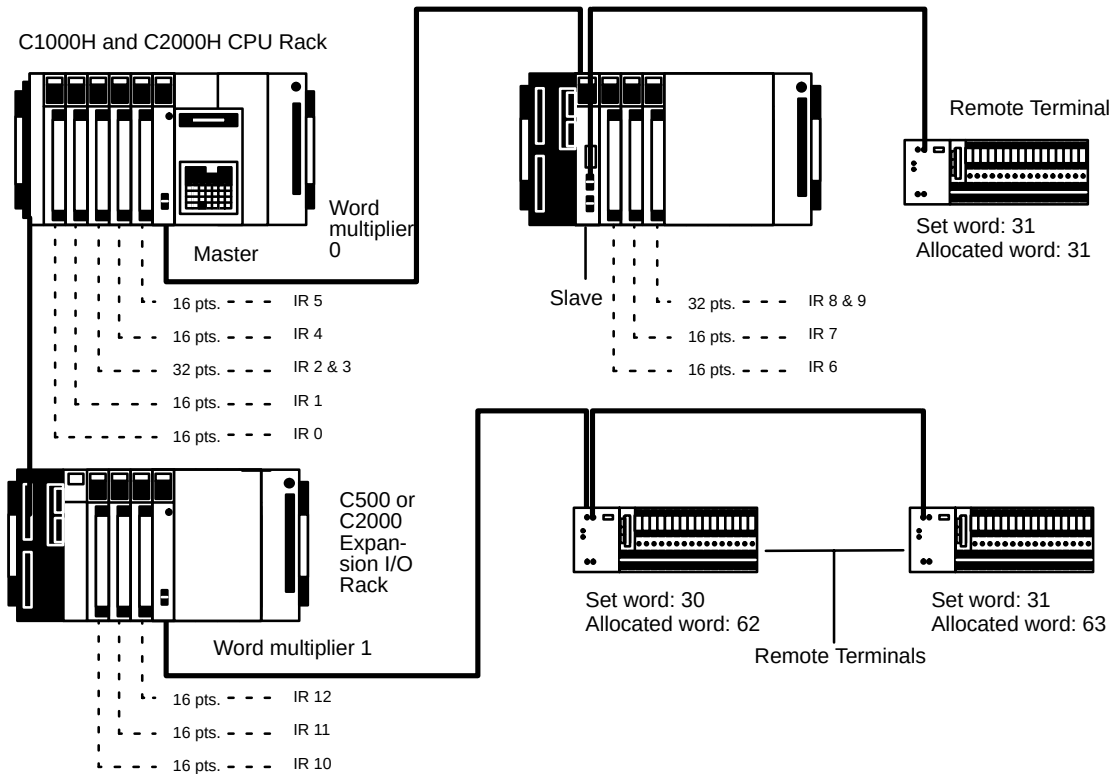

Word 251 shows the following data.

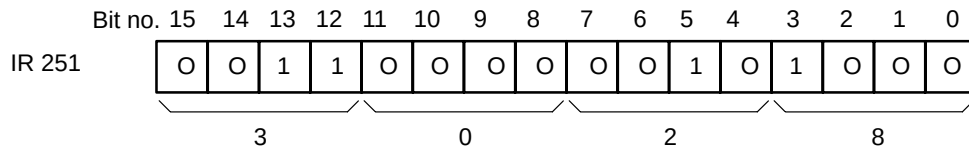


Monitoring word 251 with the Programming Console produces the following display.

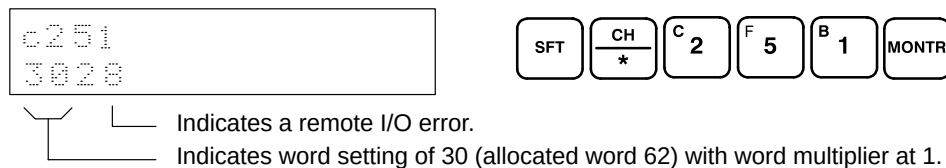





To check for other errors, monitor 25100 and force-set the system. This causes the next error word to be displayed.

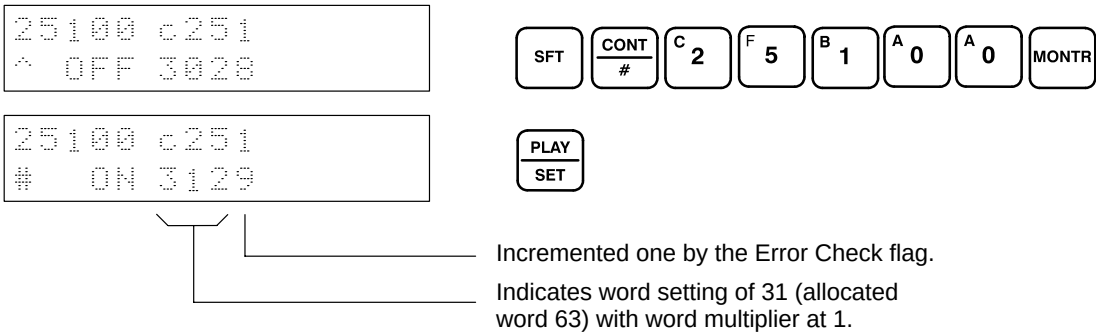

To read the next error, reset the Error Check bit and then set it. If the leftmost Master has an error, the following is displayed. Errors in the Slaves cannot be read if there is an error in the Master.

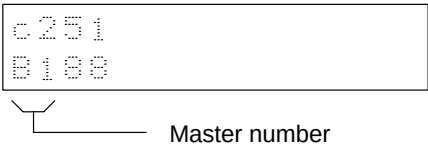


This is an example program to stop PC operation if an error occurs in the Remote Terminal allocated word 62 (word 30 under Master with word multiplier of 1). Operation can be restarted by first removing the cause of the error, then setting and resetting the Error Check bit until the contents of IR 251 goes to 0000, and finally clearing the error via the Programming Console.

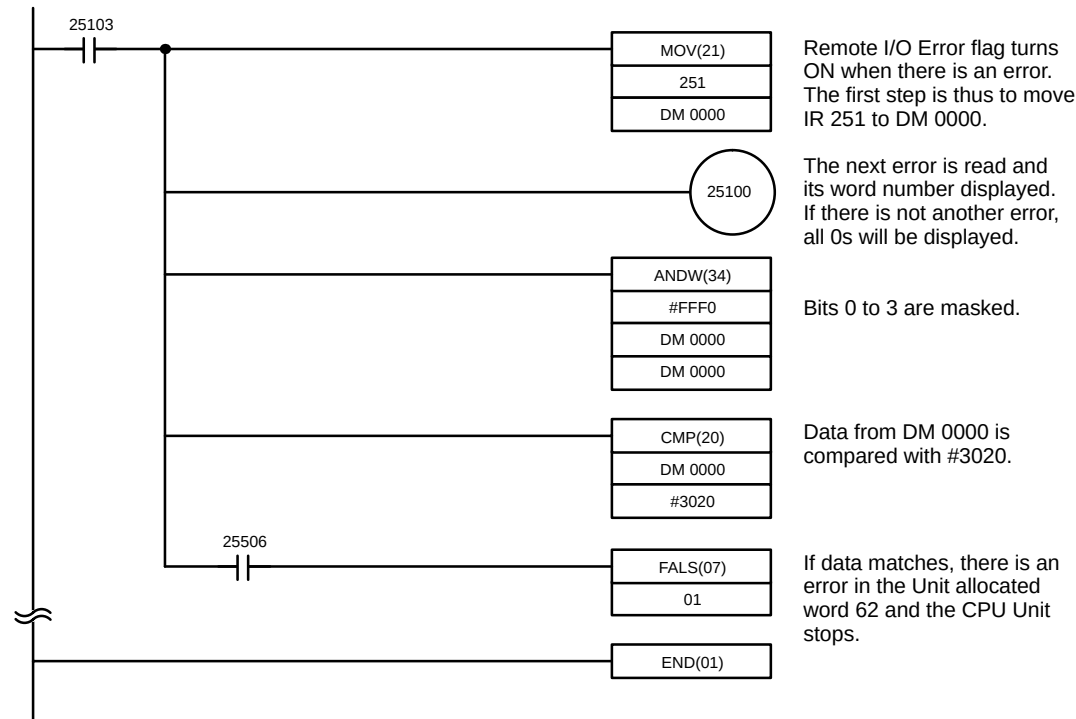


### Locating Errors: C200H Systems


Using the following system, let's assume errors have occurred in words 230 and 231 (word settings 30 and 31) and that words 230 and 231 have been allocated to Remote Terminals.

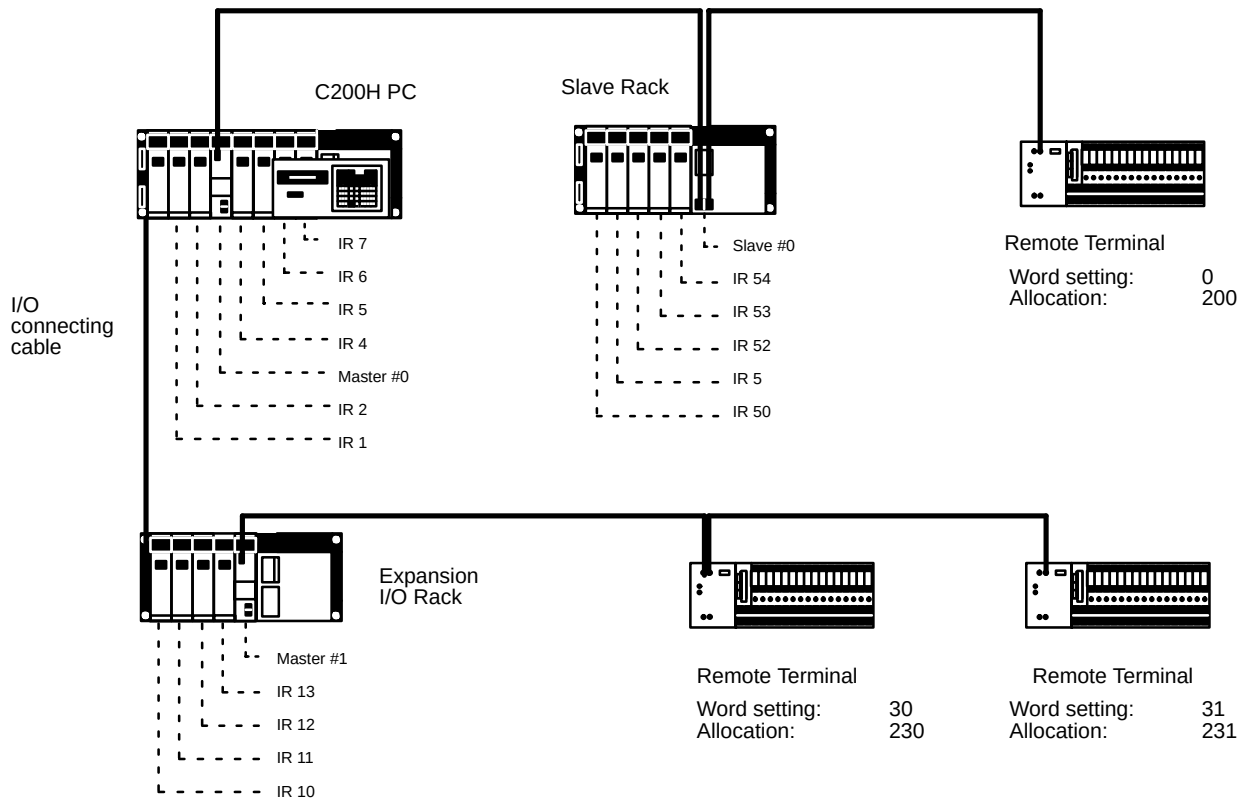


Word 251 contains the following data.

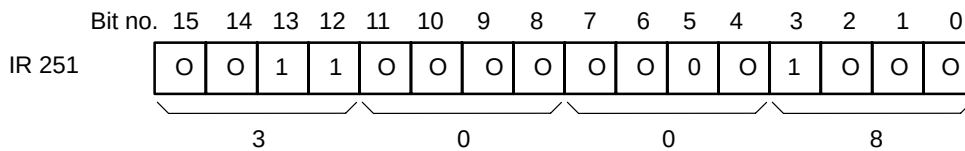


Monitoring word 59 with the Programming Console produces the following display.

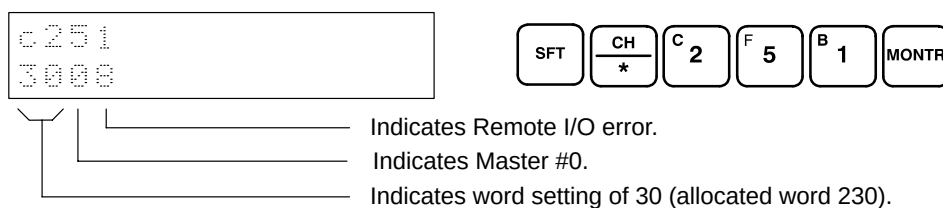


To check for other errors, monitor 25100 and force-set the system. This causes the next error word to be displayed.

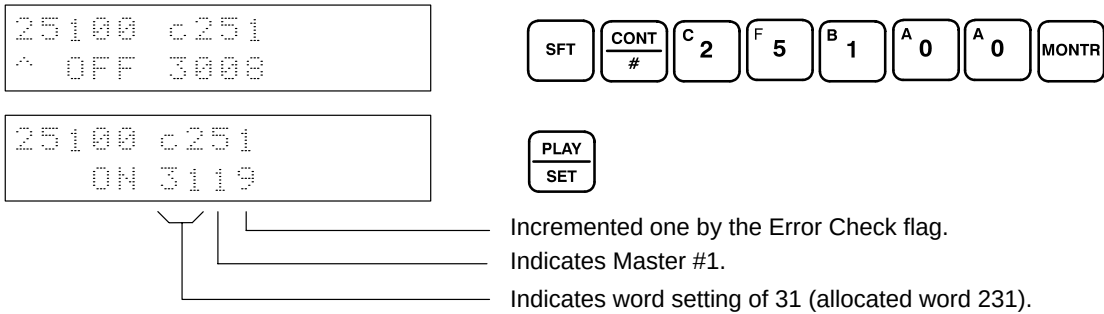

To read the next error, reset the Error Check bit, then set it again. If Slave #1 connected to Master #1 has as error, the following display will appear.

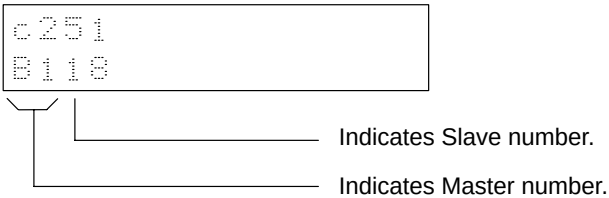


This is an example program to stop PC operation if an error occurs in the Remote Terminal allocated word 230. Operation can be restarted by first removing the cause of the error, then setting and resetting the Error Check bit until the contents of word 251 goes to 0000 and then clearing the error via the Programming Console.

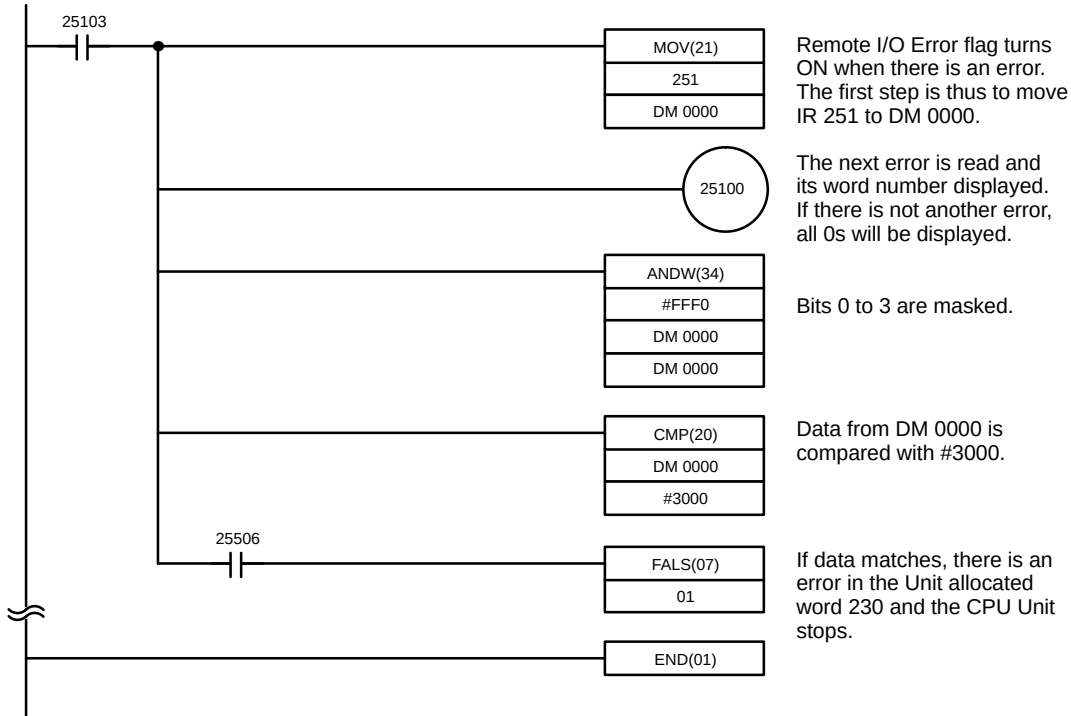

## 7-3 Locating Transmission Errors


### Before Terminator Acknowledgement

The TR/ERR indicator may indicate an error before the END RS CHK indicator goes off. If it does, the line may be disconnected or wired incorrectly, or the power to one of the Units in the line may be off. To locate the problem, set the Unit just before the end as the terminator, disconnect the cable to the last Unit, and test the System again. Continue moving the terminator up one Unit at a time until the Master is able to acknowledge a terminator. This will let you know what section of the line the problem is in. Check the power supply and data transmission line connections for that section and test the System again.

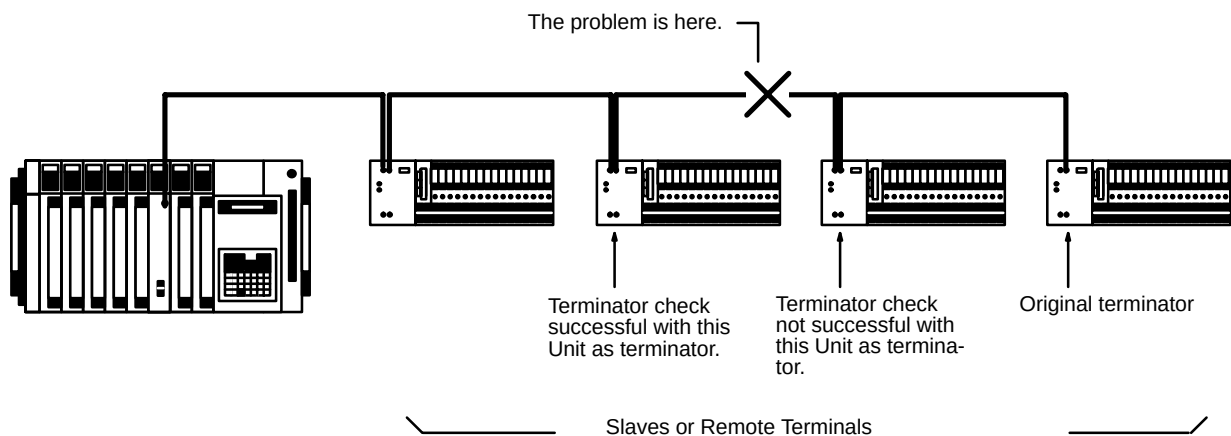

### After Terminator Acknowledgement

Check the TR/ERR indicator of each Unit in the line to determine where the error has occurred. The problem can then be corrected by repairing the transmission line between the last Unit with the TR/ERR indicator flashing, indicating normal transmission, and the first Unit with the TR/ERR indicator lit, indicating an error.

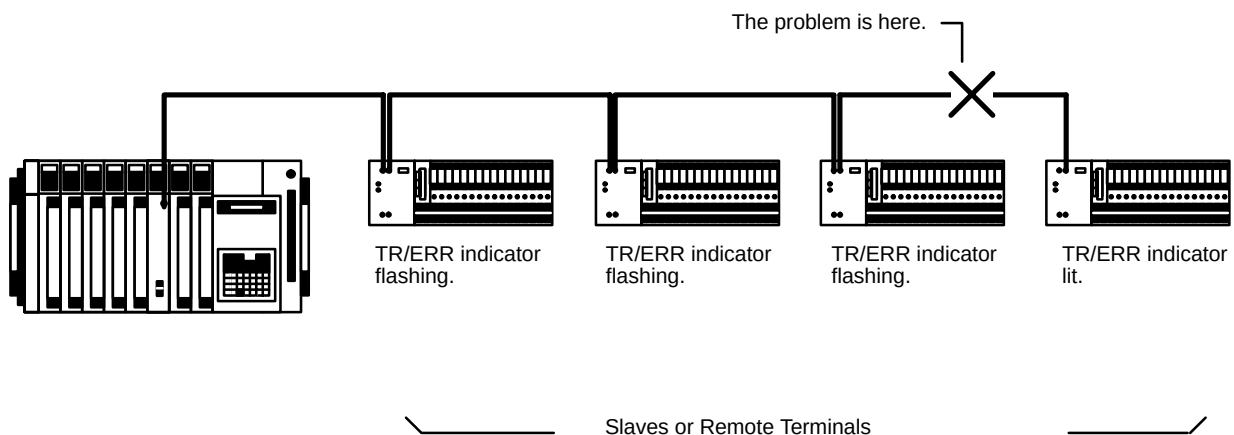


## 7-4 CONTINUE and STOP Mode Operation

The following tables can be compared and contrasted to understand differences between CONTINUE and STOP mode operation. These modes are set on Masters. Refer to *Subsection 4-1* for setting details.

### Operations in CONTINUE Mode


The following configuration and table will be used to show LED indications when power to Slave #0 is interrupted in CONTINUE mode. Refer to *Section 2* for details on indicator operation.

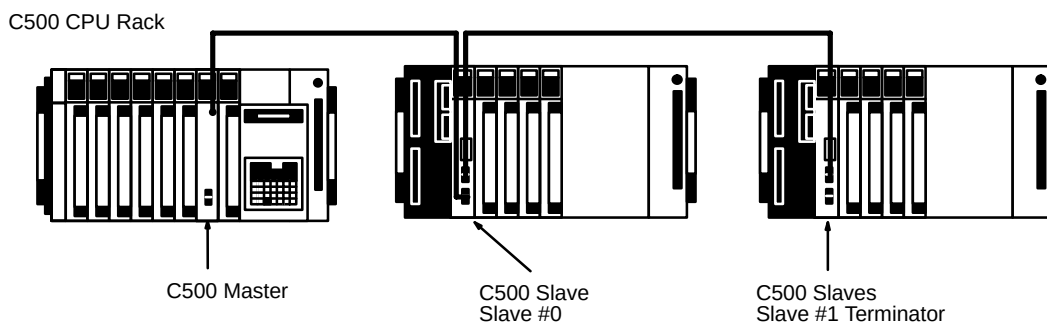

| Condition                      | C500 LEDs                                                                                                                                                                                                                     |     |         |         |         | LEDs on Master                                                 |         |              |          | LEDs on Slave #0   |         | LEDs on Slave #1  |         |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|---------|---------|---------|----------------------------------------------------------------|---------|--------------|----------|--------------------|---------|-------------------|---------|
|                                | POWER                                                                                                                                                                                                                         | RUN | ERROR   | ALARM   | OUT IN  | TR/ERR                                                         | TEST OK | END RS CHECK | LINE ERR | TR/ERR             | ERR     | TR/ERR            | ERR     |
| Normal operation               | lit                                                                                                                                                                                                                           | lit | not lit | not lit | not lit | flash                                                          | not lit | not lit      | not lit  | flash              | not lit | flash             | not lit |
| Power interruption to Slave #0 | lit                                                                                                                                                                                                                           | lit | not lit | lit     | not lit | lit                                                            | not lit | not lit      | not lit  | not lit            | not lit | flash             | not lit |
|                                | Remote I/O error occurs; operation continues. Word 59 contains "#B008."                                                                                                                                                       |     |         |         |         | Transmission error occurs; transmission to Slave #1 continues. |         |              |          | Power interrupted. |         | Normal operation. |         |
| Power restored to Slave #0     | lit                                                                                                                                                                                                                           | lit | not lit | lit     | not lit | flash                                                          | not lit | not lit      | not lit  | flash              | not lit | flash             | not lit |
|                                | <ol style="list-style-type: none"> <li>All ALARM LEDs turned off by performing recovery operation from Programming Console.</li> <li>Remote I/O Error flag cleared by turning Error Check flag ON, then OFF again.</li> </ol> |     |         |         |         | Normal operation                                               |         |              |          | Normal operation   |         |                   |         |

### Operations in STOP Mode

The following configuration and table will be used to show LED indications when power to Slave #0 is interrupted in STOP mode Refer to *Section 2* for indicator details.

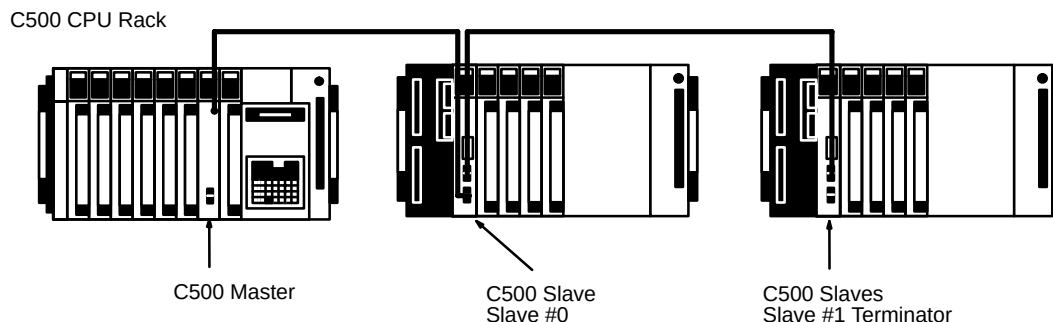

| Condition                      | C500 LEDs                                                               |     |         |         |         | LEDs on Master                                                  |         |              |          | LEDs on Slave #0   |         | LEDs on Slave #1                    |         |
|--------------------------------|-------------------------------------------------------------------------|-----|---------|---------|---------|-----------------------------------------------------------------|---------|--------------|----------|--------------------|---------|-------------------------------------|---------|
|                                | POWER                                                                   | RUN | ERROR   | ALARM   | OUT IN  | TR/ERR                                                          | TEST OK | END RS CHECK | LINE ERR | TR/ERR             | ERR     | TR/ERR                              | ERR     |
| Normal operation               | lit                                                                     | lit | not lit | not lit | not lit | flash                                                           | not lit | not lit      | not lit  | flash              | not lit | flash                               | not lit |
| Power interruption to Slave #0 | lit                                                                     | lit | not lit | lit     | not lit | lit                                                             | not lit | not lit      | not lit  | not lit            | not lit | lit                                 | not lit |
|                                | Remote I/O error occurs; operation continues. Word 59 contains "#B008." |     |         |         |         | Transmission error occurs; transmission to both Slaves stopped. |         |              |          | Power interrupted. |         | Transmission error                  |         |
| Power restored to Slave #0     | lit                                                                     | lit | not lit | lit     | not lit | lit                                                             | not lit | not lit      | not lit  | lit                | not lit | lit                                 | not lit |
|                                | Remote I/O error.                                                       |     |         |         |         | Transmission error; no transmission to Slaves                   |         |              |          | Not functioning.   |         | Transmission error; not functioning |         |

(Restarting Remote I/O System)

| Condition                         | C500 LEDs                                                                                                                                                                                                                                |     |         |         |         | LEDs on Master                                                                                                                                                                                                                                                                                                             |         |              |          | LEDs on Slave #0                                   |         | LEDs on Slave #1                                                                                              |         |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|---------|---------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|--------------|----------|----------------------------------------------------|---------|---------------------------------------------------------------------------------------------------------------|---------|
|                                   | POWER                                                                                                                                                                                                                                    | RUN | ERROR   | ALARM   | OUT IN  | TR/ERR                                                                                                                                                                                                                                                                                                                     | TEST OK | END RS CHECK | LINE ERR | TR/ERR                                             | ERR     | TR/ERR                                                                                                        | ERR     |
| I/O table created (PROGRAM mode). | lit                                                                                                                                                                                                                                      | lit | not lit | not lit | not lit | flash                                                                                                                                                                                                                                                                                                                      | not lit | not lit      | not lit  | flash                                              | not lit | flash                                                                                                         | not lit |
|                                   | <ol style="list-style-type: none"> <li>1. Create I/O table in PROGRAM mode and then set into RUN or MONITOR mode.</li> <li>2. Error flag is cleared when I/O table is created.</li> </ol>                                                |     |         |         |         | <ol style="list-style-type: none"> <li>1. Transmissions with Slave started when I/O table is created.</li> <li>2. PC operation begins when RUN or MONITOR mode is entered.</li> </ol>                                                                                                                                      |         |              |          | Transmissions started when I/O table is created.   |         | Transmissions started when I/O table is created. All outputs are turned off if the Slave is set in HOLD mode. |         |
| TEST switch pressed (any mode).   | lit                                                                                                                                                                                                                                      | lit | not lit | lit     | not lit | flash                                                                                                                                                                                                                                                                                                                      | not lit | not lit      | not lit  | flash                                              | not lit | flash                                                                                                         | not lit |
|                                   | <ol style="list-style-type: none"> <li>1. All ALARM LEDs turned off by performing recovery operation from Programming Console.</li> <li>2. Remote I/O error flag cleared by turning error check flag OFF, ON, then OFF again.</li> </ol> |     |         |         |         | <ol style="list-style-type: none"> <li>1. Transmissions with Slave started when TEST switch is pressed.</li> <li>2. If TEST switch is pressed in PROGRAM mode, transmissions will start when the TEST switch is pressed, but operation (i.e., refreshing Slave I/O) begins when RUN or MONITOR mode is entered.</li> </ol> |         |              |          | Transmissions started when TEST switch is pressed. |         |                                                                                                               |         |

(Restarting Remote I/O System, Continued)

| Condition                       | C500 LEDs        |     |         |         |         | LEDs on Master   |         |              |          | LEDs on Slave #0 |         | LEDs on Slave #1 |         |
|---------------------------------|------------------|-----|---------|---------|---------|------------------|---------|--------------|----------|------------------|---------|------------------|---------|
|                                 | POWER            | RUN | ERROR   | ALARM   | OUT IN  | TR/ERR           | TEST OK | END RS CHECK | LINE ERR | TR/ERR           | ERR     | TR/ERR           | ERR     |
| Power to system turned back on. | lit              | lit | not lit | not lit | not lit | flash            | not lit | not lit      | not lit  | flash            | not lit | flash            | not lit |
|                                 | Normal operation |     |         |         |         | Normal operation |         |              |          | Normal operation |         |                  |         |

## 7-5 Recovery in STOP Mode

When an error occurs in STOP mode, operational recovery is achieved through any one of the following steps after the cause of the error has been removed.

### C500 Master

- 1, 2, 3... 1. Press the TEST switch on the Master.
2. Re-register the I/O table in PROGRAM mode.
3. Turn the power to the Rack to which the Master is mounted off and then back on.

### C200H Master

- 1, 2, 3... 1. Turn the Master's Restart Bit ON and then back OFF.
2. Turn the power to the Rack to which the Master is mounted off and then back on.
3. Re-register the I/O table in PROGRAM mode.

## 7-6 I/O Table Creation Problems

It is sometimes not possible to enter the I/O table directly following changes to the number of Masters or Slaves. If table creation is not immediately possible, use the procedure given below for your PC. Before proceeding, be sure that you have not exceeded the maximum number of Units allowed in a Remote I/O System or Subsystem.

### C200H

Clear the table and then recreate it. For all others remove the Masters.

### Other PCs

- 1, 2, 3... 1. Turn off power to the PC(s).
2. Remove all Masters from their Racks.
3. Turn on the power to the PC(s), and enter the I/O table in PROGRAM mode.
4. Turn off the power to the PC(s), and mount all Masters.
5. Turn on the power to all Slaves.
6. Turn on the power to the PC(s).
7. Enter the I/O table.

## 7-7 Slave Unit Numbers with Multiple Terminators

### 7-7-1 Applicable Products

A feature enabling Slave unit numbers to be obtained when more than one terminator has been set has been added to the C500-RM201 and C200H-RM201 Remote I/O Master Units. This feature is available for products manufactured on or after June 3, 1999 (confirm using the lot number; see note).

**Note** The date of manufacture can be confirmed using the lot number. The first two digits on the left indicate the day (01 to 31), the third digit indicates the month (1 to 9, X (October), Y (November), Z (December)), and the fourth digit indicates the last digit of the year.

#### Example

Lot number 0369 → Manufactured on June 3, 1999.



## 7-7-2 Notification Method for Multiple Terminators

### C120/C500

#### Display


#### CPU Unit

Remote I/O errors are not indicated on the CPU Unit.

#### Master Unit

| Display                          |          | Function                                           |
|----------------------------------|----------|----------------------------------------------------|
| END RS CHK<br>(Terminator check) | Lit      | Lit until a terminator is found.                   |
|                                  | Flashing | Flashes if multiple terminators are set.           |
|                                  | Unlit    | Turns OFF if one and only one terminator is found. |

#### SR Area

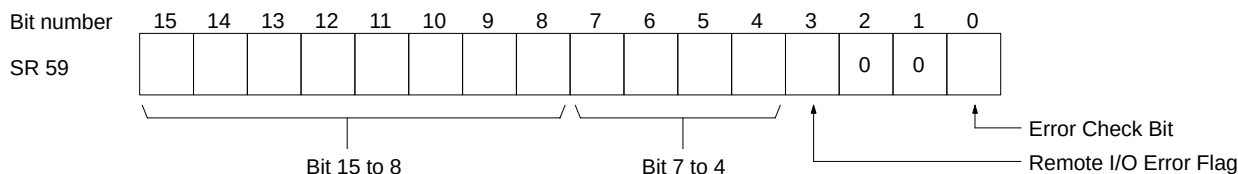

| Location of error                                     | Bit 15 to 8                | Meaning                                                                                                          | Bit 7 to 4 | Meaning                                                       |
|-------------------------------------------------------|----------------------------|------------------------------------------------------------------------------------------------------------------|------------|---------------------------------------------------------------|
| Remote I/O Master Unit<br>or<br>Remote I/O Slave Unit | B0 Hex<br>to<br>B3 Hex     | The digit on the right (0 to 3) indicates the mounting order of the Master of the Remote I/O Subsystem involved. | 8 (BCD)    | Indicates error in Remote I/O Master Unit.                    |
|                                                       |                            |                                                                                                                  | 0 (BCD)    | Indicates error in Remote I/O Slave Unit with unit number #0. |
|                                                       |                            |                                                                                                                  | 1 (BCD)    | Indicates error in Remote I/O Slave Unit with unit number #1. |
| Remote Terminal                                       | 00 (BCD)<br>to<br>31 (BCD) | Indicates the word address setting for the Remote Terminal.                                                      | 0, 1 (BCD) | Either 0 or 1 indicates error in Remote Terminal.             |

#### Error Check Bit

If there are errors in more than one Slave, or multiple terminators have been set, data for the Units can be accessed in order by turning this bit ON and OFF.

#### Remote I/O Error Flag

This flag indicates that an error has occurred in a Remote I/O Slave Unit or a Remote Terminal (or an Optical I/O Unit or I/O Link Unit). It also turns ON where there is more than one terminator set.

#### Summary

Multiple terminators are detected as follows:

- The "END RS CHK" indicator on the Remote I/O Master (RM) Unit flashes.
- By turning SR 5900 ON and OFF, the Slaves set as terminators can be read in order.

### C1000H/C2000H/C2000


#### Display

#### CPU Unit

Remote I/O errors are not indicated at the CPU Unit.

#### Master Unit

| Display                          |          | Function                                           |
|----------------------------------|----------|----------------------------------------------------|
| END RS CHK<br>(Terminator check) | Lit      | Lit until a terminator is found.                   |
|                                  | Flashing | Flashes if multiple terminators are set.           |
|                                  | Unlit    | Turns OFF if one and only one terminator is found. |

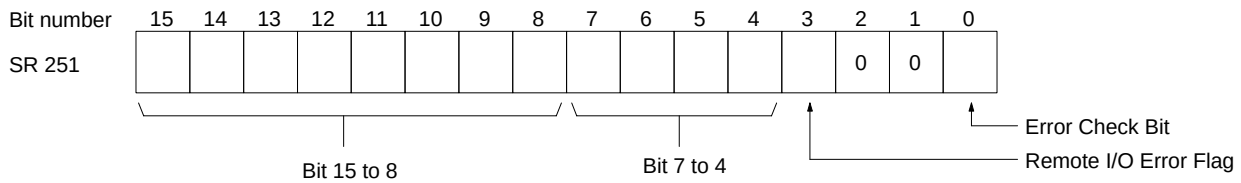**SR Area**

| Location of error                               | Bit 15 to 8          | Meaning                                                                                                          | Bit 7 to 4   | Meaning                                                                                      |
|-------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------------------------|--------------|----------------------------------------------------------------------------------------------|
| Remote I/O Master Unit or Remote I/O Slave Unit | B0 Hex to B7 Hex     | The digit on the right (0 to 7) indicates the mounting order of the Master of the Remote I/O Subsystem involved. | 0 to 7 (BCD) | Indicate error in Remote I/O Slave Unit with unit numbers #0 to #7. (C2000: #0 and #1 only.) |
|                                                 |                      |                                                                                                                  | 8 (BCD)      | Indicates error in the Remote I/O Master Unit.                                               |
| Remote Terminal                                 | 00 (BCD) to 31 (BCD) | Indicates the word address setting for the Remote Terminal.                                                      | 0, 1 (BCD)   | Remote Terminal on Remote I/O Subsystem of Master with word multiplier 0.                    |
|                                                 |                      |                                                                                                                  | 2, 3 (BCD)   | Remote Terminal on Remote I/O Subsystem of Master with word multiplier 1.                    |
|                                                 |                      |                                                                                                                  | 4, 5 (BCD)   | Remote Terminal on Remote I/O Subsystem of Master with word multiplier 2.                    |
|                                                 |                      |                                                                                                                  | 6, 7 (BCD)   | Remote Terminal on Remote I/O Subsystem of Master with word multiplier 3.                    |

**Error Check Bit**

If there are errors in more than one Slave or multiple terminators have been set, data for the Units can be accessed in order by turning this bit ON and OFF.

**Remote I/O Error Flag**

This flag indicates that an error has occurred in a Remote I/O Slave Unit or a Remote Terminal. It also turns ON where there is more than one terminator set.

**Summary**

Multiple terminators are detected as follows:



- The "END RS CHK" indicator on the Remote I/O Master (RM) Unit flashes.
- Turn SR 25100 ON and OFF to read the terminators in order.

**CVM1/CV****Display**CPU Unit

Remote I/O errors are not indicated at the CPU Unit.

Master Unit

| Display                          |          | Function                                           |
|----------------------------------|----------|----------------------------------------------------|
| END RS CHK<br>(Terminator check) | Lit      | Lit until a terminator is found.                   |
|                                  | Flashing | Flashes if multiple terminators are set.           |
|                                  | Unlit    | Turns OFF if one and only one terminator is found. |

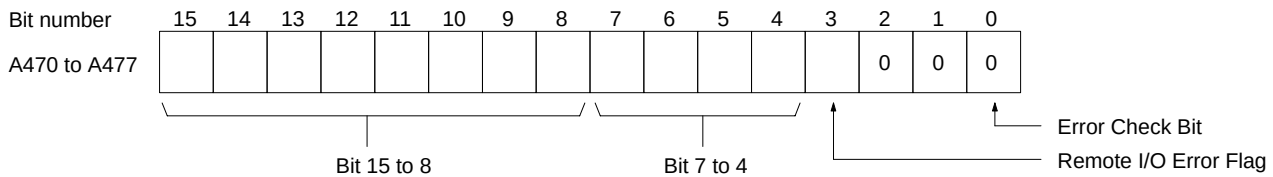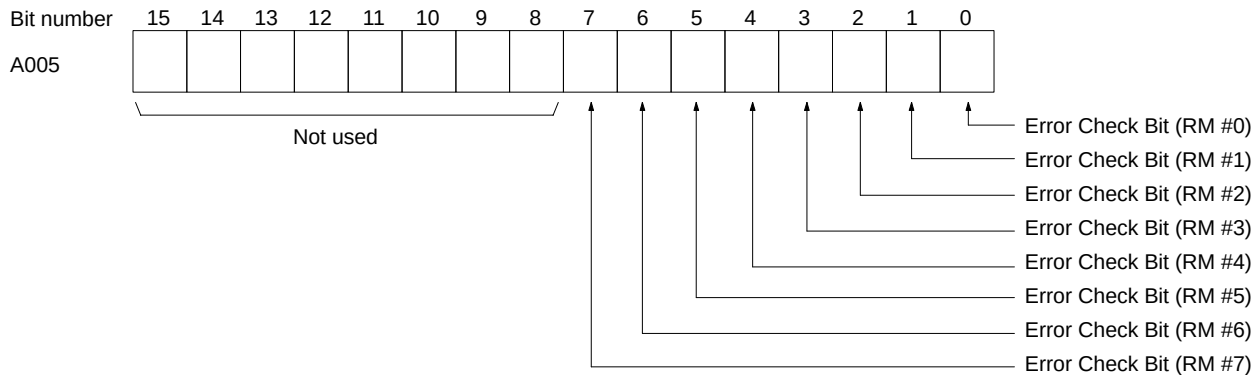**Auxiliary Area**

| Location of error                                     | Bit 15 to 8                | Meaning                                                                                                          | Bit 7 to 4   | Meaning                                                             |
|-------------------------------------------------------|----------------------------|------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------------------------------------------|
| Remote I/O Master Unit<br>or<br>Remote I/O Slave Unit | B0 Hex<br>to<br>B7 Hex     | The digit on the right (0 to 7) indicates the mounting order of the Master of the Remote I/O Subsystem involved. | 0 to 7 (BCD) | Indicate error in Remote I/O Slave Unit with unit numbers #0 to #7. |
|                                                       |                            |                                                                                                                  | 8 (BCD)      | Indicates error in the Remote I/O Master Unit.                      |
| Optical I/O Unit                                      | 00 (BCD)<br>to<br>31 (BCD) | Indicates the address of the Optical I/O Unit where the error has occurred.                                      | 0 (BCD)      | Indicates an even word.                                             |
|                                                       |                            |                                                                                                                  | 1 (BCD)      | Indicates an odd word.                                              |
| I/O Link Unit<br>or<br>Remote Terminal                | 00 (BCD)<br>to<br>31 (BCD) | Indicates the address of the I/O Link Unit or Remote Terminal where the error has occurred.                      | ---          |                                                                     |

**Error Check Bit**

If there are errors in more than one Slave, or multiple terminators have been set, data for the Units can be accessed in order by turning these bits ON (after the data is read, the bit automatically turns OFF). Bits A00500 to A00507 correspond to Masters #0 to #7.

**Remote I/O Error Flag**

This flag indicates that an error has occurred in a Remote I/O Slave Unit, an I/O Link Unit, or a Remote Terminal. It also turns ON where there is more than one terminator set.

**Summary**

Multiple terminators are detected as follows:


- The “END RS CHK” indicator on the Remote I/O Master (RM) Unit flashes.
- By turning ON A00500 to A00507, the terminators can be read in order.

**C200H/C200HS/C200HX/C200HG/C200HE(-Z)****Display**CPU Unit

Remote I/O errors are not indicated at the CPU Unit.

Master Unit

| Display                      |          | Function                                           |
|------------------------------|----------|----------------------------------------------------|
| END RS<br>(Terminator check) | Lit      | Lit until a terminator is found.                   |
|                              | Flashing | Flashes if multiple terminators are set.           |
|                              | Unlit    | Turns OFF if one and only one terminator is found. |

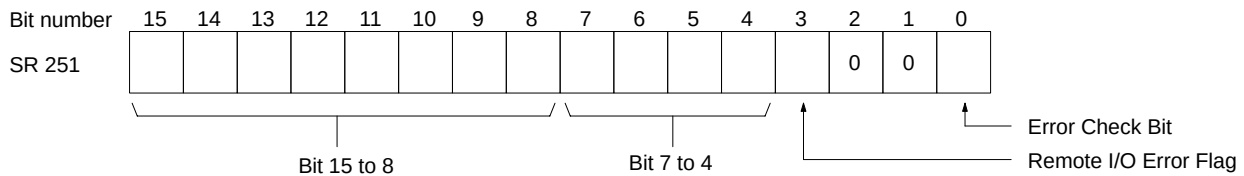**SR Area**

| Location of error     | Bit 15 to 8          | Meaning                                                                                    | Bit 7 to 4   | Meaning                                                 |
|-----------------------|----------------------|--------------------------------------------------------------------------------------------|--------------|---------------------------------------------------------|
| Remote I/O Slave Unit | B0 Hex to B1 Hex     | The digit on the right indicates the unit number of the Remote I/O Master Unit (#0 or #1). | 0 to 4 (BCD) | Indicates the unit number of the Remote I/O Slave Unit. |
| Remote Terminal       | 00 (BCD) to 31 (BCD) | Indicates the word address setting for the Remote Terminal.                                | 0, 1 (BCD)   | Either 0 or 1 indicates error in Remote Terminal.       |

**Error Check Bit**

If there are errors in more than one Slave, or multiple terminators have been set, data for the Units can be accessed in order by turning this bit OFF and ON.

**Remote I/O Error Flag**

This flag indicates that an error has occurred in a Remote I/O Slave Unit or a Remote Terminal. It also turns ON where there is more than one terminator set.

**Summary**

Multiple terminators are detected as follows:

- The "END RS" indicator on the Remote I/O Master (RM) Unit flashes.
- By turning SR 25100 ON and OFF, the terminators can be read in order.

# Appendix A

## Standard Models

### Masters and Slaves

| Name                  | Specifications                                                 | Model Number |
|-----------------------|----------------------------------------------------------------|--------------|
| C500 Master           | All but C200H PCs                                              | C500-RM201   |
| C500 Slave            | ---                                                            | C500-RT201   |
| C200H Master          | C200H PCs only<br>100/120 or 200/240 VAC (switchable) 50/60 Hz | C200H-RM201  |
| C200H Slave           | 100 to 120V/200 to 240 VAC (switchable) 50/60 Hz               | C200H-RT201  |
|                       | 24 VDC                                                         | C200H-RT202  |
| C500H Slave Backplane | Can only be used for Slave Racks                               | C500-BL061   |
|                       |                                                                | C500-BL041   |

### Remote Interfaces, I/O Blocks, and Remote Terminals

| Name             | Specifications             | Model number                   |
|------------------|----------------------------|--------------------------------|
| Remote Interface | Specify 12 VDC or 24 VDC   | Input<br>G71-IC16              |
|                  |                            | Output<br>G71-OD16             |
| I/O Block        | Specify 12 VDC or 24 VDC   | DC input<br>G7TC-ID16          |
|                  | Specify 100 VAC or 200 VAC | AC input<br>G7TC-IA16          |
|                  | Specify 12 VDC or 24 VDC.  | Relay output<br>G7TC-OC16      |
| Remote Terminal  | Specify 12 VDC or 24 VDC   | Transistor input<br>G72C-ID16  |
|                  |                            | Transistor output<br>G72C-OD16 |

**Note** See *Section 3* for details on pairing Remote Terminals and I/O Blocks.

### DIN Rail and Other Accessories

| Name                         | Specifications                                          | Model Number |
|------------------------------|---------------------------------------------------------|--------------|
| DIN Rail                     | Length: 50 cm, Height: 7.3 mm                           | PFP-50N      |
|                              | Length: 1 m, Height: 7.3 mm                             | PFP-100N     |
|                              | Length: 1 m, Height: 16 mm                              | PFP-100N2    |
| End Plate                    | ---                                                     | PFP-M        |
| Spacer                       | ---                                                     | PFP-S        |
| Shorting Plate               | To connect 4 terminals                                  | G78-04       |
| I/O Relays<br>(replacements) | Input<br>Designate 12 VDC, 24 VDC, 100 VAC, or 200 VAC. | G7T-1122S    |
|                              | Output Designate 12 VDC or 24 VDC.                      | G7T-1112S    |

### Link Adapters

| Name         | Specifications                                                                                          | Model Number |
|--------------|---------------------------------------------------------------------------------------------------------|--------------|
| Link Adapter | Optical (APF/PCF) one connector, RS-485 one connector<br>For Wired Remote I/O Units only, used in pairs | B500-AL007-P |

### Remote I/O Unit Connecting Cable

The user can purchase the following recommended RS-485 cable from an independent source.

|                                  |        |                                  |
|----------------------------------|--------|----------------------------------|
| Remote I/O Unit connecting cable | RS-485 | VCTF 2-conductor x 0.75 mm (JIS) |
|----------------------------------|--------|----------------------------------|

### All Plastic Optical Fiber Cable

Model numbers with the suffix -P can be connected to up to 20 m of APF cable.

| Product                     | Specifications                                                                                           | Model Number |
|-----------------------------|----------------------------------------------------------------------------------------------------------|--------------|
| Plastic optical fiber cable | Cable only (w/o connector)<br>Order in multiples of 5 m from 5 to 100 m, or in lengths of 200 m or 500 m | 3G5A2-PF002  |
| Optical connector A         | 2 optical connectors (brown)<br>For plastic optical fiber cable 10 m long or shorter                     | 3G5A2-CO001  |
| Optical connector B         | 2 optical connectors (black)<br>For plastic optical fiber cable 8 to 20 m long                           | 3G5A2-CO002  |
| Plastic optical fiber set   | 1 m cable with connector A attached to both ends                                                         | 3G5A2-PF101  |
| Optical connector puller    |                                                                                                          | 3G5A2-TL001  |

### Plastic-Clad Optical Fiber Cable

Model numbers with the suffix -P can be connected to up to 200 m of PCF cable.

| Product                                 | Description                                               |                                                                                            | Model Number |
|-----------------------------------------|-----------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------|
| Optical fiber cable (indoor)            | 0.1 m, w/ connector                                       | Operating temperature $-10^{\circ}$ to $70^{\circ}$ C                                      | 3G5A2-OF011  |
|                                         | 1 m, w/ connector                                         |                                                                                            | 3G5A2-OF101  |
|                                         | 2 m, w/ connector                                         |                                                                                            | 3G5A2-OF201  |
|                                         | 3 m, w/ connector                                         |                                                                                            | 3G5A2-OF301  |
|                                         | 5 m, w/ connector                                         |                                                                                            | 3G5A2-OF501  |
|                                         | 10 m, w/ connector                                        |                                                                                            | 3G5A2-OF111  |
|                                         | 20 m, w/ connector                                        |                                                                                            | 3G5A2-OF211  |
|                                         | 30 m, w/ connector                                        |                                                                                            | 3G5A2-OF311  |
|                                         | 40 m, w/ connector                                        |                                                                                            | 3G5A2-OF411  |
|                                         | 50 m, w/ connector                                        |                                                                                            | 3G5A2-OF511  |
| Optical fiber cable<br>(indoor/outdoor) | 1 to 500 m, w/ connector<br>(order in multiples of 1 m)   | Operating temperature $-10^{\circ}$ to $70^{\circ}$ C                                      | 3G5A2-OF002  |
|                                         | 501 to 800 m, w/ connector<br>(order in multiples of 1 m) | Operating temperature $0^{\circ}$ to $55^{\circ}$ C<br>(Do not expose to direct sunlight.) |              |

**Note** Since optical fiber cable cannot be spliced as easily as ordinary cables when cut or extended, be sure to order an adequate length. The cable length does not include connectors.

# Appendix B

## Specifications

### General Ratings

Conform to C-series ratings.

### Characteristics

#### Common Characteristics

|                              |                                         |
|------------------------------|-----------------------------------------|
| <b>Communication</b>         | Two-line, half-duplex                   |
| <b>Synchronization</b>       | Start-stop                              |
| <b>Transmission lines</b>    | 2-conductor (VCTF 0.75 mm recommended.) |
| <b>Interface</b>             | RS-485                                  |
| <b>Transmission speed</b>    | 187.5 kbps                              |
| <b>Transmission distance</b> | 200 m (total length per Master)         |

#### C500 Remote I/O Master Unit (C500-RM201)

|                             |                                                                                                                                       |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power consumption</b>    | 300 mA max. at 5 V                                                                                                                    |
| <b>Weight</b>               | 500 g max.                                                                                                                            |
| <b>Diagnostic functions</b> | Transmission error checks<br>BCC and reversed transmission verification<br>CPU Unit error monitoring<br>Transmission line short check |

#### C500 Remote I/O Slave Unit (C500-RT201)

|                             |                                                                                                                  |
|-----------------------------|------------------------------------------------------------------------------------------------------------------|
| <b>Power consumption</b>    | 500 mA max. at 5 V                                                                                               |
| <b>Weight</b>               | 500 g max.                                                                                                       |
| <b>RUN Output</b>           | OMRON G6B relay (closed during operation)<br>Contact capacity: 2 A max. at 250 VAC or 24 VDC ( $\cos \phi = 1$ ) |
| <b>Diagnostic functions</b> | Transmission error checks<br>BCC and reversed transmission verification<br>CPU Unit error monitoring             |

#### C200H Remote I/O Master Unit (C200H-RM201)

|                             |                                                                                         |
|-----------------------------|-----------------------------------------------------------------------------------------|
| <b>Power consumption</b>    | 200 mA max. at 5 V                                                                      |
| <b>Weight</b>               | 350 g max.                                                                              |
| <b>Diagnostic functions</b> | Transmission error checks<br>CPU Unit error monitoring<br>Transmission line short check |



## C200H Remote I/O Slave Units

| ---                                       | C200H-RT201                                                                                                                                                  | C200H-RT202      |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| Power supply voltage                      | 100/110 or 200/240 VAC (switchable)<br>50/60 Hz                                                                                                              | 24 VDC           |
| Allowable fluctuations in supply voltage. | 85 to 132 or 170 to 264 VAC                                                                                                                                  | 20.4 to 26.4 VDC |
| DC output terminal                        | 24 VDC +10%/–20%, 0.3 A max.                                                                                                                                 | None             |
| Power consumption                         | 100 VA max.                                                                                                                                                  | 80 W max.        |
| Weight                                    | 1.3 kg max.                                                                                                                                                  | 1.3 kg max.      |
| RUN Output                                | Closed during operation<br>Contact capacity:<br>2 A max. at 250 VAC ( $\cos \phi = 1$ )<br>0.5 A max. at 250 VAC ( $\cos \phi = 0.4$ )<br>2 A max. at 24 VDC |                  |
| Power output capacity                     | 3 A max. at 5 VDC (actual output to I/O Units: 2.7 A max.)                                                                                                   |                  |
| Number of transmission words              | 10 per Slave                                                                                                                                                 |                  |

## Remote Terminals

|                      |                                                                                                               |
|----------------------|---------------------------------------------------------------------------------------------------------------|
| Power consumption**  | 200 mA input/500 mA output max. at 24 VDC<br>250 mA input/800 mA output max. at 12 VDC                        |
| Weight               | 250 g max.                                                                                                    |
| RUN Output           | G6B relay (closed during operation)<br>Contact capacity:<br>2 A max. at 250 VAC or 24 VDC ( $\cos \phi = 1$ ) |
| Diagnostic functions | Transmission error checks BCC and reversed transmission verification<br>CPU Unit error monitoring             |

\*\*Power consumption is given with all Remote Terminal and I/O Block points ON.

## Remote Terminals

## G72C-ID16 (Input)

|                      |                                                                                                                       |               |
|----------------------|-----------------------------------------------------------------------------------------------------------------------|---------------|
| Rated input voltage  | 24 VDC                                                                                                                | 12 VDC        |
| Rated input current  | 9.7 mA/point                                                                                                          | 10.9 mA/point |
| ON voltage           | 15 VDC min.                                                                                                           | 8 VDC min.    |
| OFF voltage          | 5.6 VDC max.                                                                                                          | 3.5 VDC max.  |
| ON response time     | 1.5 ms max.                                                                                                           |               |
| OFF response time    | 1.5 ms max.                                                                                                           |               |
| Number of circuits   | 16 points/common                                                                                                      |               |
| Insulation method    | Photocoupler insulation                                                                                               |               |
| Input indicator      | LED indicator (green)                                                                                                 |               |
| RUN output           | G6B 1a contact relay (closed during operation)<br>Contact capacity: 2 A max. at 250 VAC or 24 VDC ( $\cos \phi = 1$ ) |               |
| Diagnostic functions | Transmission error checks<br>BCC and reversed transmission verification<br>CPU Unit error monitoring                  |               |
| Power consumption    | 200 mA max.                                                                                                           | 300 mA max.   |
| Weight               | 400 g max.                                                                                                            |               |

## G72C-OD16 (Output)

|                      |                                                                                                                   |             |
|----------------------|-------------------------------------------------------------------------------------------------------------------|-------------|
| Rated output voltage | 24 VDC                                                                                                            | 12 VDC      |
| Rated output current | 0.3A/point, 2.4 A/Unit                                                                                            |             |
| Residual voltage     | 1.2 V max.                                                                                                        |             |
| Leakage current      | 100 $\mu$ A max.                                                                                                  |             |
| Number of circuits   | 16 points/common                                                                                                  |             |
| Insulation method    | Photocoupler insulation                                                                                           |             |
| Output indicator     | LED indicator (green)                                                                                             |             |
| RUN Output           | G6G 1a contact relay (closed during operation) Contact capacity: 2A max. at 250 VAC or 24 VDC ( $\cos \phi = 1$ ) |             |
| Diagnostic functions | Transmission error checks (BCC and reversed transmission verification)<br>CPU Unit error monitoring               |             |
| Power consumption    | 200 mA max.                                                                                                       | 300 mA max. |
| Weight               | 400 g max.                                                                                                        |             |

## I/O Blocks

| ---                          | G7TC-ID16 or G7TC-IA16                          |                                                | G7TC-OC16                   |                                        |
|------------------------------|-------------------------------------------------|------------------------------------------------|-----------------------------|----------------------------------------|
| Load                         | Resistive<br>(cos ϕ = 1)                        | Inductive<br>(cos ϕ = 0.4, L/R = 7 ms)         | Resistive<br>(cos ϕ = 1)    | Inductive<br>(cos ϕ = 0.4, L/R = 7 ms) |
| Rated load                   | 1 A, 24 VDC                                     | 0.5 A, 24 VDC                                  | 5 A, 24 VDC<br>5 A, 220 VAC | 2 A, 24 VDC<br>1 A, 220VAC             |
| Rated current flow           | 1 A                                             |                                                | 5 A                         |                                        |
| Max. contact voltage         | 250 VAC, 125 VDC                                |                                                |                             |                                        |
| Max. contact current         | 1 A                                             | 0.5 A                                          | 5 A                         | 2 A                                    |
| Max. activation capacity     | 24 W (DC)                                       | 12 W (DC)                                      | 120 W (DC)<br>440 VA (AC)   | 48 W (DC)<br>220 VA (AC)               |
| Min. load (Preference value) | 1 V, 100 mA                                     |                                                | 5 V, 100 mA                 |                                        |
| Electrical life              | 10 million operations at 5 mA;<br>50,000 at 1 A | 2.5 million operations at 10 mA; 20,000 at 1 A | 1 million operations        | 1 million operations                   |
| Mechanical life              | 1 million operations                            |                                                |                             |                                        |
| Ambient temp. range          | −0° to 55°C                                     |                                                |                             |                                        |
| Ambient humidity range       | 35% to 85%                                      |                                                |                             |                                        |
| Weight                       | 800 g max.                                      |                                                |                             |                                        |

## Relay Coils

|                               |                        |                          |             |             |
|-------------------------------|------------------------|--------------------------|-------------|-------------|
| <b>Rated voltage</b>          | 100/110 VAC            | 200/220 VAC              | 12 VDC      | 24 VDC      |
| <b>Rated current (mA)</b>     | 50 Hz: 8.2<br>60 Hz: 7 | 50 Hz: 4.1<br>60 Hz: 3.5 | 42          | 21          |
| <b>Coil resistance (L)</b>    | 8,700                  | 33,300                   | 290         | 1,150       |
| <b>Operating voltage</b>      | 80% max.               | 80% max.                 | 80% max.    | 80% max.    |
| <b>Reset voltage</b>          | 30% min.               | 30% min.                 | 10% min.    | 10% min.    |
| <b>Max. allowable voltage</b> | 110%                   | 110%                     | 110%        | 110%        |
| <b>Power consumption</b>      |                        |                          |             |             |
| <b>Per contact:</b>           | 0.7 VA                 | 0.7 VA                   | 0.5 W       | 0.5 W       |
| <b>16 contacts:</b>           | 11 VA                  | 11 VA                    | approx. 8 W | approx. 8 W |

# Appendix C

## When Using CS1-series PCs

### Overview

With CS1-series PCs, Slaves are connected to the PC using a C200H-RM201 SYSMAC BUS Wired Remote I/O Master Unit (2-wire). Words in the SYSMAC BUS Area or the I/O Terminal Area are allocated for inputs and outputs.

### Differences in Memory Areas

When using CS1-series PCs, the following areas are affected by differences in memory allocation. (Details given in *Data Configuration* below.)

- SYSMAC BUS Area
- I/O Terminal Area

### Data Configuration

#### SYSMAC BUS Area (Slave Rack Allocation)

CIO 3000 to CIO 3049 are allocated to C200H Remote I/O Slave Units based on their unit number settings (0 to 4) in 10-word blocks. From each 10-word block, 16 bits are allocated to each slot (even if the slot is not used) of the Slave Rack starting from the left (the slot farthest from the Slave Unit).

- Note**
1. The words are allocated according to unit numbers even when two Master Units are being used.
  2. If C500 Remote I/O Slave Racks (C500-RT201) are used, the word allocation for each Slave Rack will be twice (i.e., 20 words) that of C200H Slaves. Unit numbers #0 to #3 can be set (although consecutive unit numbers cannot be set.)

| Unit number of Slave Unit | CS1                  | C200H/HX/HG/HE/HS |
|---------------------------|----------------------|-------------------|
| 0                         | CIO 3000 to CIO 3009 | IR 050 to IR 059  |
| 1                         | CIO 3010 to CIO 3019 | IR 060 to IR 069  |
| 2                         | CIO 3020 to CIO 3029 | IR 070 to IR 079  |
| 3                         | CIO 3030 to CIO 3039 | IR 080 to IR 089  |
| 4                         | CIO 3040 to CIO 3049 | IR 090 to IR 099  |

#### I/O Terminal Area (Allocation for Slaves Other than Slave Racks)

Each Slave is allocated 1 word based on its unit number setting (0 to 31) except for Optical I/O Units, which are allocated 2 words each.

- Note** The words are allocated according to unit numbers even when two Master Units are being used.

| Unit number | CS1      | C200H/HX/HG/HE/HS |
|-------------|----------|-------------------|
| 0           | CIO 3100 | IR 200            |
| 1           | CIO 3101 | IR 201            |
| to          | to       | to                |
| 31          | CIO 3131 | IR 231            |

- Note** When using two Masters, ensure that the word allocations do not overlap.

## Auxiliary Area

| Name                                           | CS1              | Description                                                                                                                                                                                     | Corresponding bits in C200H/HX/HG/HE/HS                                                                                 |
|------------------------------------------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| SYSMAC BUS Error Flag (Non-fatal error)        | A40205           | On when a transmission error occurs in a data transfer in the SYSMAC BUS system. The number of the Master involved is indicated with bits A40500 and A40501.                                    | SR 25312                                                                                                                |
| SYSMAC BUS Master Error Flags                  | A40500 to A40501 | When an error occurs in the SYSMAC BUS system, the flag for the affected Master Unit will be turned ON.<br>A40500: Flag for Master Unit #0<br>A40501: Flag for Master Unit #0                   | SR 25104 to SR 25115                                                                                                    |
| Slave Number of SYSMAC BUS Error After Startup | A42504 to A42506 | When there is an error in a Slave Rack, these bits contain the slave's unit number.                                                                                                             | AR 0200 to AR 0204 correspond to unit numbers #0 to #4.                                                                 |
|                                                | A42504 only      | When there is an error in an Optical I/O Unit (excluding Slave Racks), the status of A42504 (0 or 1) indicates whether the Unit is low or high.                                                 | SR 25103<br>Whether the Unit is low or high is indicated in AR 03 to AR 06.                                             |
|                                                | A42508 to A42515 | When there is an error in a Slave Rack, this byte contains the 2-digit hexadecimal unit number of the Master to which the Slave is connected.<br>(B0 Hex: Master Unit 0; B1 Hex: Master Unit 1) | AR 0015: Error in unit number #0<br>AR 0014: Error in unit number #1                                                    |
|                                                |                  | When there is an error in an Optical I/O Unit, this byte contains the 2-digit hexadecimal unit number.<br>(00 to 1F hexadecimal, or 0 to 31 decimal)                                            | AR 03 to AR 06: These flags turn ON when there is an error in the Unit with corresponding unit number and status (L/H). |
| SYSMAC BUS Slave Number Refresh Bit            | A50900           | Turn this bit ON to refresh the error information in A425 (unit number of Slave where error occurred after startup).                                                                            | SR 25100                                                                                                                |

## Allocations in the CIO Area

No CIO Area words are used.

## Allocations in the DM Area

No DM Area words are used.

## Hardware Setup

- 1, 2, 3...
  1. Mount a Remote I/O Master Unit to a CS1 CPU Rack, a C200H I/O Expansion Rack, or a CS1 Expansion Rack (not a SYSMAC BUS Remote I/O Slave Rack). Up to two Masters can be mounted for a basic system. (There are no restrictions on the mounting position.)
  2. Set the unit number of the Master using the unit number switch on the front, and set the CONTINUE/STOP switch as required.
  3. Set the unit number, the Output HOLD/STOP Mode, and the type of master for each of the Slave Units.
  4. Set the unit numbers for Slaves other than Slave Units.
  5. Perform connections using 2-conductor cable.
  6. Set the terminator.
  7. Connect a Programming Device to the PC.

8. Turn ON power for all of the Slaves.
9. Turn ON power for the PC.
10. Create the I/O tables.

# Glossary

|                                |                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Backplane</b>               | A base to which Units are mounted to form a Rack. Backplanes provide a series of connectors for these Units along with wiring to connect them to the CPU Unit. Backplanes also provide connectors used to connect them to other Backplanes. In some Systems, different Backplanes are used for different Racks; in other Systems, Racks differ only by the Units mounted to them. |
| <b>basic Link System</b>       | A control system that includes only one of the following systems: Remote I/O System, PC Link System, Host Link System, or Net Link System.                                                                                                                                                                                                                                        |
| <b>branch line</b>             | A communications line leading from a Link Adapter to any but the terminators in a Link System.                                                                                                                                                                                                                                                                                    |
| <b>Branching Link Adapter</b>  | A Link Adapter used to branch connections to Units in a Link System. Used either to prevent the entire System from shutting down for an interruption at only one point in the System or to enable connecting more than two Units in one System when each Unit supports only one connector.                                                                                        |
| <b>building-block PC</b>       | A PC that is constructed from individual components, or "building blocks." With building-block PCs, there is no one Unit that is independently identifiable as a PC. The PC is rather a functional assembly of components.                                                                                                                                                        |
| <b>combined Link System</b>    | A control system that includes more than one of the following systems: Remote I/O System, PC Link System, Host Link System, or Net Link System.                                                                                                                                                                                                                                   |
| <b>Control System</b>          | All of the hardware and software components used to control other devices. A Control System includes the PC System, the PC programs, and all I/O devices that are used to control or obtain feedback from the controlled system.                                                                                                                                                  |
| <b>controlled system</b>       | The devices that are being controlled by a PC System.                                                                                                                                                                                                                                                                                                                             |
| <b>Converting Link Adapter</b> | A Link Adapter used to convert between different types of optical fiber cable, different types of wire cable, or between optical fiber cable and wire cable. Such conversion is necessary to connect Units that use different forms of communication.                                                                                                                             |
| <b>CPU Unit</b>                | An acronym for central processing unit. In a PC System, the CPU Unit executes the program, processes I/O signals, communicates with external devices, etc.                                                                                                                                                                                                                        |
| <b>CPU Backplane</b>           | A Backplane used to create a CPU Rack.                                                                                                                                                                                                                                                                                                                                            |
| <b>CPU Rack</b>                | Part of a building-block PC, the CPU Rack contains the CPU Unit, a Power Supply, and other Units. With most PCs, the CPU Rack is the only Rack that provides linkable slots.                                                                                                                                                                                                      |
| <b>data area</b>               | An area in the PC's memory that is designed to hold a specific type of data, e.g., the LR area is designed for to hold common data in a PC Link System.                                                                                                                                                                                                                           |
| <b>distributed control</b>     | A automation concept in which control of each portion of an automated system is located near the devices actually being control, i.e., control is decentralized and 'distributed' over the system. Distributed control is a concept basic to PC Systems.                                                                                                                          |

|                                |                                                                                                                                                                                                                                                                         |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>electrical noise</b>        | Electrical 'static' that can disturb electronic communications. The 'snow' that can appear on a TV screen is an example of the effects of electrical noise.                                                                                                             |
| <b>Expansion I/O Backplane</b> | A Backplane used to create an Expansion I/O Rack.                                                                                                                                                                                                                       |
| <b>Expansion I/O Rack</b>      | Part of a building-block PC, an Expansion I/O Rack is connected to either a CPU Rack or Slave Rack to increase the number of slots available for mounting Units.                                                                                                        |
| <b>I/O Block</b>               | Either an Input Block or an Output Block. It provides mounting positions for replaceable relays.                                                                                                                                                                        |
| <b>I/O capacity</b>            | The number of inputs and outputs that a PC is able to handle. This number ranges from around one-hundred for smaller PCs to two-thousand for the largest ones.                                                                                                          |
| <b>I/O Control Unit</b>        | A Unit mounted to the CPU Rack in certain PCs to monitor and control I/O points on Expansion I/O Units.                                                                                                                                                                 |
| <b>I/O devices</b>             | The devices to which terminals on I/O Units, Special I/O Units, or Intelligent I/O Units are connected. I/O devices may be either part of the Control System, if they function to help control other devices, or they may be part of the controlled system.             |
| <b>I/O Interface Unit</b>      | A Unit mounted to an Expansion I/O Rack in certain PCs to interface the Expansion I/O Rack to the CPU Rack.                                                                                                                                                             |
| <b>I/O Link</b>                | Created in an Optical Remote I/O System to enable input/output of one or two IR words directly between PCs. The words are input/output between the PC controlling the Master and a PC connected to the Remote I/O System through an I/O Link Unit or an I/O Link Rack.  |
| <b>I/O Link Rack</b>           | A Rack used with certain PCs (e.g., C120) to mount an I/O Link Unit.                                                                                                                                                                                                    |
| <b>I/O Link Unit</b>           | A Unit used with certain PCs to create an I/O Link in an Optical Remote I/O System.                                                                                                                                                                                     |
| <b>I/O point</b>               | The place at which an input signal enters the PC System or an output signal leaves the PC System. In physical terms, an I/O point corresponds to terminals or connector pins on a Unit; in terms of programming, an I/O point corresponds to an I/O bit in the IR area. |
| <b>I/O Unit</b>                | The most basic type of Unit mounted to a backplane to create a Rack. I/O Units include Input Units and Output Units, each of which is available in a range of specifications. I/O Units do not include Special I/O Units, Link Units, etc.                              |
| <b>Input Block</b>             | A Unit used in combination with a Modular Remote Terminal. An Input Block provides mounting positions for replaceable relays. Each relay can be selected according to specific input requirements.                                                                      |
| <b>Input Remote Terminal</b>   | A Remote Terminal that provides input points.                                                                                                                                                                                                                           |
| <b>Link Adapter</b>            | A Unit used to connect communications lines, either to branch the lines or to convert between different types of cable. There are two types of Link Adapter: Branching Link Adapters and Converting Link Adapters.                                                      |



|                               |                                                                                                                                                                                                                                                                                                                           |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>link</b>                   | A hardware or software connection formed between two Units. "Link" can refer either to a part of the physical connection between two Units (e.g., optical links in Wired Remote I/O Systems) or a software connection created to data existing at another location (Network Data Links).                                  |
| <b>linkable slot</b>          | A slot on either a CPU or Expansion I/O Backplane to which a Link Unit can be mounted. Backplanes differ in the slots to which Link Units can be mounted.                                                                                                                                                                 |
| <b>Link System</b>            | A system that includes one or more of the following systems: Remote I/O System, PC Link System, Host Link System, or Net Link System.                                                                                                                                                                                     |
| <b>Link Unit</b>              | Any of the Units used to connect a PC to a Link System. These are Remote I/O Units, I/O Link Units, PC Link Units, Host Link Units, and Net Link Units.                                                                                                                                                                   |
| <b>main line</b>              | In a Link System connected through Branching Link Adapters, the communications cable that runs from the Unit at each end of the System through the Link Adapters.                                                                                                                                                         |
| <b>Master</b>                 | Short for Remote I/O Master Unit.                                                                                                                                                                                                                                                                                         |
| <b>noise interference</b>     | Disturbances in signals caused by electrical noise.                                                                                                                                                                                                                                                                       |
| <b>Optical Slave Rack</b>     | A Slave Rack connected through an Optical Remote I/O Slave Unit.                                                                                                                                                                                                                                                          |
| <b>Optical I/O Unit</b>       | A Unit that is connected in an Optical Remote I/O System to provide 8 I/O points. Optical I/O Units are not mounted to a Rack.                                                                                                                                                                                            |
| <b>optical cable link</b>     | In a Wired Remote I/O System, an optical cable connecting two Converting Link Adapters. Specified because the System otherwise uses wire communications.                                                                                                                                                                  |
| <b>optical communications</b> | A communications method in which signals are sent over optical fiber cable to prevent noise interference and increase transmission distance.                                                                                                                                                                              |
| <b>optical fiber cable</b>    | Cable made from light conducting filaments used to transmit signals.                                                                                                                                                                                                                                                      |
| <b>Output Block</b>           | A Unit used in combination with a Modular Remote Terminal. An Output Block provides mounting positions for replaceable relays. Each relay can be selected according to specific output requirements.                                                                                                                      |
| <b>Output Remote Terminal</b> | A Remote Terminal that provides output points.                                                                                                                                                                                                                                                                            |
| <b>PC</b>                     | An acronym for Programmable Controller.                                                                                                                                                                                                                                                                                   |
| <b>PC System</b>              | With building-block PCs, all of the Racks and independent Units connected directly to them up to, but not including the I/O devices. The limits of the PC System on the upper end is the PC and the program in its CPU Unit and on the lower end, I/O Units, Special I/O Units, Optical I/O Units, Remote Terminals, etc. |
| <b>peripheral device</b>      | Devices connected to a PC System to aid in system operation. Peripheral devices include printers, programming devices, external storage media, etc.                                                                                                                                                                       |
| <b>printed circuit board</b>  | A board onto which electrical circuits are printed for mounting into a computer or electrical device.                                                                                                                                                                                                                     |

|                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Programmable Controller</b> | A computerized device that can accept inputs from external devices and generate outputs to external devices according to a program held in memory. Programmable Controllers are used to automate control of external devices. Although single-unit Programmable Controllers are available, building-block Programmable Controllers are constructed from separate components. Such Programmable Controllers are formed only when enough of these separate components are assembled to form a functional assembly, i.e., there is no one individual Unit called a PC. |
| <b>programming device</b>      | A peripheral device used to input a program into a PC or to alter or monitor a program already held in the PC. There are dedicated programming devices, such as Programming Consoles, and there are non-dedicated devices, such as a host computer.                                                                                                                                                                                                                                                                                                                 |
| <b>Rack</b>                    | An assembly of various Units on a Backplane that forms a functional unit in a building-block PC System. Racks include CPU Racks, Expansion I/O Racks, I/O Racks, and Slave Racks.                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>relay-based control</b>     | The forerunner of PCs. In relay-based control, groups of relays are wired to each other to form control circuits. In a PC, these are replaced by programmable circuits.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Remote I/O Master Unit</b>  | The Unit in a Remote I/O System through which signals are sent to all other Remote I/O Units. The Remote I/O Master Unit is mounted either to a CPU Rack or an Expansion I/O Rack connected to the CPU Rack. Remote I/O Master Unit is generally abbreviated to simply "Master."                                                                                                                                                                                                                                                                                    |
| <b>Remote I/O Slave Unit</b>   | A Unit mounted to a Backplane to form a Slave Rack. Remote I/O Slave Unit is generally abbreviated to simply "Slave."                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Remote I/O Subsystem</b>    | A Master and all of the Remote I/O Units connected in series to it. A Remote I/O Subsystem exists when more than one Master is mounted to a PC. If Subsystems exist, the System is considered a Multilevel Remote I/O System.                                                                                                                                                                                                                                                                                                                                       |
| <b>Remote I/O System</b>       | A system in which remote I/O points are controlled through a Master mounted to a CPU Rack or an Expansion I/O Rack connected to the CPU Rack.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Remote I/O Unit</b>         | Any of the Units in a Remote I/O System. Remote I/O Units include Masters, Slaves, Optical I/O Units, I/O Link Units, and Remote Terminals.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Remote Terminal</b>         | A Remote I/O Unit connected in a Wired Remote I/O System to provide up to sixteen I/O points at one location. There are two types of Remote Terminals: G72C Remote Terminals which feature fixed transistor inputs and outputs and Remote Terminals constructed by combining a Remote Interface and I/O Block. I/O Blocks feature replaceable relays that can be individually changed to meet specific I/O requirements.                                                                                                                                            |
| <b>series</b>                  | A wiring method in which Units are wired consecutively in a string. In Link Systems wired through Link Adapters, the Units are still functionally wired in series, even though Units are placed on branch lines.                                                                                                                                                                                                                                                                                                                                                    |
| <b>Slave</b>                   | Short for Remote I/O Slave Unit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Slave Rack</b>              | A Rack containing a Remote I/O Slave Unit and controlled through a Remote I/O Master Unit. Slave Racks are generally located away from the CPU Rack.                                                                                                                                                                                                                                                                                                                                                                                                                |

|                              |                                                                                                                                                                                                                                                                                                                        |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>slot</b>                  | A position on a Rack (Backplane) to which a Unit can be mounted.                                                                                                                                                                                                                                                       |
| <b>Special I/O Unit</b>      | A dedicated Unit that is designed for a specific purpose. Special I/O Units include Position Control Units, High-Speed Counter Units, Analog I/O Units, etc.                                                                                                                                                           |
| <b>switching capacity</b>    | The voltage/current that a relay can switch on and off.                                                                                                                                                                                                                                                                |
| <b>system configuration</b>  | The arrangement in which Units in a System are connected.                                                                                                                                                                                                                                                              |
| <b>transmission distance</b> | The distance that a signal can be transmitted.                                                                                                                                                                                                                                                                         |
| <b>Unit</b>                  | In OMRON PC terminology, the word Unit is capitalized to indicate any product sold for a PC System. Though most of the names of these products end with the word Unit, not all do, e.g., a Remote Terminal is referred to in a collective sense as a Unit. Context generally makes any limitations of this word clear. |
| <b>unit number</b>           | A number assigned to some Link Units and Special I/O Units to assign words and sometimes other operating parameters to it.                                                                                                                                                                                             |
| <b>wire communications</b>   | A communications method in which signals are sent over wire cable. Although noise resistance and transmission distance can sometimes be a problem with wire communications, they are still the cheapest and the most common, and perfectly adequate for many applications.                                             |
| <b>Wired Slave Rack</b>      | A Slave Rack connected through a Wired Remote I/O Slave Unit.                                                                                                                                                                                                                                                          |
| <b>work word</b>             | A word that can be used for data calculation or other manipulation in programming, e.g., LR words not used in a PC Link or Net Link System.                                                                                                                                                                            |

# Index

## A–B

- applications, precautions, xiii
- applying power, sequence of, 40
- Backplanes, mounting C200H Masters and Slaves to, 63
- block diagram
  - C200H Master, 23
  - C200H Slaves, 23
  - C500 Master, 22
  - I/O Terminal, 25
  - Link Adapter, 25
  - Remote Terminal, 24

## C

- C1000H Systems
  - configuration of, 13
  - locating errors in, 87
  - programming example for, 42
  - unit numbers in, 26
  - word allocation example for, 33
  - word multipliers in, 26
- C120 Systems
  - configuration of, 11
  - locating errors in, 85
  - monitoring error codes in, 81
  - unit numbers in, 26
- C2000H Systems
  - configuration of, 13
  - locating errors in, 87
  - unit numbers in, 26
  - word allocation example for, 33
  - word multipliers in, 26
- C200H Master
  - CONTINUE/STOP modes, 92
  - dimensions, 57
  - Error flags and Restart bits, 83
  - mounting location, 14
  - recovery in STOP mode, 95
- C200H Slaves
  - available models of, 51
  - connection of to C500 Master, 16, 38
  - connectors on, 65
  - indicators on, 52
  - Master designation on, 34
  - switch settings for
    - HOLD/STOP mode, 53
    - type of Master, 53
    - unit number, 52
  - terminals on, 65, 66
  - wiring of, 65, 66
- C200H Systems
  - configuration of, 14
  - Error and Restart flags for, 83
  - locating errors in, 89
  - monitoring error codes in, 82
  - programming example for, 43
  - Rack dimensions for, 58
  - Racks for, 57
  - unit numbers in, 34
  - word allocation examples for, 36, 37
  - word allocation in, 34
- C500 Master
  - CONTINUE/STOP modes, 47, 92
  - CPU Unit errors, indication of, 46
  - diagram, 46
  - dimensions, 56
  - I/O bus connector, 46
  - indicators, 46
  - recovery in STOP mode, 95
  - switches and selectors, 46, 47
  - terminators, indication for detection of, 46
  - test switch
    - LED indications for, 46
    - location of, 46
  - transmission errors
    - clearing of, 47
    - indication of, 46
  - transmission line test, 46
- C500 Slave
  - indication of transmissions, 48
  - connecting to C200H Master, 17
  - connection of to C200H Master, 37
  - connector, 48
  - diagram, 48
  - dimensions, 56
  - I/O bus errors, indication of, 48
  - indicators, 48
  - pin settings, 49
  - switch cover, 48
  - transmission errors, communications during, 47
  - transmission errors, indication of, 48
  - transmission terminals, 48
  - unit numbers, pin settings for, 50
- C500 Systems
  - configuration of, 12
  - locating errors in, 85
  - monitoring error codes in, 81
  - programming example for, 43
  - unit numbers in, 26
  - word allocation examples for, 30
- cable, 2-conductor
  - in transmission lines, 64
  - maximum length of, 64

combined systems  
  configuration of, 16  
  word allocation examples for, 39  
  word allocation in, 37, 38  
CPU Unit errors, indication of, 53

## **D–E**

diagnostic functions  
  Masters, 103  
  Remote Terminals, 104  
  Slaves, 103  
End Plates, 62  
Error Check flag, 81  
error codes  
  monitoring in C120 systems, 81  
  monitoring in C200H Systems, 82  
error information, C200H Systems, 83  
error processing  
  C200H Systems, 79  
  C500 Masters and Slaves, 77  
errors  
  caused by high unit number setting, 9  
  indicating by external alarm, 76  
  locating in C1000H, and C2000H Systems, 87  
  locating in C120 Systems, 85  
  locating in C200H Systems, 89  
  monitoring via SR area, 76  
external alarms, connecting SR points for, 76

## **H–I**

HOLD/STOP mode  
  setting on C200H Slaves, 53  
  setting on C500 Slave, 50  
I/O Blocks  
  color coding, 60  
  connections, 61  
  differentiating, 60  
  dimensions of, 59  
  power supply, 67  
  wiring, 67  
I/O points  
  C1000H and C2000H PCs, 13  
  C120 PCs, 11  
  total in System, 9  
I/O table  
  creation in C200H systems, 40  
  limitations in generation of, 41  
  operation with and without, 40  
  retention in memory, 40

I/O Terminal, word setting and word allocations, 54  
I/O Terminals  
  error flags in C200H Systems, 84  
  pin settings, 54  
I/O Units  
  color coding, 60  
  mounting on Racks, 26  
Input Block  
  connector pin diagram, 61  
  diagram, 61  
  dimensions, 59  
  internal connections, 61  
  terminal numbers, 61  
installation, precautions, xiii  
interface  
  specifications, 103  
  transmission line, 64  
internal circuits, C500 Slave, 22

## **L**

ladder diagram programming example, 41  
Link Adapter, Wired Remote I/O System, 5  
Link Adapters, 17

## **M–N**

Master Subsystem, definition of, 7  
MONITOR mode, beginning operation in, 40  
Multilevel Remote I/O System, 19  
noise interference  
  preventing with optical links, 17  
  reduction by Remote I/O System, 2

## **O**

operating environment, precautions, xiii  
optical cable  
  handling, 18  
  Wired Remote I/O System, 4  
optical fiber cable, Wired Remote I/O System, 5  
optical links  
  in Wired Remote I/O Systems, 17  
  maximum cable length for, 17  
Optical Masters in Remote I/O Systems, 9  
optical products, 102  
Output Block  
  connector pin diagram, 62  
  diagram, 61

- dimensions, 59
- internal connections, 62
- terminal numbers, 62
- output relay specifications
  - Remote Terminals, 104
  - Slaves, 103
- output words, status of after transmission errors, 50, 54

## P

- power consumption by Remote Terminals, 104
- power supply, 67
- precautions, xi
  - applications, xiii
  - general, xii
  - operating environment, xiii
  - safety, xii
- PROGRAM mode
  - when setting word multipliers, 28
  - with transmission line test, 47
- programming
  - example for delayed Slave activation, 41
  - simplification by Remote I/O System, 2
- Programming Console
  - in setting word multipliers, 28
  - when generating I/O table, 40
  - when reading out errors, 76

## R

- recovery in STOP mode, 95
- Remote I/O Units, maximum connectable, 9
- Remote I/O Error flag, 81, 82, 83
- remote I/O errors
  - resulting from duplicate word allocation, 39
  - transmission time for, 71, 72
- Remote I/O Subsystem, 18
- Remote I/O System
  - connecting units in, 8
  - limitations of, 7
  - Multilevel System, 18
  - overview, 2–4
  - system configuration example, 19
- Remote I/O Units
  - dimensions of, 56
  - mounting, 8
- Remote Terminal
  - common points, 62
  - components, 53
  - diagram, 53
  - dimensions, 58

- error flags in C200H Systems, 84
- mounting, 8
- word setting and word allocations, 54
- Remote Terminal and I/O Block pairs, 8
- Remote Terminals
  - pin settings, 54
  - power supply, 67
- repeater terminals, 62
- response time, 70–73
  - in C1000H and C2000H Remote I/O Systems, 71
  - in C200H Remote I/O Systems, 72
  - in C500 Remote I/O Systems, 70

## S

- safety precautions. *See* precautions
- self-diagnosis, 76
- setting procedure, 39
- short bars, 62
- STOP mode, recovery in, 95
- stopping PC operation
  - C1000H and C2000H Systems, 88
  - C120 Systems, 85
  - C200H Systems, 90
- synchronization, 103
- system configuration
  - basic, 8
  - C1000H and C2000H, 13
  - C120, 11
  - limitations, 8
- system operation, delayed activation of, 41

## T

- terminators, 26
  - check for, 40
  - setting on C500 Slave, 50
  - setting on I/O Terminal, 53, 54
  - setting on Remote Terminal, 53, 54
  - setting on Remote Terminals, 26
  - use of in locating transmission error, 91
- transmission distance, 103
  - extending via optical links, 17
- transmission errors
  - definition of, 47
  - locating, 91
  - system response to, 47, 50, 54
- transmission line interface, 64
- transmission speed, 103
- transmissions, indication of, 53

## **U**

### unit numbers

- CPU Unit use of in determining number of Slaves, 9
- setting on C200H Master, 51
- setting on Slaves, 26
- setting sequence, 9
- use of in word allocation, 21

## **W**

### Wired Remote I/O System, 4–5

- optical cable links, 4
- Remote I/O Units, 4

### wiring

- C200H Slaves, 65

- I/O Blocks, 64
- transmission lines, 64

### word multipliers

- for word allocation, 21
- in relation to allocated words, 26

### words

- allocation examples for, 30
- allocation of, 21, 26
- allocation of in C200H Systems, 34
- and word multipliers in C1000H and C2000H Systems, 26
- duplication in allocation of, 28, 33
- in data transmission, 21
- maximum per Master, 9
- relation between setting and allocation of, 27
- setting on I/O Terminals, 26
- setting on Remote Terminals, 26

## Revision History

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

Cat. No. W120-E1-08

↑  
Revision code

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

| Revision code | Date           | Revised content                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2             | November 1989  | Complete reorganization and rewrite.<br>C200H Slave Backplanes added.<br>I/O Terminals added.<br>Minor additions to pages 70, 93, and 95.                                                                                                                                                                                                                                                                                                                                                                                            |
| 4             | September 1990 | Definition of Remote Terminals changed.<br>Minor additions to pages 70, 93, and 95.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 4A            | January 1995   | <b>Pages 68, 69:</b> Minimum and maximum response times computations corrected.<br><b>Pages 16, 37:</b> Caution added.                                                                                                                                                                                                                                                                                                                                                                                                               |
| 5             | July 1997      | <b>Page 8:</b> CPU Rack models added to the diagram.<br><b>Page 9:</b> PC models added to the table in <i>Maximum Number of Connectable Remote I/O Units</i> . Note rewritten.<br><b>Page 23:</b> CPU Unit models added to the diagram.<br><b>Page 52:</b> Changes to <i>Terminator Selector</i> and <i>DIP Switch</i> .<br><b>Pages 57, 58:</b> Changes and additions made to the C200H Rack information.<br><b>Page 63:</b> C500 Slave location corrected in the bottom diagram.<br><b>Pages 65, 66:</b> Wiring precautions added. |
| 6             | June 1999      | <i>Precautions</i> section added before Section 1.<br><b>Pages 16, 39:</b> Additional information related to CVM1/CV500/CV1000/CV2000 added to <i>Caution</i> .<br><b>Page 60:</b> <i>Power Supply Wiring Precautions</i> added to <i>5-1-5 Link Adapters</i> .<br><b>Page 65:</b> Terminal dimensions added.<br><b>Pages 77, 79:</b> Error messages corrected.                                                                                                                                                                      |
| 7             | May 2000       | Changes were made on the following pages.<br><b>Page 14:</b> Note added to "Mounting Locations."<br><b>Pages 46, 51, 77, 79:</b> References added.<br><b>Pages 65, 66:</b> Minor changes to graphics.<br><b>Page 84:</b> Minor change to top paragraph.<br><b>Page 95:</b> Subsection on duplicated terminator settings added.<br><i>Appendix C</i> added.                                                                                                                                                                           |
| 08            | April 2003     | <b>Page xv:</b> Information on EC Directives added to the PLP section.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |



**OMRON CORPORATION**

FA Systems Division H.Q.  
66 Matsumoto  
Mishima-city, Shizuoka 411-8511  
Japan  
Tel: (81)55-977-9181/Fax: (81)55-977-9045

**Regional Headquarters**

**OMRON EUROPE B.V.**

Wegalaan 67-69, NL-2132 JD Hoofddorp  
The Netherlands  
Tel: (31)2356-81-300/Fax: (31)2356-81-388

**OMRON ELECTRONICS LLC**

1 East Commerce Drive, Schaumburg, IL 60173  
U.S.A.  
Tel: (1)847-843-7900/Fax: (1)847-843-8568

**OMRON ASIA PACIFIC PTE. LTD.**

83 Clemenceau Avenue,  
#11-01, UE Square,  
Singapore 239920  
Tel: (65)6835-3011/Fax: (65)6835-2711



**Authorized Distributor:**

Cat. No. W120-E1-08

SYSMAC C-series Rack PCs Wired Remote I/O

SYSTEM MANUAL

OMRON